



DLZ | CREATOR

ADAPTIVE DIGITAL MIXER FOR PODCASTING AND STREAMING,
FEATURING MIX AGENT™ TECHNOLOGY

OWNER'S MANUAL



Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
8. Minimum distance (5 cm) around the apparatus for sufficient ventilation.
The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. No naked flame sources, such as lighted candles, should be placed on the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing, and no object filled with liquids, such as vases or beer glasses, shall be placed on the apparatus.
16. Operating Temperature: 0°–40° C // 32–104° F
17. RF Power: ≤20dBm (EIRP)
Bluetooth: V5.0
Bluetooth frequency range: 2400MHz-2483.5MHz
18. **NOTE:** This device complies with Part 15 of the FCC Rules [and contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s)]. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation of the device.
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) *L'appareil ne doit pas produire de brouillage, et*
(2) *L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

WARNING — To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

19. This apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.
Canada ICES-003(B)/NMB-003(B)

ATTENTION — *Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de class B prescrites dans le règlement sur le brouillage radioélectrique édicté par les ministere des communications du Canada.*

20. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this device not expressly approved by LOUD Audio, LLC. could void the user's authority to operate the equipment under FCC rules.

21. This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.
22. Exposure to extremely high noise levels may cause permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a period of time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible noise level exposures shown in the following chart.

According to OSHA, any exposure in excess of these permissible limits could result in some hearing loss. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels use hearing protectors while the equipment is in operation. Ear plugs or protectors in the ear canals or over the ears must be worn when operating the equipment in order to prevent permanent hearing loss if exposure is in excess of the limits set forth here:

Duration, per day in hours	Sound Level dBA, Slow Response	Typical Example
8	90	Duo in small club
6	92	
4	95	Subway Train
3	97	
2	100	Very loud classical music
1.5	102	
1	105	Chaz screaming at Troy about deadlines
0.5	110	
0.25 or less	115	Loudest parts at a rock concert



Correct disposal of this product: This symbol indicates that this product should not be disposed of with your household waste, according to the WEEE directive (2012/19/EU) and your national law. This product should be handed over to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, or your household waste disposal service.

Table of Contents

Important Safety Instructions	2
Table of Contents	3
Chapter 1 : Welcome	8
Introduction	8
About This Guide	8
Chapter 2 : DLZ Creator Rear Panel Features	9
Introduction	9
Power Connector	9
Power Switch	10
XLR and 1/4" Combo Inputs	10
1/4" Line Input Jacks (5/6)	11
1/4" LR Main Output Jacks	11
1/4" Headphone Output Jacks	11
1/8" Stereo Line Input Jack (7/8)	11
USB-C Computer Jack	12
Ethernet Jack [NYI]	12
USB-A Jack	12
SD Recording and Playback	13
Chapter 3 : DLZ Creator Top Panel Features	15
Introduction	16
Input Channels	16
Solo Button	16
Mute Button	16
Channel Faders and Input Meters	17
Sampler Channel	17
Solo Button	17
Sampler Channel Fader	17
Six Sample Pads	17
Main Output Channel	18
Mute Button	18
Main Output Fader and Meters	18
Home • Rec • AutoMix	18
Home Button	18
Rec Button	18
AutoMix Button	19
Quick Control Knobs	20
DLZ Creator Display	21

Chapter 4 : Getting Started 22

Introduction.....	22
Tapping and Dragging	22
Welcome Screen	22
Control Modes.....	23

Chapter 5 : Overview Tab 26

Introduction.....	26
Headphone Mix Mode.....	27

Chapter 6 : Channel Tab 29

Introduction.....	29
Channel ID Button [Easy • Enhanced • Pro]	29
Presets [Easy • Enhanced • Pro]	29
Channel Icon / Color [Easy • Enhanced • Pro]	29
Channel Name [Easy • Enhanced • Pro].....	30
Bypass All Processing [Easy • Enhanced • Pro]	30
Microphone / Channel Setup... [Easy]	30
Channel Setup [Enhanced]	31
Channel Setup > Advanced Controls [Enhanced].....	33
Channel Setup [Pro].....	34
Channel Setup > EQ Introduction [Pro].....	37
Channel Setup > EQ On / Off [Pro]	37
Channel Setup > EQ Presets [Pro]	37
Channel Setup > EQ HPF On / Off and Frequency [Pro]	38
Channel Setup > EQ Gain, Frequency and Q [Bandwidth] [Pro]	38
Channel Setup > Low EQ [Pro]	38
Channel Setup > Mid EQ [Pro]	39
Channel Setup > High EQ [Pro].....	39
Channel Setup > EQ at a Glance [Pro]	40
Channel Setup > Gate Introduction [Pro]	41
Channel Setup > Gate On / Off [Pro].....	41
Channel Setup > Gate Presets [Pro].....	41
Channel Setup > Gate Display and Settings [Pro]	42
Channel Setup > Gate Meters [Pro]	42
Channel Setup > Gate at a Glance [Pro].....	43
Channel Setup > Compressor Introduction [Pro]	43
Channel Setup > Compressor On / Off [Pro]	43
Channel Setup > Compressor Presets [Pro]	43
Channel Setup > Compressor Display and Settings [Pro].....	44
Channel Setup > Compressor Meters [Pro].....	44
Channel Setup > Compressor at a Glance [Pro].....	45

Channel Setup > De-Esser Introduction [Pro]	45
Channel Setup > De-Esser On / Off [Pro]	45
Channel Setup > De-Esser Presets [Pro]	45
Channel Setup > De-Esser Display and Settings [Pro]	46
Channel Setup > De-Esser Meters [Pro]	46
Channel Setup > De-Esser at a Glance [Pro]	46

Chapter 7 : FX Tab [Enhanced and Pro]..... **47**

FX Setup > Introduction	47
FX Setup > FX Mute On / Off [Enhanced]	47
FX Setup > FX Presets [Enhanced]	47
FX Setup > FX Volume Knobs [Enhanced]	47
FX Setup > Effect On / Off [Pro]	48
FX Setup > FX Presets [Pro]	48
FX Setup > Atomizer Reverb Settings [Pro]	49
FX Setup > Atomizer Reverb at a Glance [Pro]	49
FX Setup > ChronoTronic Delay Settings [Pro]	49
FX Setup > ChronoTronic Delay at a Glance [Pro]	49

Chapter 8 : Media Tab..... **50**

Media Setup > Introduction	50
Media Setup > Arrow Pointing Upwards Icon [Previous Screen]	51
Media Setup > Index Finger Icon [Select Item]	51
Media Setup > A-Z / Hourglass Icon [Arranges Media Files]	51
Media Setup > Pencil and Eraser Icon [Edit / Rename]	51
Media Setup > Trash Can Icon [Delete]	51
Media Setup > Playback	52

Chapter 9 : Snapshots Tab..... **53**

Snapshots Setup > Introduction	53
Creating Snapshots	54
Naming Snapshots	54
Recalling Snapshots	55
Editing Snapshots	57
Deleting Snapshots	57

Chapter 10 : Samples Tab..... **58**

Samples Setup > Introduction	58
Bank Selection	58
Record Sample	59
Load Sample From Disk	60
Rename Pad	61
Color	61
Playback Mode	62
Clear Sample	62
Edit Sample	63

Chapter 11 : Settings Tab 65

Settings > Introduction and System	65
Settings > System > Factory Reset.....	65
Settings > System > System Lock.....	66
Settings > System > Brightness.....	67
Settings > Bluetooth / Disk.....	68
Settings > Bluetooth / Disk > Bluetooth	68
Settings > Bluetooth / Disk > SD Card	69
Settings > Bluetooth / Disk > USB Drive.....	71
Settings > Recording	73
Settings > Recording > Computer (USB)	73
Settings > Recording > Disk Recording	74
Settings > Recording > Disk Destination.....	74
Settings > Recording > Bypass Processing.....	74
Settings > Recording > Post-Fader.....	74
Settings > Recording > Auto-Ducking.....	74
Settings > Recording > One-Tap Record	75
Settings > About	75

Chapter 12 : Presets..... 76

Presets > Introduction.....	76
Factory Presets vs User Presets.....	76
Load Preset.....	77
Save Preset.....	77
Rename Preset.....	77
Delete Preset	77
Channel Presets vs DSP Presets	78

Chapter 13 : Recording 80

Recording > Introduction	80
Connections	80
Formatting.....	80
Recording	81

Chapter 14 : Routing Simplified..... 84

Routing Simplified > Introduction.....	84
Routing Simplified > Source Selection	84
Routing Simplified > USB Routing	85
Routing Simplified > Examples.....	85
Routing Simplified > Windows Setup	85
Routing Simplified > Mac Setup.....	84

Hookup Diagrams	87
Hookup Diagrams > Podcast	87
Hookup Diagrams > Streaming Broadcast	88
Appendix A : Service Information.....	89
Appendix B : Technical Information	91
Specifications.....	91
DLZ Creator Dimensions	93
Warranty Statement	94
Open Source Code	94
Fin	95

Chapter 1 : Welcome

Introduction

Hello everyone! This is the DLZ Creator Owner's Manual... we hope you like it!

This document contains detailed information about the hardware and firmware.

The hardware should remain relatively unchanged throughout the life of your product. The firmware, though, is another story. Additional features are always being added, tweaked, updated and more... even right now this very minute! This means updates to this Owner's Manual, firmware and more.

With frequent changes, some screenshots may look slightly different than what you see within these pages and there could be some functional differences, as well.



Do not fret if a feature listed in this document is not available. It will be shortly. Our goal is to make the DLZ Creator firmware the best it can possibly be before releasing it to the public. All of these features (and more) will be available shortly, if not now. Thank you for your patience and understanding. It is much appreciated!

So there you have it. Again, we hope you like it. If you have any questions or comments about this Owner's Manual (or other Mackie documentation), please don't hesitate to contact us:

- 1-800-898-3211 (Monday through Friday, normal business hours, Pacific Time)
- www.mackie.com/support-contact

About This Guide

This guide is designed to be accessible, with subsections as complete as practical to minimize having to electronically leaf back and forth looking for the whole story. The entire guide does not need to be read to figure out how to use this console.

As the saying goes, "a picture tells a 1000 words". With that thought in mind, we added quite a few illustrations, screenshots and other images throughout to accompany the text.



This icon marks information that is critically important or unique! For your own good, read and remember them.




There's an illustration of a microscope, so, of course, you're going to get more detailed information when you see this little guy. There are explanations of features and practical tips listed here.



It's a good idea to pay attention to text displayed next to a note icon, as this icon draws attention to certain features and functions relating to the usage of DLZ Creator.

Chapter 2 : DLZ Creator Rear Panel Features

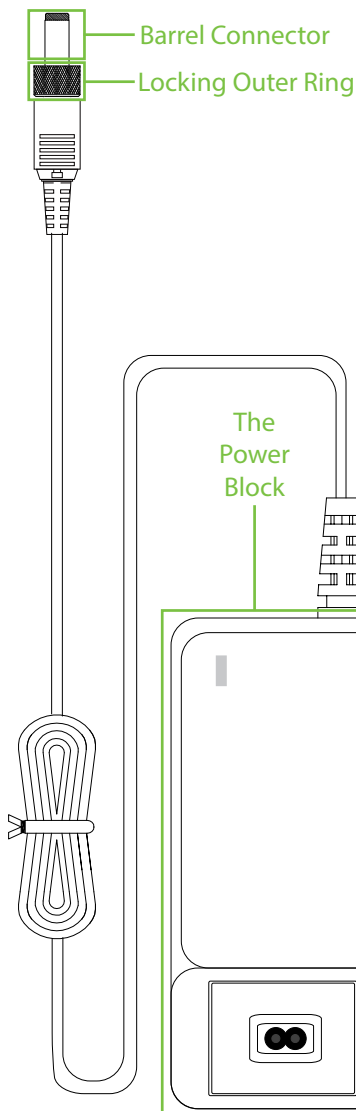

Introduction

From left to right, the rear panel of each DLZ Creator is outfitted with a power connector and power switch, a microSD card slot, a multi-purpose USB-A jack, a network connector, a USB-C port for connecting to a computer, an 1/8" stereo input jack, four 1/4" headphone jacks, 1/4" L/R output jacks, 1/4" L/R stereo input jacks and last but not least... four combo input jacks. Let's take a look at each of these features, starting on the left with the power connector and power switch, followed by a look at the inputs, outputs and the rest.

Power Connector

The DLZ Creator has a universal external power supply that accepts any AC voltage ranging from 100 VAC to 240 VAC. No need for voltage select switches. It will work virtually anywhere in the world. That's why we call it a "Planet Earth" power supply! It is less susceptible to voltage sags or spikes compared to conventional power supplies, and provides greater electromagnetic isolation and better protection against AC line noise.

An external 18V DC power supply [aka The Power Block] and a line cord are included with the DLZ Creator. A locking barrel connector resides at the end of the cord attached to The Power Block. Attach it to the power connector on the DLZ Creator and rotate the outer ring clockwise to lock. Do not over-tighten! Screw until there is resistance, then stop. Connect the female end of the line cord to The Power Block and plug the male end into a live grounded outlet. An LED on The Power Block will illuminate blue to indicate success (whether the DLZ Creator is powered on or not).



Warning: Disconnecting the plug's ground pin is dangerous. Don't do it!

In fact, it's a bad idea to remove anything from (or add anything to) The Power Block or line cord. Again, don't do it!

Power Switch

Located just above the power connector is the power switch. Press the top of this rocker switch in to turn the DLZ Creator on and press the bottom of this switch in to turn it off.




As a general guide, the DLZ Creator should be turned on first, followed by external power amplifiers or powered speakers. As such, the DLZ Creator should also be turned off last. This will reduce the possibility of any turn-on or turn-off thumps in the PA.

XLR and 1/4" Combo Inputs



The first four input channels may accept a balanced mic or line-level signal using an XLR connector. They are wired as follows, according to standards specified by the AES (Audio Engineering Society).

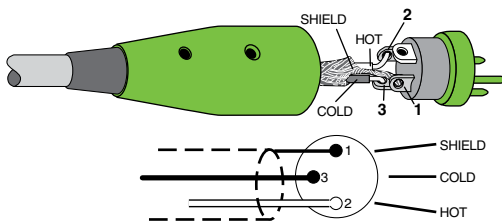


XLR Balanced Wiring:

- Pin 1 = Shield (ground)
- Pin 2 = Positive (+ or hot)
- Pin 3 = Negative (- or cold)

In addition to accepting balanced mic or line-level signals using an XLR connector, these inputs may also accept 1/4" line-level signals driven by balanced or unbalanced sources.


To connect balanced lines to these inputs, use a 1/4" Tip-Ring-Sleeve (TRS) plug. "TRS" stands for Tip-Ring-Sleeve, the three connection points available on a stereo 1/4" or balanced phone jack or plug. TRS jacks and plugs are used for balanced signals and stereo headphones and are wired as follows:

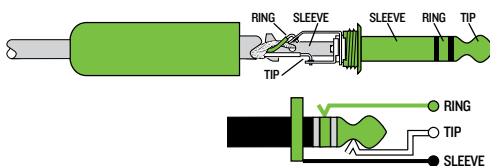

1/4" TRS Balanced Mono Wiring:

- Sleeve = Shield
- Tip = Hot (+)
- Ring = Cold (-)

To connect unbalanced lines to these inputs, use a 1/4" mono (TS) phone plug, wired as follows:

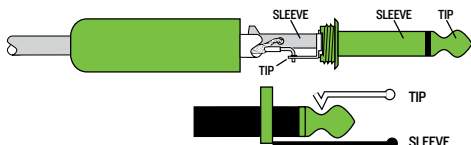

1/4" TS Unbalanced Mono Wiring:

- Sleeve = Shield
- Tip = Hot (+)

1/4" Line Input Jacks (5/6)

The stereo line inputs are designed for 1/4" jacks. They may accept (nearly) any line-level instrument, effects device, CD player, etc. If you are connecting a mono source, use the left (mono) input, and the mono signals will appear on both sides of the main mix. Adding the right input separates to stereo. The wiring diagrams are presented on the previous page.

1/4" L/R Main Output Jacks

The main outputs provide a line-level signal that represents the end of the mixer chain, where the fully mixed stereo signal enters the real world. Connect these to the left and right inputs of your main power amplifiers or directly into powered speakers.


The main outputs accept 1/4" connectors driven by balanced or unbalanced sources. Wiring diagrams for both connectors are presented on the previous page.



1/4" Headphone Output Jacks

These 1/4" TRS connectors supply the output to stereo headphones. The volume is controlled via the quick control knobs.

The phones output follows standard conventions:

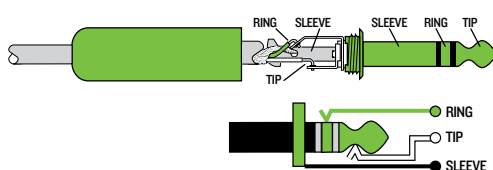

Tip = Left channel
 Ring = Right channel
 Sleeve = Ground

1/8" Stereo Line Input Jack (7/8)

This 1/8" stereo input may accept a stereo or mono line-level signal from a smartphone, tablet, MP3 player, CD player or other signal source.

It is wired as follows, according to standards specified by the AES (Audio Engineering Society):

Stereo 1/8" TRS

- Sleeve = Shield (Ground)
- Tip = Left Channel
- Ring = Right Channel



While the volume may be raised and lowered via DLZ Creator, the volume of the device also needs to be up.



This jack does NOT accept a TRRS connector that sends audio back to the phone or tablet.

USB-C Computer Jack

This is an interface that allows audio to stream to and from the DLZ Creator via computer. Connect the USB-C side of a USB cable to the DLZ Creator and the USB-A side to the computer's USB port.

USB Audio IN – This connector allows the ability to transmit **STEREO AUDIO TO** DLZ Creator channel 5/6 or 7/8 (depending on source selection) via computer or phone. This only functions when the 1/8" (3.5 mm) TRS is disconnected. DLZ Creator will send multitrack audio to the computer via the master audio bus.

USB Audio OUT – This connector allows the ability to transmit **MULTITRACK AUDIO FROM** the DLZ Creator via computer or phone.




Don't forget to change the input and output to 'DLZ Creator' via Settings on your computer.



DLZ Creator's USB connection is audio only. It is not a source of power.

Ethernet Jack [NYI]

This feature is NYI (Not Yet Implemented). A firmware update will allow for multiple features in the future. We greatly appreciate your patience!

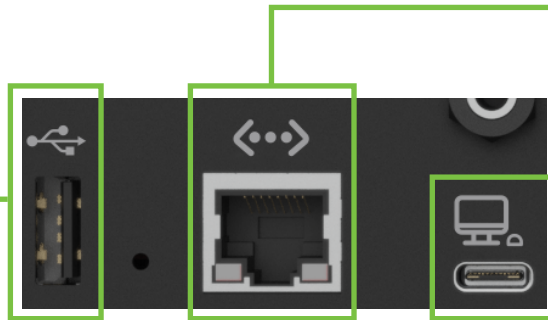

USB-A Jack

This USB-A jack serves as a multi-purpose feature, allowing for a variety of options. Connect a flash drive and record direct, for example. Maybe connect a keyboard for naming and hot keys. Have a dying phone? Charge it here!

While those last two examples are totally doable, we assume that this jack will almost exclusively be used for recording.



Please use a flash drive only! Do NOT use an SSD (Solid State Drive) or HDD (Hard Drive Disk), portable or otherwise, as these will not be recognized by DLZ Creator. There is not enough power in DLZ Creator to drive an SSD or HDD.

Formatting – We know you're an eager beaver, all psyched to start recording, but let's take care of something very important first: formatting the USB drive. First, get a USB drive; this could be a brand new one or one you've had for awhile so long as it's Class 10 or better.



The USB drive need to be Class 10 or better to ensure reliable operation. If using an older USB drive, it's a high possibility that some samples will be dropped because it is too slow. We are not in the business of suggesting what USB drive to go with, but choosing one with an instantly recognizable, quality, trustworthy name doesn't hurt.

Some examples we've heard of:

- Seagate
- SanDisk
- LaCie
- Adata
- WD (Western Digital)



Even if the USB drive has already been formatted via a different source, we highly suggest formatting via the DLZ Creator. In fact, never mind the “highly suggest.” DO IT!

Just follow the steps listed below:

This probably goes without saying, but we're going to say it, anyway. In order for the USB drive to be formatted via the DLZ Creator, the USB drive needs to be connected to the DLZ Creator's USB-A slot. You have been using USB-A slots for years now. It only fits one way. Due to Murphy's Law, you will, of course, try one way and it won't work. You will flip it around and find out that that way does not work, either. And, of course, flipping back to the original way WILL work this time. Those darned USB-A slots!

Granted, you might have a difficult time trying to format the USB drive if that first condition isn't yet met. For one, it doesn't easily fit in any other way – which you have already found out – and for another, DLZ Creator will remain with the “USB drive not present” statement as seen four pages back.

Now that the USB drive is inserted properly and DLZ Creator is fired up, it's time to format the USB drive.

Head to Settings > Bluetooth / Disk (on pages 71-73) for more information.

We're still looking at the DLZ Creator hardware and that part is software related!

SD Recording and Playback



Last – but certainly not least! – is the microSD slot, nestled in-between the power connector and USB-A jack.

Not only is the DLZ Creator a great mixer with some pretty amazing features, but here you can also record podcasts, interviews, in-studio gigs and more to a microSD card!

Formatting – We know you're an eager beaver, all psyched to start recording, but let's take care of something very important first: formatting the microSD Card. First, get a microSD Card; this could be a brand new one or one you've had for awhile so long as it's Class 10 or better.



microSD Cards need to be Class 10 or better to ensure reliable operation. If using an older microSD Card, it's a high possibility that some samples will be dropped because the card is too slow. We are not in the business of suggesting what microSD Card to go with, but choosing one with an instantly recognizable, quality, trustworthy name doesn't hurt.

Some examples we've heard of:


- SanDisk
- PNY
- Lexar
- Samsung
- Kingston



Even if the microSD Card has already been formatted via a different source, we highly suggest formatting via the DLZ Creator. In fact, never mind the “highly suggest.” DO IT!

Just follow the steps listed below:

These probably goes without saying, but we're going to say them, anyway. In order for the microSD card to be formatted via the DLZ Creator, (1) the microSD card needs to be connected to the DLZ Creator's microSD card slot with the card's electrical contacts facing down; the top of the microSD card (with the brand name, disc size, etc.) faces up towards the "SD™" logo (as seen below)...

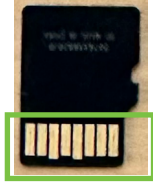

Electrical Contacts



microSD card OUT



microSD card IN

...and (2) head to Settings > Bluetooth / Disk > SD Card (on pages 69-71) for more information.

We're still looking at the DLZ Creator hardware and that part is software related! Up next is the front panel...

Before then, though, a couple of quick SD Card notes (which will also be addressed in more detail later):



Stereo playback from a microSD card may be routed into stereo input channel 9/10, processed, and then sent to the main LR.



Or instead... this slot also supports multitrack recording (12 Channels – four mono, four stereo – plus the main LR mix)!

Chapter 3 : DLZ Creator Top Panel Features



Introduction

From top to bottom and left to right, the top panel of each DLZ Creator is outfitted with a bunch of knobs, buttons, faders, screens, encoders and more. So much more, in fact, that we will call out and describe each one... but not here...

Rather, what you see below is an outline and order each section will be described. Refer to the pages listed for in-depth commentary and illustrative close-ups of each section.


NOTE As a reminder, the information detailed on the following pages is still regarding the hardware side of things. We will dig into the DSP (Digital Signal Processing) afterwards.

- 1 **Input Channels** – pages 16-17
- 2 **Sampler Channel** – page 17
- 3 **Main Output Channel** – page 18
- 4 **Home • Rec • Automix** – pages 18-20
- 5 **Quick Control Knobs** – page 20
- 6 **DLZ Creator Display** – page 21



Input Channels

DLZ Creator has a total seven input channel strips (four mono, three stereo), one stereo sampler channel strip, and one stereo master channel strip. Each input channel strip contains the following:



SOLO Button


Solo offers the opportunity to audition channel(s) [input channel strips] before they are added to the mix. Whenever a channel's solo button is engaged, only the soloed channel(s) may be heard in headphone output one. Solo buttons illuminate amber when engaged. A small, amber "S" will appear on that channel's ID. More about Channel IDs shortly.



MUTE Button

Mute buttons mute – turn off – the signal on the selected input(s) and/or output(s). Mute buttons illuminate red when engaged. A small, red "M" will appear on that channel's ID. More about Channel IDs shortly.



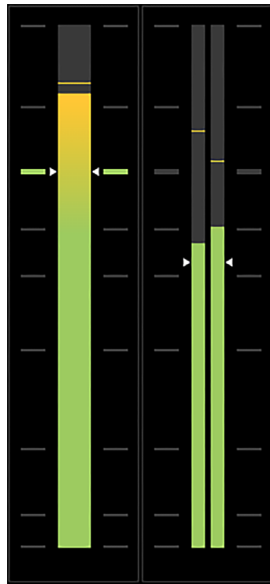

Mono

Stereo

Channel Faders and Input Meters

The channel faders adjust the level of each channel going to the selected output(s). The volume levels range from off (silent) to max (full volume).

The input meters display the relative level of each input channel. They should remain green with the occasional bump into the yellow zone. Turn down the gain if the input meter remains consistently yellow. If the input is too high [overloading], a clip indicator at the top of the meter will illuminate red. If clipping occurs, reduce the gain.

Input channels 1-4 have mono meters (one strip) versus input channels 5-10, the sampler channel (11/12) and main out L/R which are all stereo meters (two strips).

Sampler Channel



The sampler channel strip contains the following:

SOLO Button

Solo offers the opportunity to audition the sampler channel before it is added to the mix. Whenever a channel's solo button is engaged, only the soloed channel(s) may be heard in the monitor bus. Solo buttons illuminate orange when engaged.

Sampler Channel Fader

The sampler channel fader adjusts the level of the samples going to the selected output(s). The volume level ranges from off (silent) to max (full volume). It is a global control, affecting the level of all six sample pads.

Six Sample Pads

Pressing one (or more) of these six full-color, soft-touch silicone momentary buttons results in playback of the saved sample. When pressed, the sample will play. Additionally, the button will illuminate brightly for the duration of the playback. When not playing, the sample pads will still illuminate, but dimly. If no sample is assigned to a pad, it will remain unlit.

The samples, playback mode, colors and more may be changed and updated via the samples tab. More on this later.

Main Output Channel



Like the input channel strips, the master channel strip also contains a mute button and fader. However, unlike the input channel strips, the master channel strip is linked to the L/R outputs, not the inputs.

MUTE Button

Mute buttons mute – turn off – the signal on the selected input(s) and/or output(s). Mute buttons illuminate red when engaged. The master channel mute button works exactly like a channel mute, except it mutes the output. Use it as a bathroom break switch, for example. Note that it only mutes the main out L/R, by default. The mute button illuminates red when engaged.

Main Output Fader and Meters

The main fader adjusts the level of the output, while the output meter displays the output signal level, presented in stereo L/R.

The meters should remain green with the occasional bump into the yellow zone. If there is too much yellow (or any red clipping), lower the main fader until it's gone and check the input channels, as well.

Input channels 1-4 have mono meters (one strip) versus input channels 5-10, the sampler channel (11/12) and main out L/R which are all stereo meters (two strips).

Home • Rec • AutoMix



These three full-color, soft-touch silicone buttons (1) allow for immediate access to the overview tab, (2) reveals the recording banner and (3) reveals the MixAgent™ AutoMix banner. See below for more information.

HOME Button

This button's single function in life is to return you to the main overview screen when pressed. We totally get it... sometimes after a long day at the office, we could use a button like this to return home immediately, too. This momentary button will illuminate green when engaged (and held).

REC Button


Once this button is pressed, the display presents the recording setup banner. One-tap recording either (1) enables hard start/stop on-board recording (quick press-and-release) or (2) pauses the current recording (2-second hold-and-release). While paused, recording may be resumed by a quick press of the recording button. This latching button will illuminate – and pulse – red when engaged to indicate that recording has begun.

Much more information about the DLZ Creator recording process may be found in Chapter 13 (pages 80-83).

AUTOMIX Button

AutoMix allows quick access to the AutoMix banner, as seen below. Press the AutoMix button so the banner opens. The first thing you may notice are that the input meters for channels 1-4 are gone. Do not fret! The meters are still there; they are just “hidden” by the AutoMix banner.

Note that AutoMix is only visible when the ‘Overview’ tab is open. We will discuss ‘Overview’ and the other tabs in the upcoming chapters.

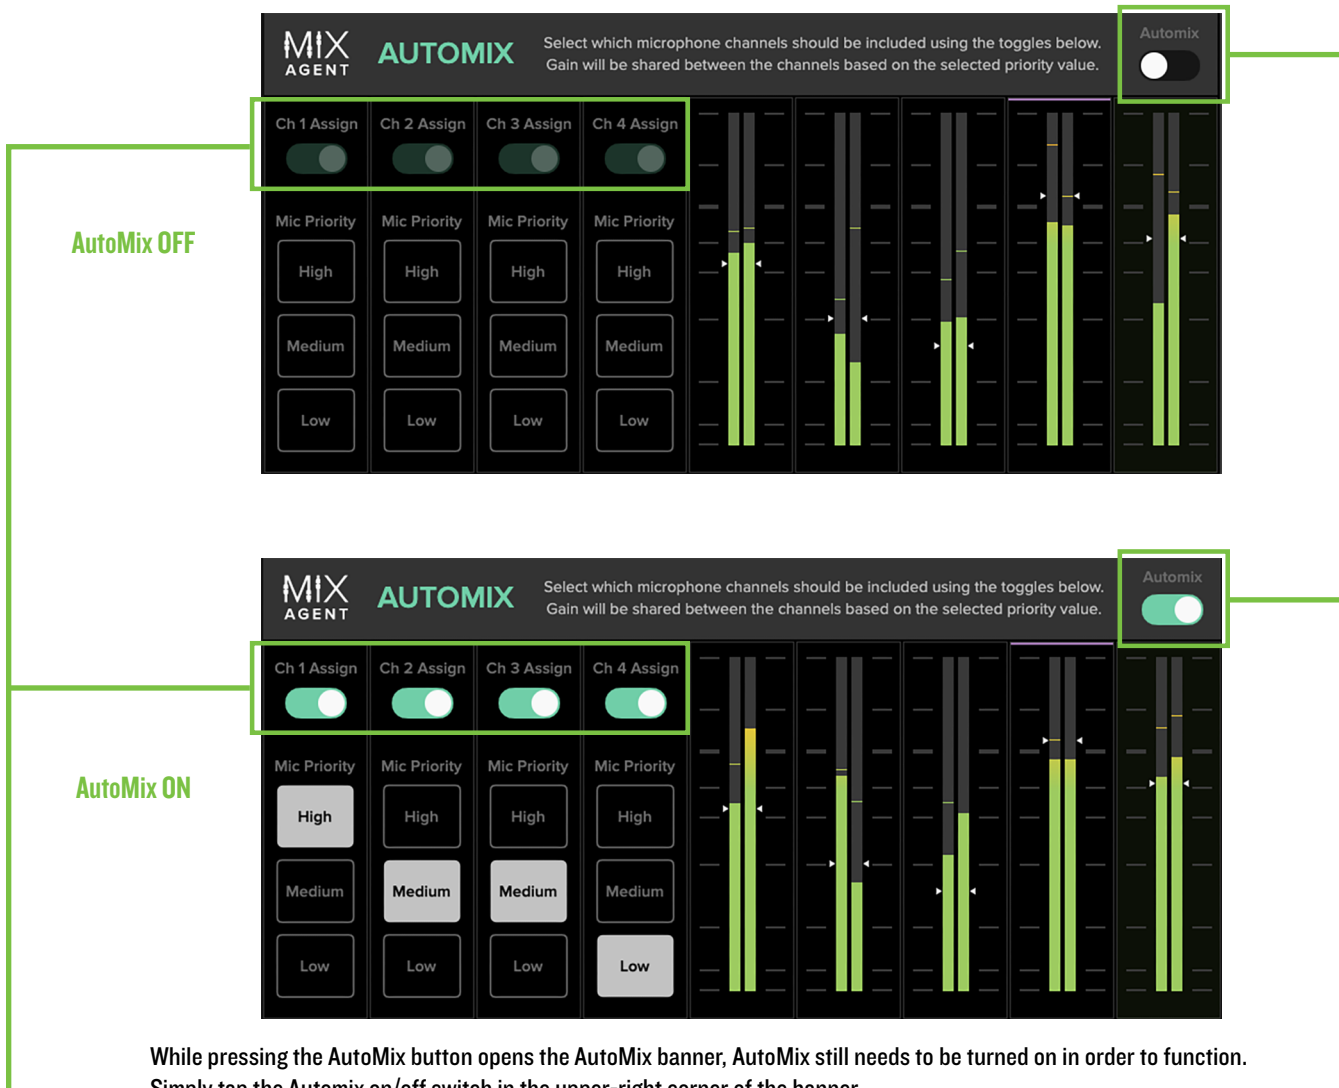

While pressing the AutoMix button opens the AutoMix banner, AutoMix still needs to be turned on in order to function. Simply tap the Automix on/off switch in the upper-right corner of the banner.

As it says at the top of the banner, “Select which microphone channels should be included using the toggles below. Gain will be shared between the channels based on the selected priority value.”

In order to accomplish that feat, tap each channel’s ‘assign’ switch that you want to assign a ‘weight’ to. Once turned on – switch to the right – assign the ‘weight’ that you would like assigned to each mic input: High, medium or low.

NOTE While all four channels have been assigned a weight in the example above, that doesn’t have to always be the case. Channels 1-2 could be on while channels 3-4 remain off, for example. In order to assign a weight, however, the assign button has to be turned on first.

Pressing the AutoMix button again results in a few things. First, the AutoMix Banner disappears and the meters magically reappear! Also, so long as the AutoMix banner toggle switch is engaged, the AutoMix button will illuminate teal when engaged to indicate that Automix is currently active. Lastly, a tiny teal "A" is added to the Main L/R Channel ID.




AutoMix Button



Main L/R Channel ID

So, when should AutoMix be used? When (and why) should mics be assigned weights? It could be anything from, say, a podcast, where the host's mic could be assigned a high weight and guests medium or low. Same thing with a broadcast. There's the play-by-play announcer and the color commentator. They would be given higher weights than special guests in the booth or on the field. Radio stations could use AutoMix for the main host and their guests, as well.

Quick Control Knobs

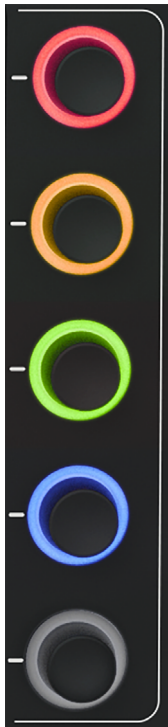

Located between the main display and the Home, Rec and AutoMix buttons are the quick control knobs.

Quick Control Knobs

These five quick control knobs control context-dependent parameters as viewed on the display to the left of them. While the knobs are not assignable or user-customizable, pre-assigned parameters may be accessed then edited via the quick control knobs.

The color of the base of each knob changes depending on what parameter is available at the time. All of this will make much more sense when we get to the software side of things!


DLZ Creator Display

The reason we're all here today... the DLZ Creator display!

The DLZ Creator display is a mammoth 10" touch screen with a resolution spanning 1024x600 pixels.

Here is where you may view, access and update parameters via the following tabs:

- **Overview [aka Home]** – The DLZ Creator Overview.
- **Channel setup** – including channel naming, icons and colors, gain, 48V, pan, send levels, dynamics, FX levels and more.
- **FX setup** – including reverb and delay settings.
- **Media** – this is where recordings are stored to USB and/or SD. It is also the place to access (and play back) these audio files that have been stored on disk.
- **Snapshots** – this is where snapshots may be recalled, saved, stored, edited or deleted.
- **Samples** – including name, pad color, playback mode – retrigger, looping, etc. – and more.
- **Settings** – including the work mode, screen and button brightness levels, factory reset, Bluetooth pairing, recording and much, much more.

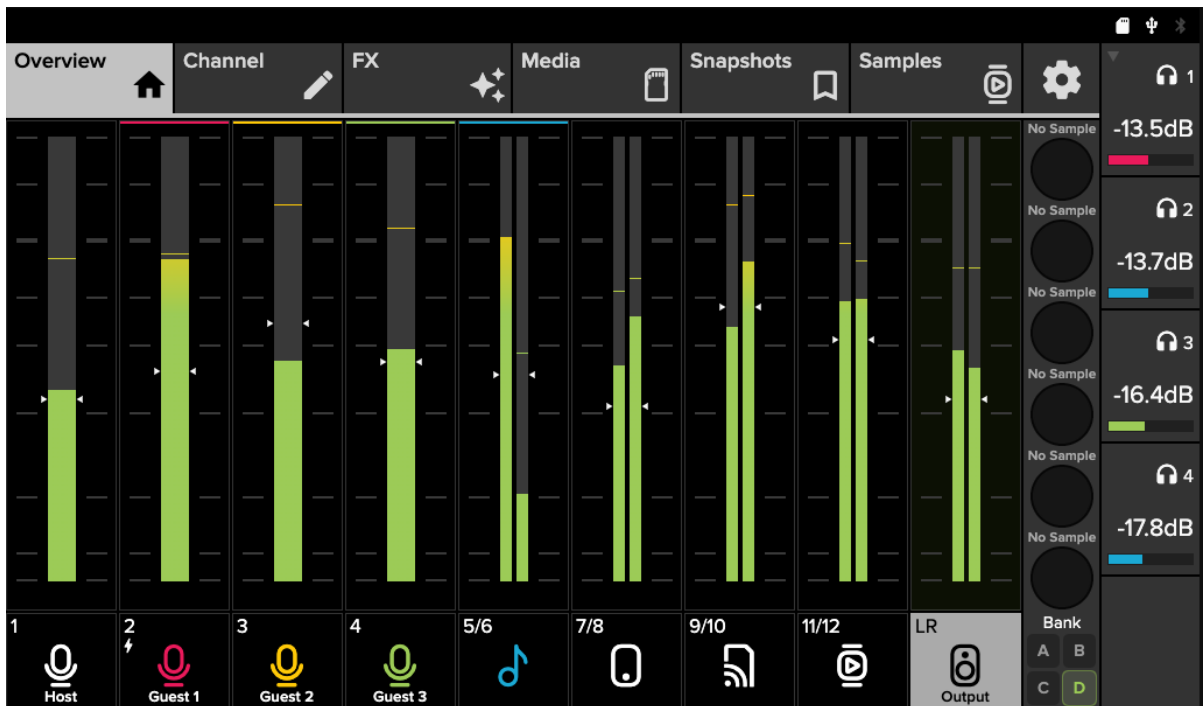

In addition to the tabs laid out horizontally along the navigation bar, several other things may be tapped, double-tapped, poked and prodded, swiped and dragged. Those will be discussed in detail when we get to them.

Chapter 4 : Getting Started

Introduction

Before powering the DLZ Creator on, let's take a few minutes to get acquainted with the wording that will be used throughout this Owner's Manual. Doing so will minimize confusion and increase productivity, a great combination!

Tapping and Dragging

The tap-and-drag sounds like it could be a brand-new dance, but alas, 'tis not. Instead they are the functions you will be using:

Gesture	Action	Examples
Single-Tap	To press or touch a control or item (analogous to a single mouse click)	Select tabs, channels, presets, etc.
Double-Tap	To press or touch a control or item twice quickly (analogous to a double mouse click)	Center pans/balance, reset EQ to 0 dB gain, etc.
Drag	To press down and slowly drag the feature to the desired spot (that is, move side-to-side and up and down)	Adjust pans, EQ, gate/comp, FX, etc.


There are a multitude of things to tap: tabs (and sub tabs) along the navigation bar, channel IDs, preset pull-downs, on/off switches and many more. The DLZ Creator works in similar fashion. In most cases, it is tap to engage, tap again to disengage.

Some things may be double-tapped to reset to their default settings. For example, pans will be centered, EQ will be set to 0 dB gain, etc. Also, a double-tap on a channel ID will quickly navigate to that channel's parameters.

Dragging is how to adjust pans, EQ, gate, compressor and FX settings to name just a few. Keep a finger on the parameter and drag the selected item to the desired destination. You will become a master dragger in no time!

Welcome Screen

Are you ready to fire it up? Of course you are... let's go! Turn the power switch on and let the little gerbils hanging out under the hood wake up. After their slumber, you will be welcomed with the following screen:

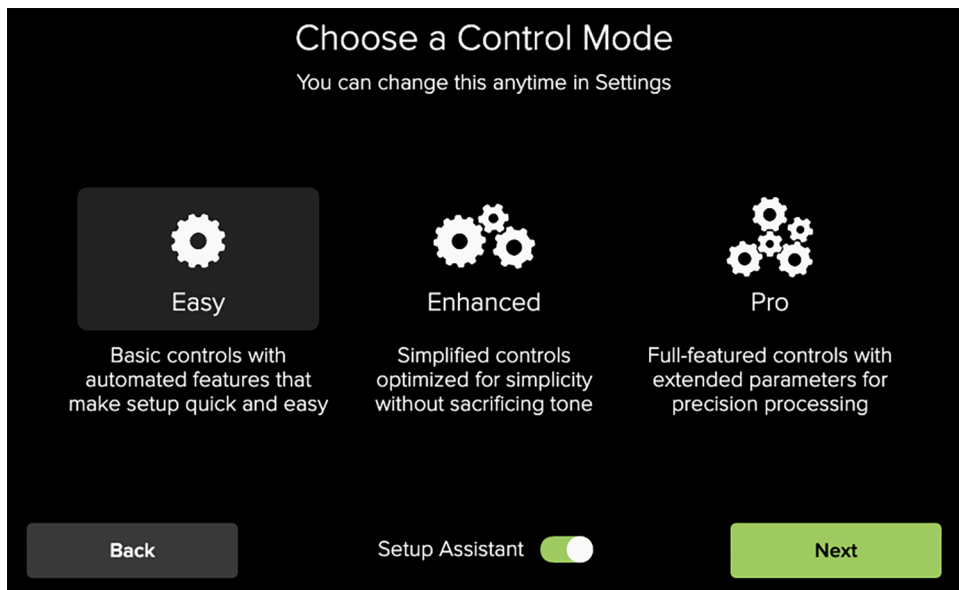


Control Modes

You will hear all about modes throughout this entire manual, as there are visible and functional differences between them. No need to fret, though, as we will pick them all apart, answering any questions you may have. DLZ Creator has three modes to choose from. Additionally, all three modes feature an intuitive wizard, should you ever get stuck!


- **Easy Mode** – Easy mode is for the beginner. The feature set may be reduced in easy mode, but once you have a better grip, simply jump to enhanced or pro mode! We highly suggest starting with easy mode.
- **Enhanced Mode** – Enhanced mode is easy mode, but with additional features and flexibility. This mode is perfect for entry-level broadcasters, podcasters, Stratocasters® and Telecasters®.
- **Pro Mode** – You know it all, don't cha?! If so, then dive right in to pro mode where the features and flexibility are at their most advanced.

As you can see in the image on the previous page, easy mode is already selected and the setup assistant toggle switch is to the right [on]. Tap the 'Next' button. Follow the steps as they appear on the screens being sure not to skip any... no shortcuts! However, if you missed a step – tsk tsk! – you can always tap the 'Back' button. You will be greeted with screens, but in short, these are the steps (regardless of the chosen mode):


- **Channel Faders** – Raise all channel faders to unity level. This includes the sampler channel fader.

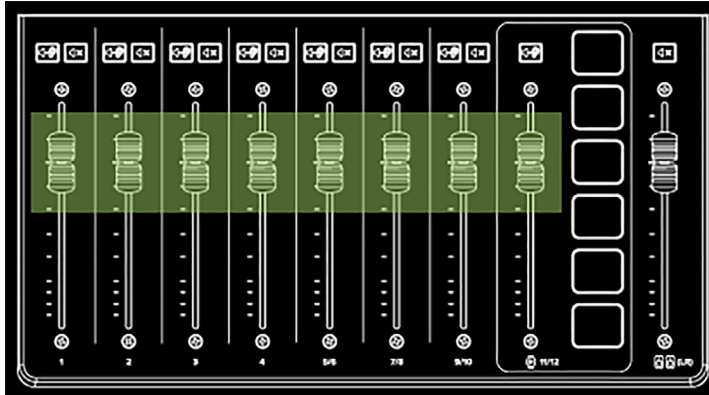



- **Headphones, Part I** – Connect 1-4 headphones to the headphone output jack(s).

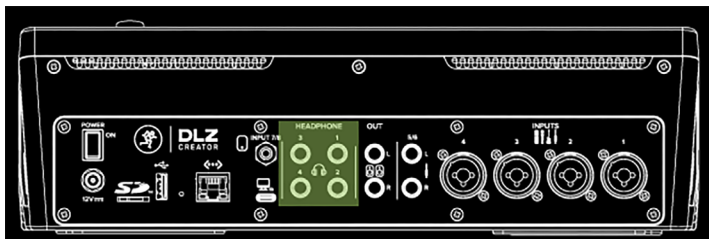


- **Headphones, Part II** – Put the headphones on and rotate the quick control knob(s) associated with each headphone until you hear audio clearly. If you need additional assistance, tap the 'Headphone Help' button.

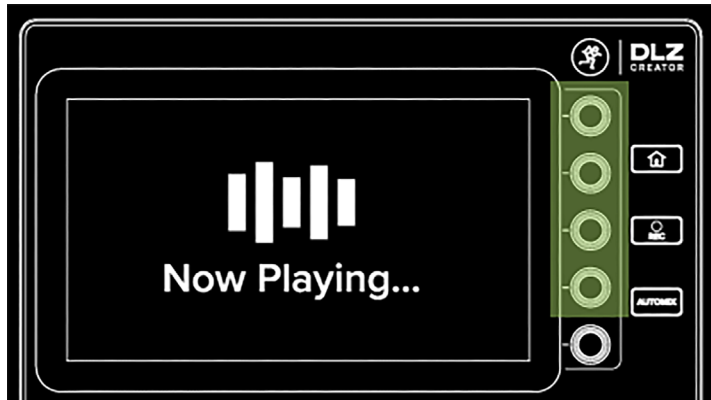

- **Combo Input Jacks 1-4** – Plug a microphone and/or line/instrument signal into input channel 1. Multiple input suggestions are at your disposal. More information about these inputs and correct cables may be seen on page 10.

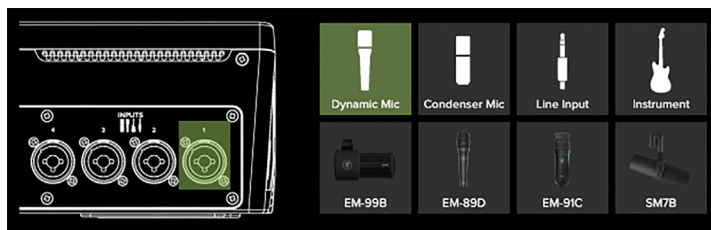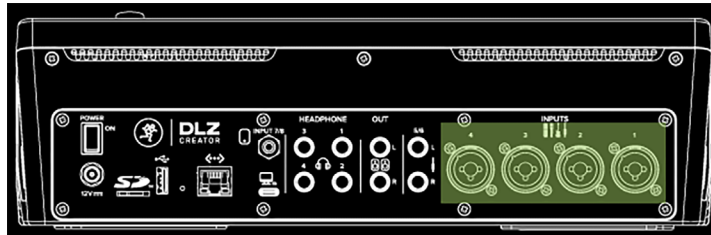

- **Setting Input Levels** – Add phantom power (if necessary) and adjust the slider until the meter reaches the highlighted target. If you need additional assistance, tap the 'Microphone Help' or 'Listen and Set for Me' button. More inputs? Follow this and the previous step for input channels 2-4.

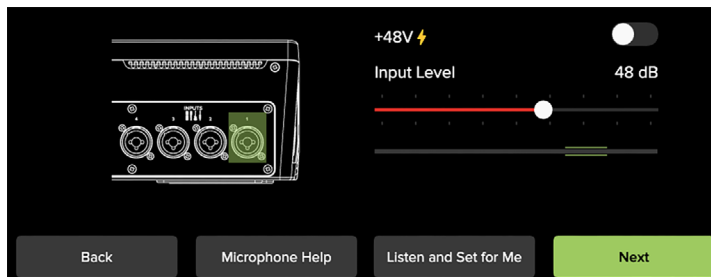

- **Input Jacks 5-10** – Select what will be connected to these stereo channels.

Channel 5/6 – None, Line, USB Audio


Channel 7/8 – None, Aux (phone, tablet), USB Audio

Channel 9/10 – None, Bluetooth, USB / SD


As you can see, multiple input possibilities are at your disposal. More information about these inputs and correct cables may be seen on page 11.



- **L/R Outputs** – If you are using speakers in addition to headphones, they may be connected to the 1/4" L/R outputs. More information about these outputs and correct cables may be seen on page 11.

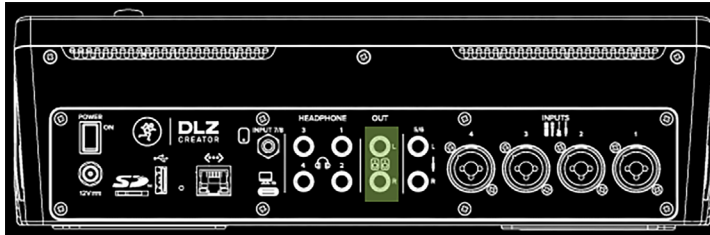

At this point, the setup is complete and you'll be asked if you would like to take a tour of the mixer. While it is completely up to you, we believe that you should strongly consider it. Tap 'Next'.

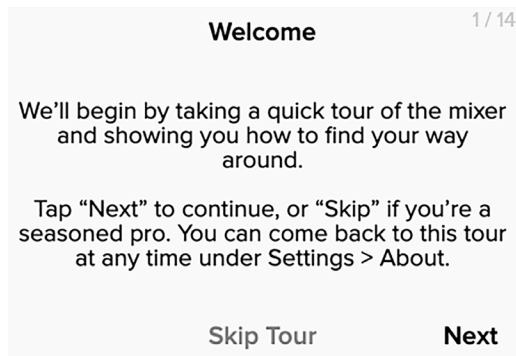

Everything in the tour will be expanded upon in the following pages... but we're glad you'll experience it, anyway!

Once finished, you will land back on the Overview tab.


Chapter 5 : Overview Tab

Introduction

Located in the upper left-hand corner of the DLZ Creator display is the first tab: Overview. This is the main view, and where you will (most likely) spend most of the time. After touring the DLZ Creator, this is the default landing screen. It is also called the home screen and is easily accessed by tapping the big home button regardless of what view is displayed!

While parameters are not updated here, it does allow access to the channel selection bar that lies horizontally across the bottom of the display. Channel meters are viewed here, as well. Additionally, in the upper-right corner of the display are three small icons: microSD card, USB and Bluetooth. These will illuminate white to show connectivity and are grayed out if not.

Also displayed on the home screen is the current play status and color of each sample pad (which match the sample pad colors on the hardware). To the right of the sample pad play status and colors are the currently assigned mix levels (which may be raised and lowered via the quick control knobs, also on the hardware). On easy mode, it's the headphone levels. Headphone levels and multiple other features are available in enhanced or pro mode, such as channel gain level, panning, EQ, FX send levels and much more!

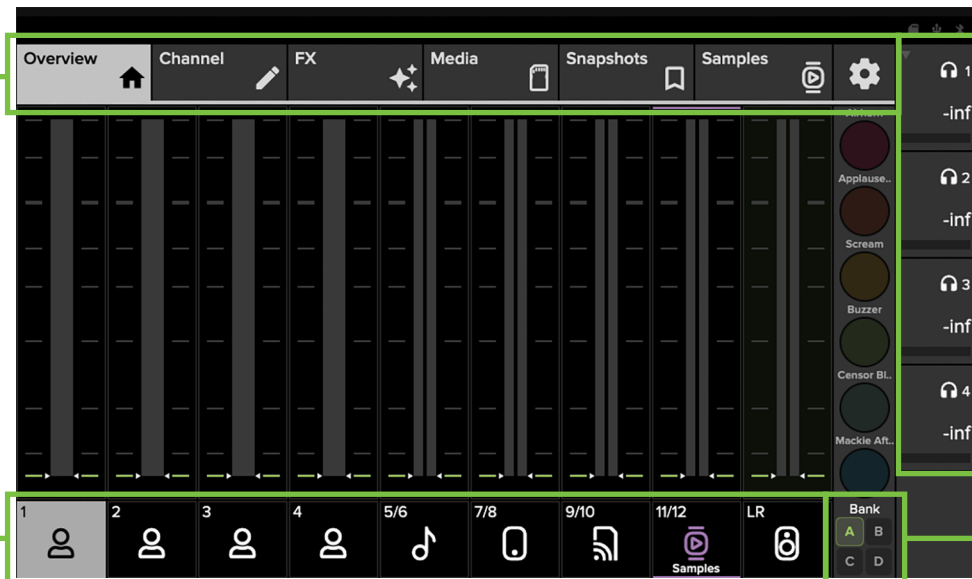

As stated above, parameters are not updated here. However, there are three things that may be tapped:

(1) any of the square channel ID buttons on the aforementioned channel selection bar lying horizontally across the bottom of the display. The currently selected channel will illuminate to indicate that it is the selected channel. Channel 1 as seen above. When parameters are updated, it's on the channel that has been selected.

Go ahead and tap some of the other channel IDs to get a feel for it, then return back to channel 1 selected... or double-tap a channel ID to go directly to that channel's parameters!

(2) any of the four sample banks (A-D). There are six samples available per bank for a total of 24 samples!


Again, we suggest tapping between the four banks, returning to "A" when complete. Notice that the other three banks are completely blank, awaiting your samples. Additionally, notice that the sample pads themselves are no longer illuminated in the other three banks, either.

(3) any of the tabs on the navigation bar lying horizontally across the top of the display. This includes the overview, channel, FX, media, snapshots, samples and settings tabs. Ok, one more time! Tap around between the tabs to get a feel for it, returning to the 'Overview' tab when play time is over.


Tapping any of the four headphone volume tabs laid out vertically on the far-right of the display will take you directly to that headphone's mix mode and other settings. Note: this only works in Pro Mode. More on this feature later.

And by later we mean the next page...


As mentioned on the previous page, tapping any of the four headphone volume tabs laid out vertically on the far-right of the display will take you directly to that headphone's mix mode and other settings. Let's start with the headphone 1 output. Tap it so the mix mode appears. It opens with standard mix selected, the default. Standard mix offers a copy of the main LR pre-fader with output volume control using the quick control knob associated with it.

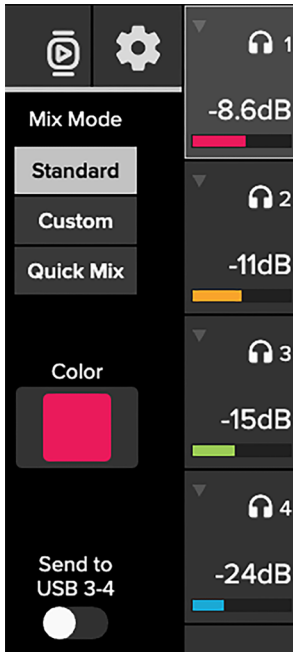

For the next example, we tapped the headphone 2 output and selected the next mix mode on the list: custom. The overall channel input levels are already set, but here each person with a set of headphones on can set the channel input levels to their desire... and even mute channels they don't want in their mix! Simply tap-and-drag a "fader ball" up and down until that channel's level is where you want it. The custom mix offers a completely independent mix of each input channel with headphone output volume control using the quick control knob associated with it.

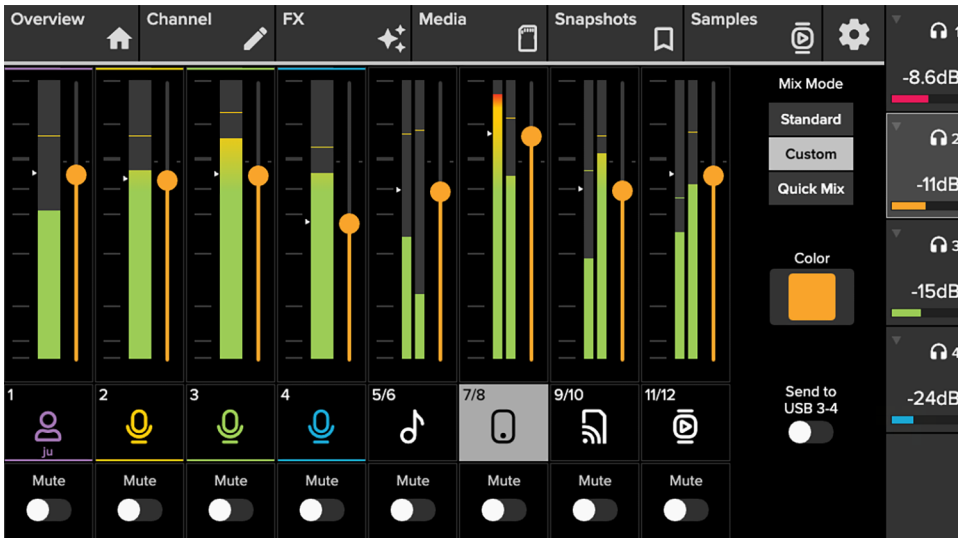

The third and final mix mode is quick mix! We tapped the headphone 3 output for this example. Tapping quick mix mode sets the “fader balls” at center position where they may be raised (boosted) or lowered (attenuated) based upon the fader position and relative level of the DLZ Creator. Simply tap-and-drag a “fader ball” up and down until that channel’s level is where you want it. Like the custom mix, the quick mix also offers a completely independent mix of each input channel with headphone output volume control using the quick control knob associated with it. Also like the custom mix, people may mute channels that they don’t want to hear in their mix.

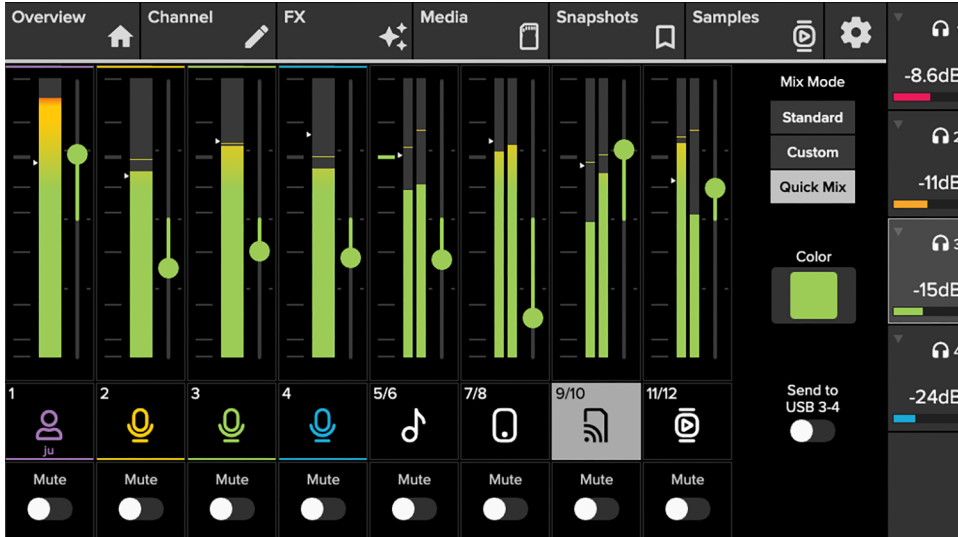


There is no fourth mix mode. However, there is a toggle switch option to 'Send to USB 3-4' (which has been an option on the three previous examples, as well). This routes THIS mix to USB 3/4 for streaming (the USB 3/4 SEND). Here is what this means: DLZ Creator is a 14x4 USB interface (14 channels to the computer and four channels returned from the computer – USB 1/2 and USB 3/4 (the USB 1/2 and USB 3/4 RETURNS)).

When this switch is engaged (switch right, illuminates green), it sends this headphone mix out USB sends 3-4 on DLZ Creator going to the computer. It essentially “takes over” whatever is connected to input channels 3-4.

This is a great way to capture a “backup” to the DAW while streaming the main to OBS [Open Broadcaster Software], for one example. Or perhaps you prefer to send different mixes to two different streaming platforms (audio only)? This is the way!

The switch is gray when disengaged (switch left).



Once one output mix has been routed to USB 3/4 this option will be grayed out and unavailable for selection on the other output mixes.

Regardless of the headphone output or mix mode selected, each headphone output may be color-coordinated to go with today’s outfit. When the headphone output is tapped and mix mode appears, a default color is presented. If you would prefer a different color, tap the swatch to unveil a color palette laid out horizontally. Simply tap the color you would like for the selected headphone output and the quick control knob and headphones/mix level display will change to represent the chosen color.

Coming back to the ‘Overview’ tab for one last thing... notice the sample “circles” laid out vertically between the settings tab and the sample banks switcher in the screenshot to the left; a quick DOUBLE-tap takes you directly to that sample’s page so changes may be made on-the-fly! Check out more information about samples in Chapter 10, pages 58-64.



Chapter 6 : Channel Tab

Introduction

Channel is the next tab listed. Tap it so it opens up. Here you are able to name the channel, give it some color and add an icon, too! Additionally, this is where to re-run the Microphone/Channel Setup wizard – if the setup assistant was bypassed – and add presets.


If you are working in enhanced or pro mode, though, a whole slew of other things are offered, including advanced setup, EQ, gate, compressor, de-esser and more.

- Channel Tab EASY Mode – pages 29-30
- Channel Tab ENHANCED Mode – pages 29-34
- Channel Tab PRO Mode – pages 29-30, 34-46

Some of the channel tab setup features look and work similarly between all three modes. Those will only be explained once. In fact, the first view displayed below may be seen in all three modes.

Channel ID Button [Easy • Enhanced • Pro]

Each channel ID button name, image, color and preset is user-editable. The channel tab is already open, so just tap a channel button to get started. We will start with channel 1.

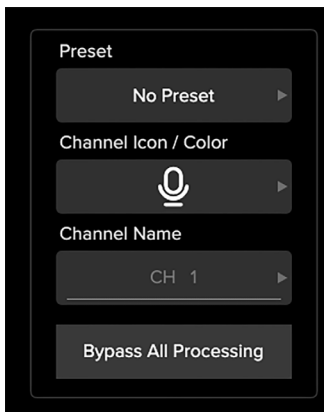

Presets [Easy • Enhanced • Pro]


Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets.

There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.

Channel Icon / Color [Easy • Enhanced • Pro]

Let's spice up the channel with an icon and color! Tap "Channel Icon / Color" to reveal a new popover as seen below.

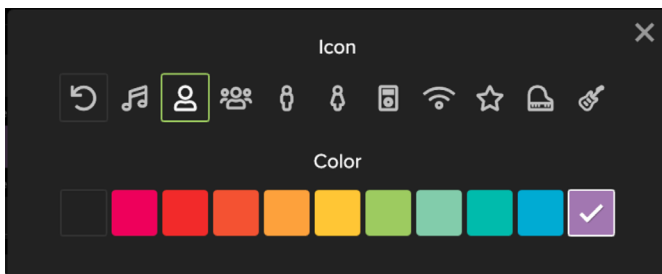


Look at the multitude of built-in icons and colors at your disposal!

From here, tap the icon and color you would like for each channel. Here we chose a general "person" icon who is the host of the show. His favorite color is purple, so I chose it for this example.

After making the selections, the channel is updated immediately, but there is one more thing we can add to the channel... a name!

Channel Name [Easy • Enhanced • Pro]

Ready to add a name? Tap in the name box to bring up the keyboard (as seen in the image below). Type in the name you want for that channel followed by tapping “Enter”. Our host’s name is Johnny. The name is limited to 36 characters.

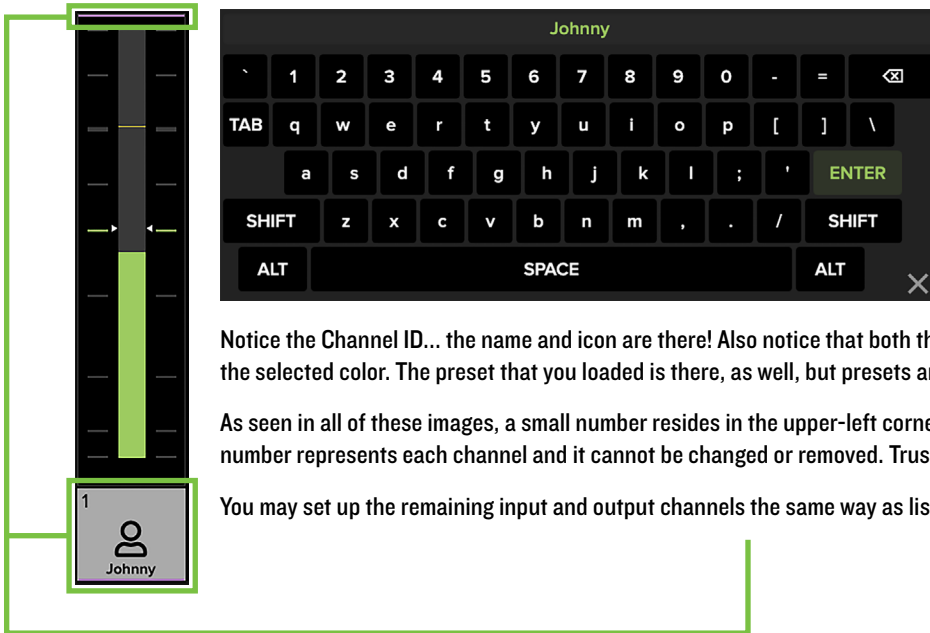


Notice the Channel ID... the name and icon are there! Also notice that both the top and bottom of the channel strip becomes the selected color. The preset that you loaded is there, as well, but presets aren’t “displayed”.

As seen in all of these images, a small number resides in the upper-left corner regardless of name, icon and/or color. This number represents each channel and it cannot be changed or removed. Trust us, it’s for the best, as it is for easy identification.

You may set up the remaining input and output channels the same way as listed above.

Bypass All Processing [Easy • Enhanced • Pro]





This is a true hardware bypass of all processing circuitry to ensure that there is no coloration of the signal if processing is not needed. When this is engaged [red with white text, as seen to the left], any effects that are added or changed will have no effect on the signal. This switch is to make an A/B comparison between the processed signal and the signal without any processing.



And you may tell yourself, “This is not my beautiful house.” And you may tell yourself, “This is not my beautiful wife.” And you may tell yourself, “There are no FX, gates/comps, EQ, etc. in Easy Mode.” Well, if that’s true, then what exactly does ‘Bypass All Processing’ do when in Easy Mode? Presets, of course! Presets can – and do! – shape the sound just as much as individually changing the parameters when in Enhanced or Pro Mode.

Microphone / Channel Setup... [Easy]

If you are still having issues with setup, there is a setup assistance for the inputs. This includes microphone (and instrument) setup on channels 1-4 and channel setup on channels 5-10. Simply tap the button. This will send you to the microphone (and instrument) or channel setup section of the setup assistant.

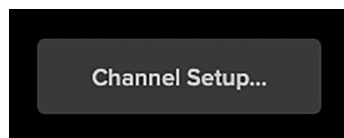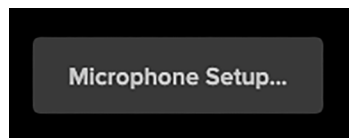


Mic and Channel Setup Buttons in EASY mode

Channel Setup [Enhanced]

Check out what the channel setup tab looks like in enhanced mode.

Channel Setup in ENHANCED mode

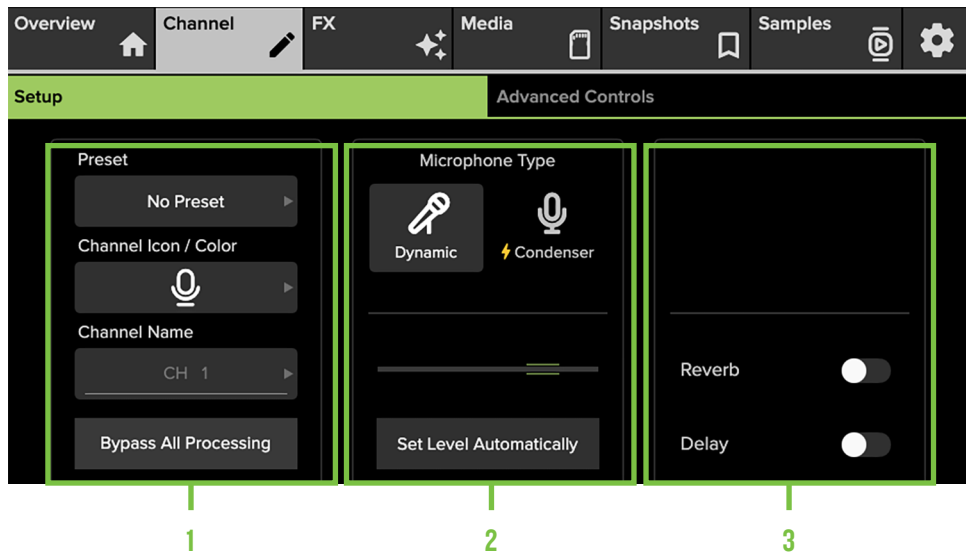

There are a few things to notice here:

First and foremost, listed underneath the Channel's main tab are not one, but TWO sub tabs: 'Setup' (which we will discuss below) and 'Advanced Controls' (which we will discuss next)!


Within the 'Setup' sub tab, there are three separate "boxes" as outlined above.

- #1 – Notice that the first "box" displayed is the Channel ID setup: preset, channel icon / color, channel name and bypass all processing. These look and work exactly the same as in easy mode and were discussed on the previous two pages.
- #2 – The middle "box" is about setting levels (channels 1-4) and selecting the channel source (channels 5-10).
 - If setting levels, first tap whether the connected microphone is dynamic or condenser. As indicated by the lightning bolt icon, condenser mics require 48V phantom power. It will automatically be applied to that channel and a little lightning bolt icon will be added to the middle-right side of that channel ID.

Most modern professional condenser mics require 48V phantom power, which lets the DLZ Creator send low-current DC voltage to the mic's electronics through the same wires that carry audio. (Semi-pro condenser mics often have batteries to accomplish the same thing.) "Phantom" owes its name to an ability to be "unseen" by dynamic mics (Mackie EM-89D and Shure SM57/SM58, for instance), which don't need external power and aren't affected by it anyway.




Never plug single-ended (unbalanced) microphones, or ribbon mics into the mic input jacks if phantom power is applied to that channel. Do not plug instrument outputs into the mic XLR input jacks with phantom power on unless you know for certain it is safe to do so. Be sure the main mix fader and headphone levels are turned down when connecting microphones to the mic inputs when phantom power is turned on to prevent pops from getting through to the speakers and headphones.

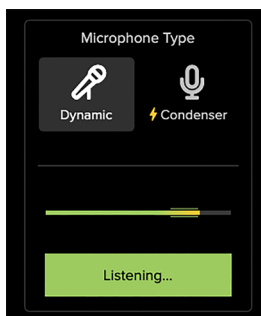


The next step is to tap 'Set Level Automatically'. The button will illuminate green and the text will change to 'Listening...'. Simultaneously speak into the mic at normal volume and continue speaking until the button changes back to 'Set Level Automatically'. [Note that it will state 'Level Set!' prior to 'Set Level Automatically', but it's pretty fast!]. Once it is set, you might notice that the horizontal meter will remain on the far-left when the mic is not in use and in the money-zone when spoken directly into.

Keep in mind that we have only looked at this setup view when on channels 1-4. But what opportunities arise when another channel is selected? The first box remains the same as it always was: presets, icons, colors, naming and the ability to bypass all processing. However, since mic/XLR inputs are only on the first four channels, a channel source is requested when viewing non-mic/XLR inputs, as seen below.

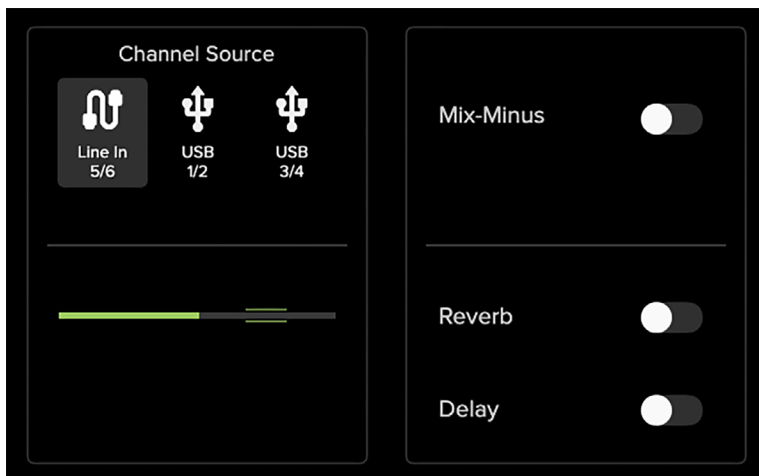


Channels 5/6 and 7/8

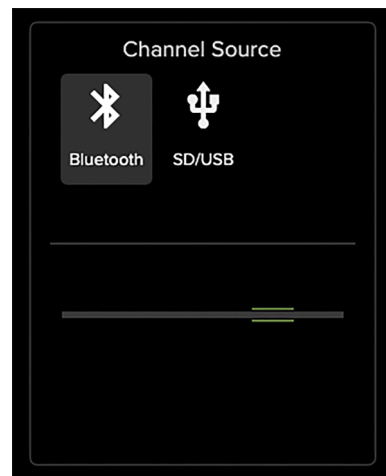

Channels 9/10

The source for channels 5/6 is either line in 5/6, USB 1/2 or USB 3/4. [Channels 7/8 are exactly the same as channels 5/6, except the source is either line in 7/8, USB 1/2 or USB 3/4]. Channels 9/10 are a little bit different in that its channel source is either Bluetooth or SD/USB. Simply tap the source you want for each channel. An entire chapter is dedicated to routing. This includes detailed instructions and multiple screenshots every step of the way. Please check it out in Chapter 14, pages 84-86.

- #3 – The third and last “box” is about...
 - Turning the reverb and/or delay on (switch right) and off (switch left). When on, the reverb switch will be purple and the delay switch is blue. They are grayed out when turned off. Something else to notice is that channels with reverb and/or delay switched on, it will also show up on that channel’s ID as seen below (along with the 48V phantom power lightning bolt icon, when engaged).

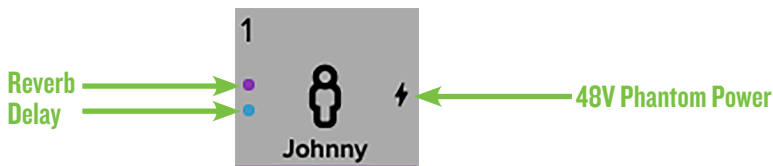

The reverb and delay switches work exactly as described above. However, of note is the addition of a Mix-Minus switch on channels 5/6, 7/8 and 9/10. When on – switch to the right – the mix-minus switch will be green. As seen above, it is grayed out when turned off.


What mix-minus accomplishes is that DLZ Creator will send the sources a copy of the main mix minus themselves. This helps prevent feedback and/or stereo return echoes. Additionally, as a Bluetooth source, channels 9/10 work similarly in that it could be a caller from the outside for a podcast interview, for example. It removes the caller’s voice from the call, yet allows them to hear the remaining channels (including the samples).

Channel Setup > Advanced Controls [Enhanced]

We saw the Enhanced Mode Channel Setup screen on the previous two pages, but there is another tab just to the right of it: Advanced Controls.

Tap it to reveal a screen similar to what is displayed below.

Advanced Controls in ENHANCED mode

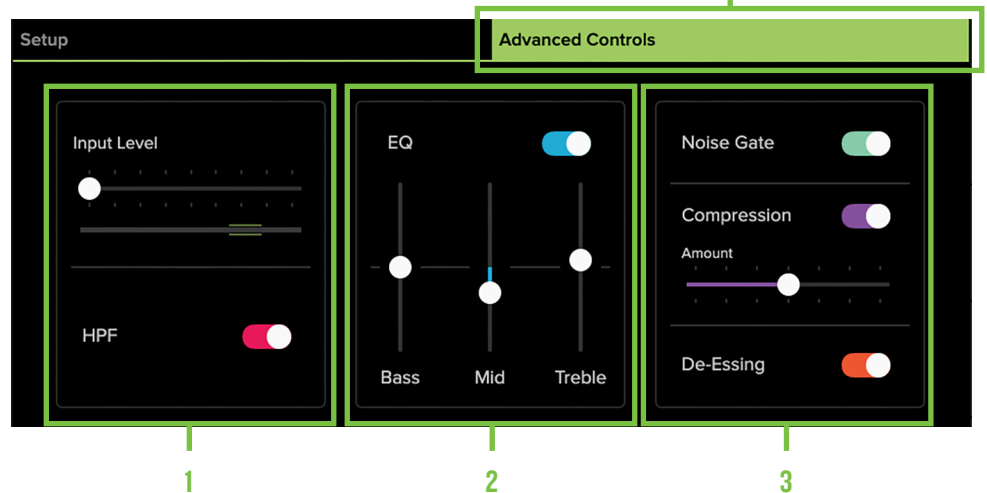

Just like with the setup screen, there are also three separate “boxes” in advanced controls, as well (outlined above).

- #1 – The first “box” contains the input level slider (which ranges from 0 to +80 dB) and corresponding meter level, as well as a high-pass filter (HPF) on/off switch. Now, the input level should be fine – or at least very close – since we “set the level” automatically a couple of pages back. This is simply your chance to fine-tune the input level. The input level may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging the slider left and right until the desired level has been achieved.

Located underneath the input level slider and corresponding meter level lies the HPF on/off switch. High-pass filters are utilized to cut out low frequencies. The high-pass filter control adjusts the cut-off frequency for the filter. While the pro mode expands on the HPF – we’ll get there soon – the enhanced mode simply adds this option as on (switch right) or off (switch left). It will illuminate hot pink when engaged and is gray when disengaged.

- #2 – The middle “box” contains the EQ section. The EQ may be engaged (switch right) or disengaged (switch left). It is a 3-band EQ with bass, mid and treble. The gain may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging these sliders up and down until the desired sound has been achieved. Moving a slider vertically changes that frequency’s gain by up to ± 15 dB. Tapping an EQ ball twice quickly will set it at 0 dB. It will illuminate blue when engaged and is gray when disengaged.



You can really upset things with too much EQ. Each EQ band has a lot of boost and cut because that is needed on occasion. But if the EQ is maxed on every channel, the mix turns to mush. Equalize subtly, using cut as well as boost. If you find yourself repeatedly using a lot of boost or cut, consider altering the sound source such as placing a mic differently, trying a different kind of mic, a different broadcaster, gargling, or all of the above.

The default frequency for each band is as follows:

Bass: 200 Hz

Mid: 1 kHz

Treble: 5 kHz



However, while these may be the default settings, the EQ may have been changed in pro mode and/or a preset may have been loaded, which will also alter the EQ settings.

- #3 – The third and last “box” contains the noise gate, compressor and de-esser. Gates are typically used to reduce leakage from open microphones. Signals below the threshold level are muted, while signals above the threshold get to pass through. The range control changes the rule slightly. Signals below the threshold are attenuated by the amount of the range setting, while signals above the threshold get to pass through.

Compressors are used to reduce or limit transient peaks in a signal. If the signal is too hot, turn down that channel's gain, otherwise leave it alone. As the input level to the compressor increases, the output level increases linearly until the threshold point is reached. After that point, the output level no longer increases linearly. Instead, it increases at a reduced rate determined by the ratio setting. The compressor percentage may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging this slider left and right until the desired sound has been achieved.


De-essers are specialized compressors that focus on and reduce or remove high frequencies and sibilance, especially “harsh” sounds such as “ess”, “z”, “ch”, “j”, “sh” and “ts”. There are always exception to the rule, of course, but for the most part, sibilance is typically in the 3-6 kHz (male) and 6-8 kHz (female) range.

While the pro mode expands on all of these items – with separate tabs even; we'll get there soon – the enhanced mode simply adds these options as on (switch right) or off (switch left), with the ability to choose the amount of compression from 0-100%.

Channel Setup [Pro]

Now check out what the channel setup tab looks like in pro mode.

Channel Setup in PRO mode

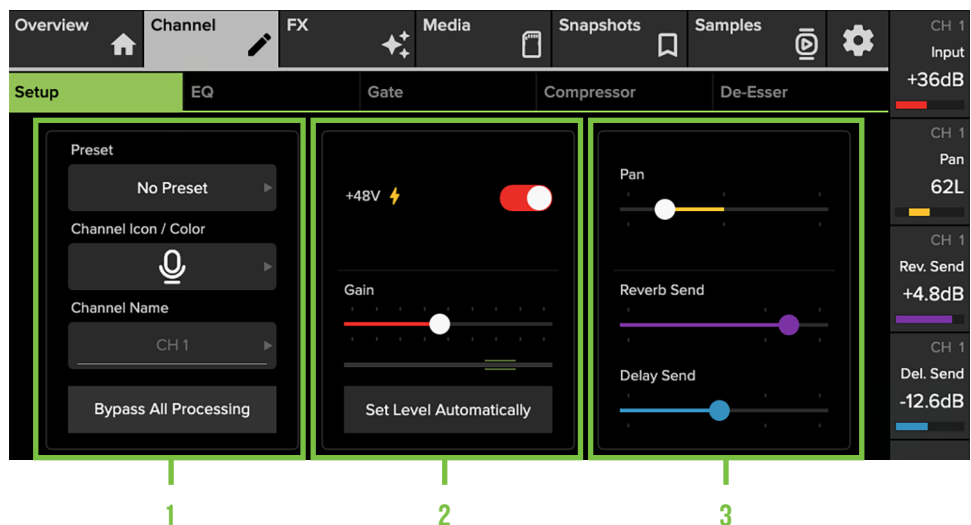

There are a few things to notice here:

First and foremost, listed underneath the Channel's main tab are not one, not two, but a whopping FIVE sub tabs: 'Setup' (which we will discuss below), 'EQ' (which we will discuss next), followed by 'Gate', 'Compressor' and 'De-Esser'!


Within the 'Setup' sub tab, there are three separate “boxes” as outlined above.

- #1 – Notice that the first “box” displayed is the Channel ID setup: preset, channel icon / color, channel name and bypass all processing. These look and work exactly the same as in easy and enhanced mode and were discussed on pages 29-30.
- #2 – The middle “box” is about adding (or removing) 48V phantom power from the channel and setting levels (channels 1-4) and selecting the channel source, adding trim and toggling the mix-minus function on/off (channels 5-10).
 - If setting levels, does the connected microphone require 48V phantom power? (Condenser mics require 48V phantom power.) If so, make sure that the 48V phantom power switch is to the right. It will illuminate orange to confirm that phantom power is engaged for that channel and is gray when disengaged. It will automatically be applied to that channel and a little lightning bolt icon will be added to the middle-right side of that channel ID.

Most modern professional condenser mics require 48V phantom power, which lets the DLZ Creator send low-current DC voltage to the mic's electronics through the same wires that carry audio. (Semi-pro condenser mics often have batteries to accomplish the same thing.) "Phantom" owes its name to an ability to be "unseen" by dynamic mics (Mackie EM-89D and Shure SM57/SM58, for instance), which don't need external power and aren't affected by it anyway.




Never plug single-ended (unbalanced) microphones, or ribbon mics into the mic input jacks if phantom power is applied to that channel. Do not plug instrument outputs into the mic XLR input jacks with phantom power on unless you know for certain it is safe to do so. Be sure the main mix fader and headphone levels are turned down when connecting microphones to the mic inputs when phantom power is turned on to prevent pops from getting through to the speakers and headphones.

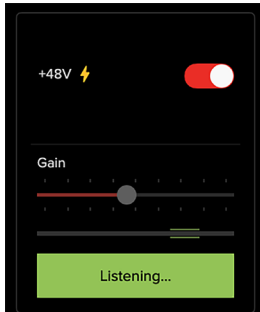


The next step is to tap 'Set Level Automatically'. The button will illuminate green and the text will change to 'Listening...'. Simultaneously speak into the mic at normal volume and continue speaking until the button changes back to 'Set Level Automatically'. [Note that it will state 'Level Set!' prior to 'Set Level Automatically', but it's pretty fast!]. Once it is set, you might notice that the horizontal meter will remain on the far-left when the mic is not in use and in the money-zone when spoken directly into.

Keep in mind that we have only looked at this setup view when on channels 1-4. But what opportunities arise when another channel is selected? The first box remains the same as it always was: presets, icons, colors, naming and the ability to bypass all processing. However, since mic/XLR inputs are only on the first four channels, a channel source is requested when viewing non-mic/XLR inputs, as seen below.

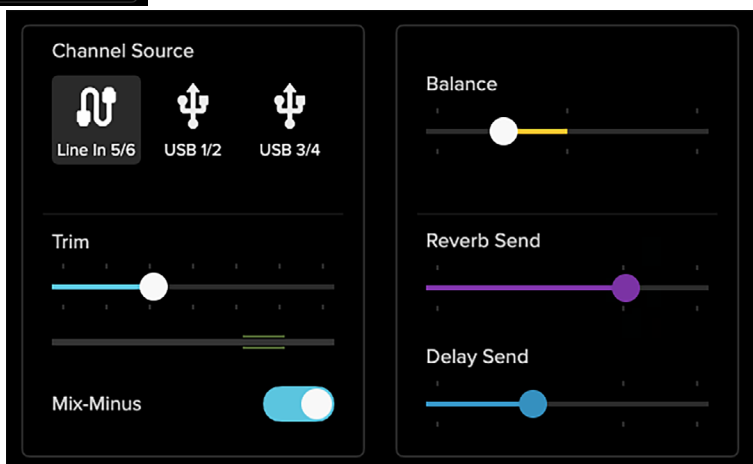

Channels 5/6 and 7/8

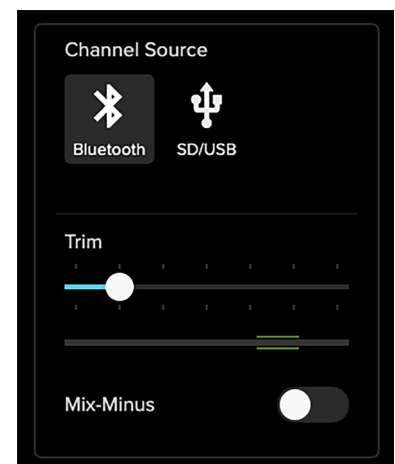

Channels 9/10

The source for channels 5/6 is either line in 5/6, USB 1/2 or USB 3/4. [Channels 7/8 are exactly the same as channels 5/6, except the source is either line in 7/8, USB 1/2 or USB 3/4]. Channels 9/10 are a little bit different in that its channel source is either Bluetooth or SD/USB. Simply tap the source you want for each channel. An entire chapter is dedicated to routing. This includes detailed instructions and multiple screenshots every step of the way. Please check it out in Chapter 14, pages 84-86.

Underneath the channel source selection is a trim slider. Trim is a digital level control at the top of the channel's processing. It affects all input sources to the channel whether analog or digital. It ranges from -20 dB to $+40$ dB with a default of -10 dB. It's used for adding level to a channel before any of the channel processing.



So what is the difference between gain and trim? When would you use gain and when would you use trim? In short, gain is analog, while trim is digital (right after the A/D conversion but before everything else). So if the source is analog, you would use gain. If the source is digital, you would use trim since it doesn't have gain. In most cases, you will adjust (analog) gain, not (digital) trim. If you want to lower a channel level, you can adjust the channel's trim (assuming it isn't clipping). The analog line inputs on stereo channels 5-10 do not have gain. However, digital trim is adjustable for these line inputs. Trim does not help curb clipping or distortion.

The trim may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging the slider left and right until the desired trim level has been achieved. The horizontal meter underneath the slider will assist; simply continue to add signal to this channel while raising or lowering the trim. The dual green horizontal lines mark the spot you're aiming for. Tapping the trim slider ball twice quickly will set it back to its default of -10 dB. The slider will illuminate blue when any trim is added.

Also of note is the addition of a Mix-Minus switch. When on – switch to the right – the mix-minus switch will be blue (and is grayed out when turned off). What mix-minus accomplishes is that DLZ Creator will send the sources a copy of the main mix minus themselves. This helps prevent feedback and/or stereo return echoes. Additionally, as a Bluetooth source, channels 9/10 work similarly in that it could be a caller from the outside for a podcast interview, for example. It removes the caller's voice from the call, yet allows them to hear the remaining channels (including the samples).

- #3 – The third and last “box” is about two things...
 - (1) Setting the L/R pan (channels 1-4) and balance (channels 5-12 + main L/R) levels and (2) setting the reverb and delay send levels (all input channels).

Pan allows you to adjust how much of the channel is sent to the left versus the right outputs. The pan control employs a design called “Constant Loudness.” If a channel is panned hard left (or right) and then panned to the center, the signal is attenuated 3 dB to maintain the same apparent loudness. Otherwise, the sound would appear much louder when panned center.

Like pan, balance also allows you to adjust how much of the channel is sent to the left versus the right outputs. The only difference is that channels 1-4 are mono (and are therefore panned), while channels 5/6, 7/8, 9/10 and 11/12 are all stereo (and are therefore panned via the balance slider).

The pan and balance sliders may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging the slider left and right until the desired pan or balance level has been achieved. Tapping the pan or balance slider ball twice quickly will set it back to its center [the default]. The slider will illuminate yellow when the pan or balance is not at center.

- Whereas there is no reverb or delay in easy mode, and a simple on/off switch in enhanced mode, pro mode unleashes reverb and send levels ranging from -inf (off) to a max of +10 dB. The reverb and delay send sliders may be changed by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging the slider left and right until the desired reverb or delay send level has been achieved. The sliders will illuminate purple (reverb) and blue (delay) when above -inf.

Something else to notice is that channels with reverb and/or delay added, it will also show up on that channel's ID as seen below (along with the 48V phantom power lightning bolt icon, when engaged).



Channel Setup > EQ Introduction [Pro]


The equalizer area accesses all EQ-related parameters such as 3-band EQ for the selected channel (including gain, frequency and Q) and a high-pass filter (HPF).



You can really upset things with too much EQ. Each EQ band has a lot of boost and cut because that is needed on occasion. But if the EQ is maxed on every channel, the mix turns to mush. Equalize subtly, using cut as well as boost. If you find yourself repeatedly using a lot of boost or cut, consider altering the sound source such as placing a mic differently, trying a different kind of mic, a different broadcaster, gargling, or all of the above.

Channel Setup > EQ On / Off [Pro]

The EQ button – near the upper-left corner of the screen – allows for true bypass of the EQ circuitry to ensure that there is no coloration of the signal if the EQ is not needed. When this button is disengaged, the EQ controls have no effect on the signal. You may use this button to make an A/B comparison between the EQ'd signal and the signal without EQ. Tap this button to turn EQ on or off. It will illuminate cyan when engaged and is gray when disengaged.

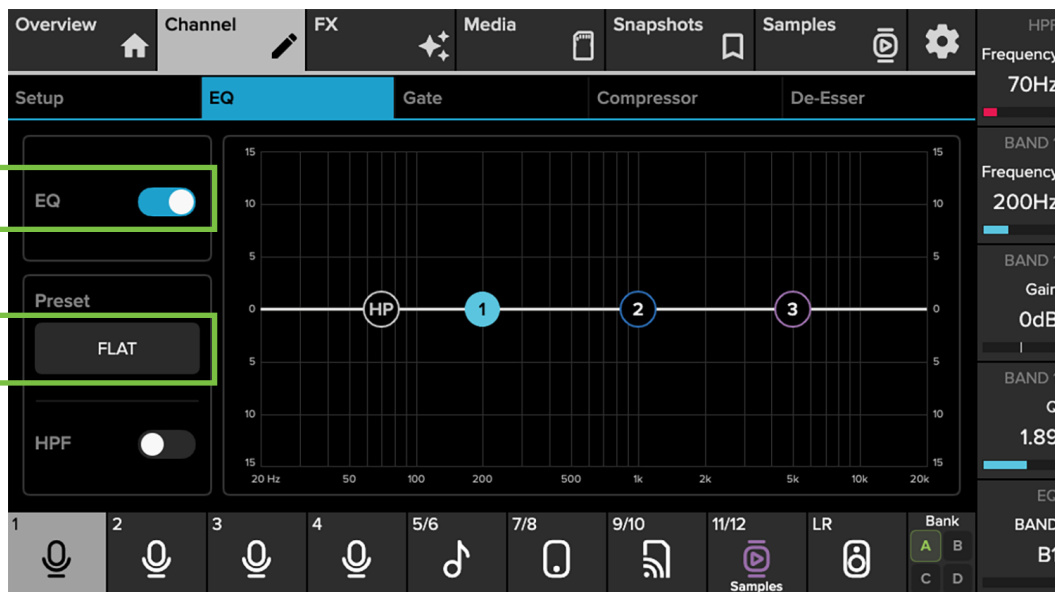


Channel Setup > EQ Presets [Pro]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.


An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.

Channel Setup > EQ HPF On / Off and Frequency [Pro]

Located underneath the EQ on/off button and preset buttons lies the HPF on/off button. High-pass filters are utilized to cut out low frequencies. The high-pass filter control adjusts the cut-off frequency for the filter. Frequencies below the cut-off frequency are attenuated at a rate of 18 dB/octave. The slope for the HPF is adjustable by either (1) rotating the quick control knob associated with it or (2) tapping-and-dragging the HPF ball left and right until the desired sound has been achieved. Simply tap the HPF button to engage the high-pass filter. It will illuminate hot pink when engaged and is gray when disengaged. The HPF ranges from 20 Hz – 700 Hz.

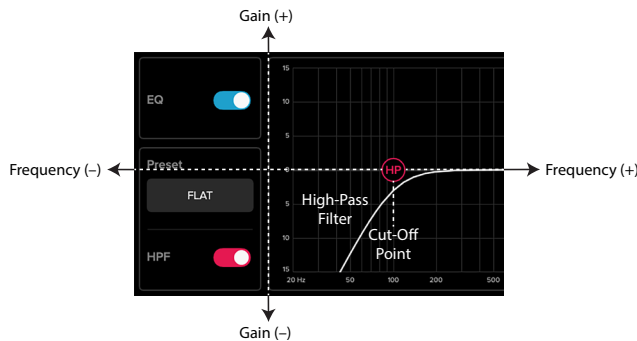

High-Pass Filter Engaged

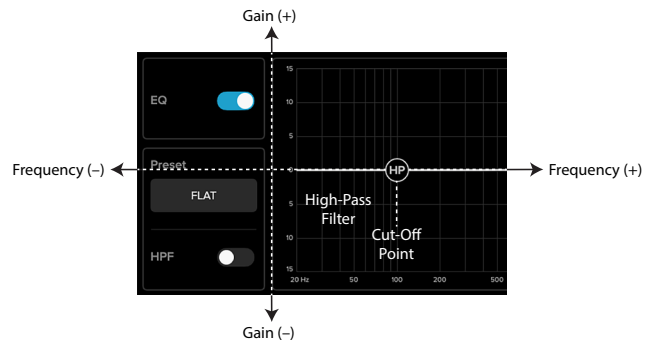

High-Pass Filter Disengaged

Channel Setup > EQ Gain, Frequency and Q [Bandwidth] [Pro]


All three bands have adjustable gain, frequency and Q (bandwidth). The gain and frequency may be changed by either (1) rotating the quick control knobs associated with it or (2) tapping-and-dragging any of the three numbered balls (representing each band) until the desired sound has been achieved. Moving a ball vertically changes the gain by up to ± 15 dB. Moving a ball horizontally changes the frequency, ranging from 20 Hz to 20 kHz. Q [bandwidth] – which may only be changed via the quick control knob – ranges from 0.1 – 15. Double-tap an EQ ball to reset it to its default setting.




Take a look at the quick control knobs and notice how the top and bottom ones remain the same regardless of which EQ band is selected. Rotate the top quick control knob to raise/lower the HPF and rotate the bottom quick control knob to quickly rotate between bands. EQ bands, that is. Not rock 'n roll bands. The three quick control knobs in-between are associated with the selected channel's EQ (frequency, gain and Q). The base of the quick control knobs match the color of each band's EQ ball.

Channel Setup > Low EQ [Pro]

The low EQ provides up to 15 dB of boost or cut from 20 Hz to 20 kHz. The screenshots displayed below contain EQ Band 1 at 200 Hz at ± 10 dB with the EQ on and off. The Q is set at 0.1. Notice the similarities and differences between them.

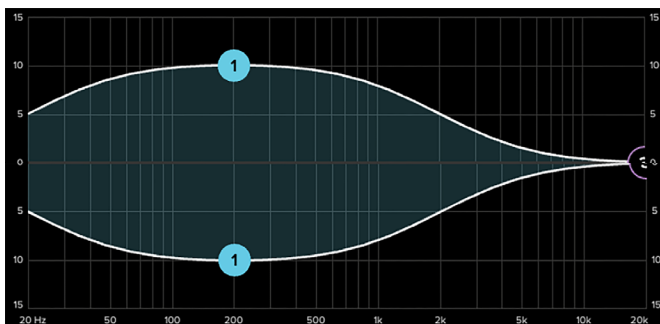


EQ ON – Low Band (1) – 200 Hz at ± 10 dB

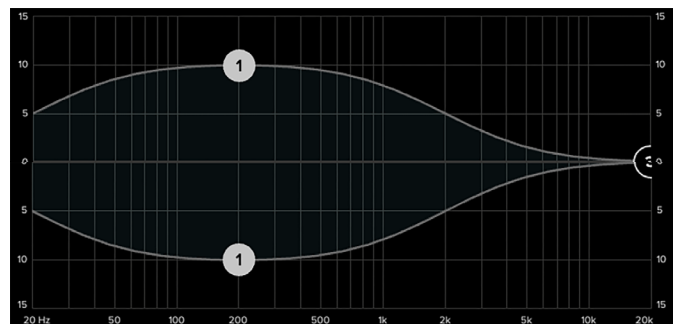


EQ OFF – Low Band (1) – 200 Hz at ± 10 dB

Channel Setup > Mid EQ [Pro]

The mid EQ provides up to 15 dB of boost or cut from 20 Hz to 20 kHz. The screenshots displayed below contain EQ Band 2 at 1 kHz at ± 10 dB with the EQ on and off. The Q is set at 0.1. Notice the similarities and differences between them.

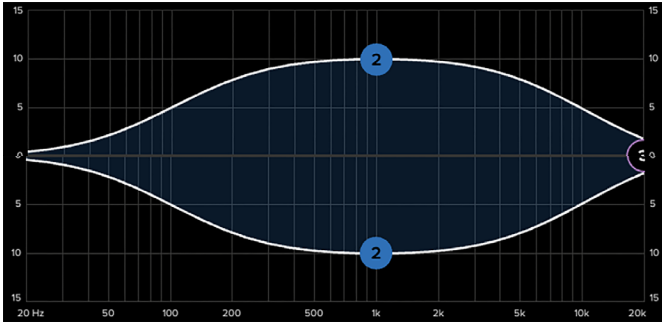


EQ ON – Mid Band (2) – 1 kHz at ± 10 dB

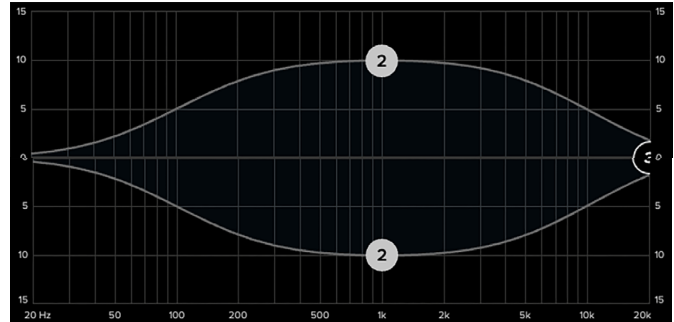


EQ OFF – Mid Band (2) – 1 kHz at ± 10 dB

Channel Setup > High EQ [Pro]


The high EQ provides up to 15 dB of boost or cut from 20 Hz to 20 kHz. The screenshots displayed below contain EQ Band 3 at 5 kHz at ± 10 dB with the EQ on and off. The Q is set at 0.1. Notice the similarities and differences between them.

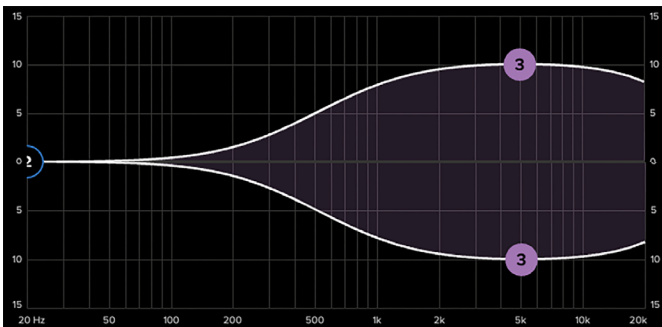

EQ ON – High Band (3) – 5 kHz at ± 10 dB

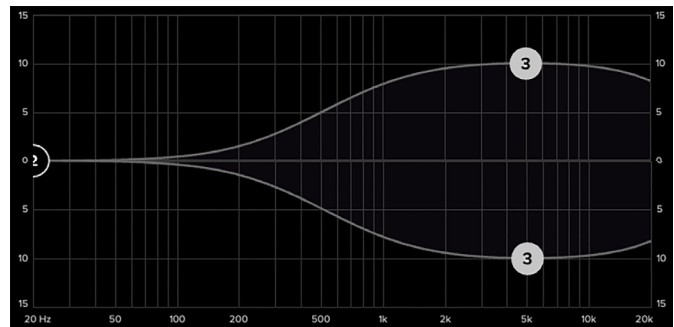

EQ OFF – High Band (3) – 5 kHz at ± 10 dB



Although the Q control does adjust the bandwidth of a filter, the Q value itself is dimensionless; it has no unit of measurement. Some equalizers use the fractional bandwidth of the filter, measured in octaves, to express this parameter. The two parameters are inversely related; a high Q value corresponds to a small fractional bandwidth. The following table lists some equivalent Q and fractional bandwidth values.

Q	BW (oct)		Q	BW (oct)
0.7	2		2.871	1/2
1.414	1		4.318	1/3
2.145	2/3		15	1/10

Channel Setup > EQ at a Glance [Pro]

Parameter	Low Value Limit	High Value Limit	Default
HPF Enable	Off	On	Off
HPF Frequency	20 Hz	700 Hz	70 Hz
HPF Slope	-	-	18 dB/octave
EQ Enable	Off	On	On
Low Gain	-15 dB	+15 dB	0 dB
Low Freq	20 Hz	20 kHz	200 Hz
Low Q	0.1	15	1.89
Mid Gain	-15 dB	+15 dB	0 dB
Mid Freq	20 Hz	20 kHz	1 kHz
Mid Q	0.1	15	1.89
High Gain	-15 dB	+15 dB	0 dB
High Freq	20 Hz	20 kHz	5 kHz
High Q	0.1	15	1.89

Channel Setup > Gate Introduction [Pro]


Gates are typically used to reduce leakage from open microphones. Signals below the threshold level are muted, while signals above the threshold get to pass through. The range control changes the rule slightly. Signals below the threshold are attenuated by the amount of the range setting, while signals above the threshold get to pass through.

The operation of the gate is further modified by the attack, hold, and release controls. In order to open the gate, the input signal must exceed the threshold for at least the duration of the attack time. This is useful for helping the gate discriminate between something that is short duration and long duration.

Once the gate has opened, the hold time begins. The hold timer resets any time the input signal crosses the threshold again, as long as it remains above the threshold for longer than the attack setting. After the hold time passes, the gain falls at a rate determined by the release setting. The range control allows the gate to remain partly open, even if the input is below the threshold.

Channel Setup > Gate On / Off [Pro]

Tap the Gate button to turn the gate on or off. It will illuminate cyan when engaged and is gray when disengaged.

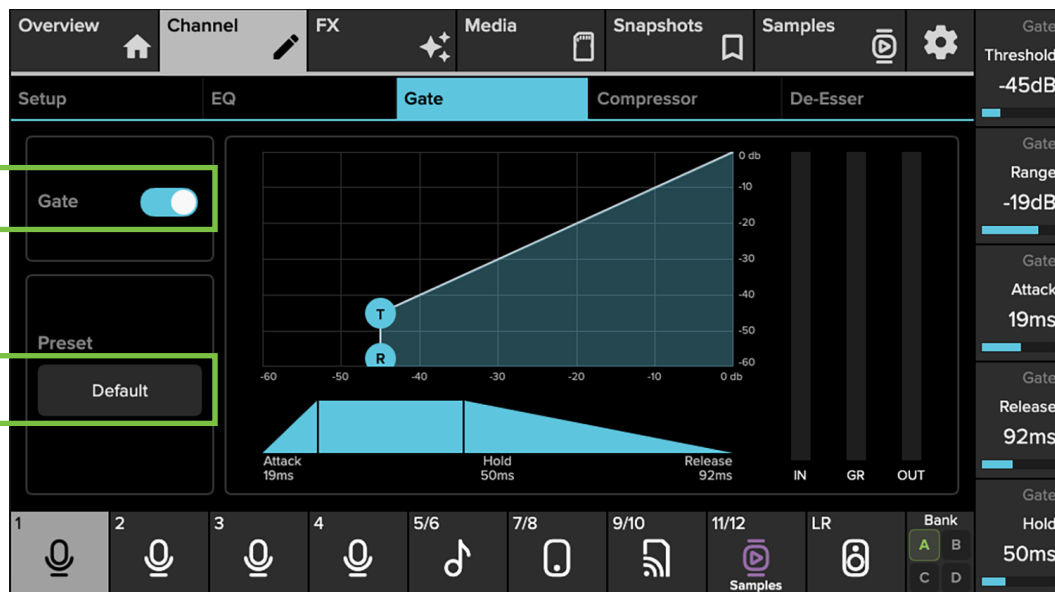

Channel Setup > Gate Presets [Pro]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.

Channel Setup > Gate Display and Settings [Pro]

The gate for each channel may be adjusted by (1) rotating any of the five quick control knobs associated with it (noticing how the base of the quick control knobs match the color of the gate) or (2) moving the threshold and range balls via tap-and-drag. The gate may be adjusted whether the gate is on or off.

Threshold — Threshold determines the level at which the gate acts on the incoming signal. The range of the threshold setting varies from -60 dB to 0 dB.

Range — Range determines how far the gain drops once the signal is below threshold. Setting the range control to something in the -20 to -30 dB range allows some amount of signal leakage when the gate is closed, which may make its action more subtle (less abrupt) and therefore less noticeable. The range of the gated signal varies from -80 dB to 0 dB.

Attack — Attack determines how quickly the gate opens once the signal is above threshold. Short attack times allow triggering on short transients, while longer attack times cause these transients to be ignored. The range of the attack time varies from 0.5 ms to 500 ms.

Release — Release determines how long it takes for the gain to fall to the setting of the range control once the signal falls below threshold and the hold time elapses. The range of the release speed varies from 10 ms to 2 seconds.

Hold — Hold sets a fixed time that the gate remains open once the signal drops below the threshold setting. During the hold time, the gain is held constant, whereas during the release time, the gain is falling at the release rate. The range of the hold time varies from 0 ms to 500 ms.

Channel Setup > Gate Meters [Pro]

These three meters show the input level, amount of gain reduction and output level.

Channel Setup > Gate at a Glance [Pro]

Parameter	Low Value	High Value	Default
Gate Enable	Off	On	On
Threshold	-60 dB	0 dB	-45 dB
Range	-80 dB	0 dB	-19 dB
Attack	0.5 ms	500 ms	19 ms
Release	10 ms	2 s	92 ms
Hold	0 ms	500 ms	50 ms

Channel Setup > Compressor Introduction [Pro]

Compressors are used to reduce or limit transient peaks in a signal. If the signal is too hot, turn down that channel's gain, otherwise leave it alone. As the input level to the compressor increases, the output level increases linearly until the threshold point is reached. After that point, the output level no longer increases linearly. Instead, it increases at a reduced rate determined by the ratio setting.

The attack and release controls affect the rate of the gain change; attack affects the rate of the onset of gain reduction and release affects the recovery rate once the transient has passed.

Channel Setup > Compressor On / Off [Pro]

Tap the Compressor button to turn the comp on or off. It will illuminate purple when engaged and is gray when disengaged.

Channel Setup > Compressor Presets [Pro]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.

Channel Setup > Compressor Display and Settings [Pro]

The compressor for each channel may be adjusted by (1) rotating any of the five quick control knobs associated with it (noticing how the base of the quick control knobs match the color of the comp) or (2) moving the gain, threshold and ratio balls via tap-and-drag. The compressor may be adjusted whether the comp is on or off.

Threshold — Threshold sets the threshold of the compressor in dB below 0 dBFS.

The range of the threshold setting varies from -60 dB to 0 dB.

Ratio — Ratio sets the amount of gain reduction applied as the signal exceeds the threshold level.

The range of the ratio of the compressor varies from 1:1 to 20:1.

Gain — Gain adds make-up gain to the output of the compressor. This is useful to make the apparent volume of the signal the same with the compressor in and out of the signal chain. The range of the make-up gain varies from 0 dB to 24 dB.

Attack — Attack determines how quickly the compressor reacts once the signal is above threshold. Short attack times allow compressing on short transients, while longer attack times cause these transients to be ignored. The range of the attack time varies from 0.5 ms to 500 ms.

Release — Release determines how long it takes for the compressor to end gain reduction once the signal drops back below the threshold. The range of the release speed varies from 10 ms to 2 seconds.



Soft Knee / Hard Knee Compression — This determines the shape of the gain reduction curve at the threshold level. When set to hard [left], the gain reduction curve changes abruptly at the threshold level. When set to soft [right, default], the gain reduction curve changes gently as it transitions to the final ratio amount.

Channel Setup > Compressor Meters [Pro]

These three meters show the input level, amount of gain reduction and output level.

Channel Setup > Compressor at a Glance [Pro]

Parameter	Low Value	High Value	Default
Comp Enable	Off	On	On
Threshold	-60 dB	0 dB	-30 dB
Ratio	1 : 1	20 : 1	2 : 1
Gain	0 dB	24 dB	1 dB
Attack	0.5 ms	500 ms	42 ms
Release	10 ms	2 s	500 ms
Knee	Soft	Hard	Soft

Channel Setup > De-Esser Introduction [Pro]

De-essers are specialized compressors that focus on and reduce or remove high frequencies and sibilance, especially “harsh” sounds such as “ess”, “z”, “ch”, “j”, “sh” and “ts”. There are always exceptions to the rule, of course, but for the most part, sibilance is typically in the 3-8 kHz range.

“De-essing is a dynamic audio editing process, only working when the level of the signal in the sibilant range (the ess sound) exceeds a set threshold. De-essing temporarily reduces the level of high-frequency content in the signal when a sibilant ess sound is present. De-essing differs from equalization, which is a static change in level among many frequencies. However, equalization of the ess frequencies alone can be manipulated to reduce the level of sibilance... Over de-essing can result in the over-manipulation of transients, resulting in the softening or hardening of certain consonants, yielding undesirable effects.”¹

Channel Setup > De-Esser On / Off [Pro]

Tap the De-Esser button to turn it on or off. It will illuminate a blood orange when engaged and is gray when disengaged.

Channel Setup > De-Esser Presets [Pro]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.

¹ De-essing

Channel Setup > De-Esser Display and Settings [Pro]

The de-esser for each channel may be adjusted by (1) rotating any of the four quick control knobs associated with it (noticing how the base of the quick control knobs match the color of the de-esser) or (2) moving the frequency / threshold ball via tap-and-drag. The de-esser may be adjusted whether it is turned on or off.

Frequency — The frequency of sibilance typically runs between 2 kHz and 10 kHz. Here we give you the full 20 to 20 spectrum. The range of the frequency setting varies from 20 Hz to 20 kHz.

Threshold — This parameter should be lowered until the 'esses' are eliminated. The range of the threshold setting varies from -96 dB to 0 dB.




Lowering it too much, however, will result in a muffled sound (aka too much attenuation, or TMA on-the-fly).

Range — This number determines the amount of de-essing, ranging from -15 dB to 0 dB.

Width — This number determines the width between end points; the smaller the number, the wider the end points are from each other.

The range of the width setting varies from 0.1 Q to 15 Q.

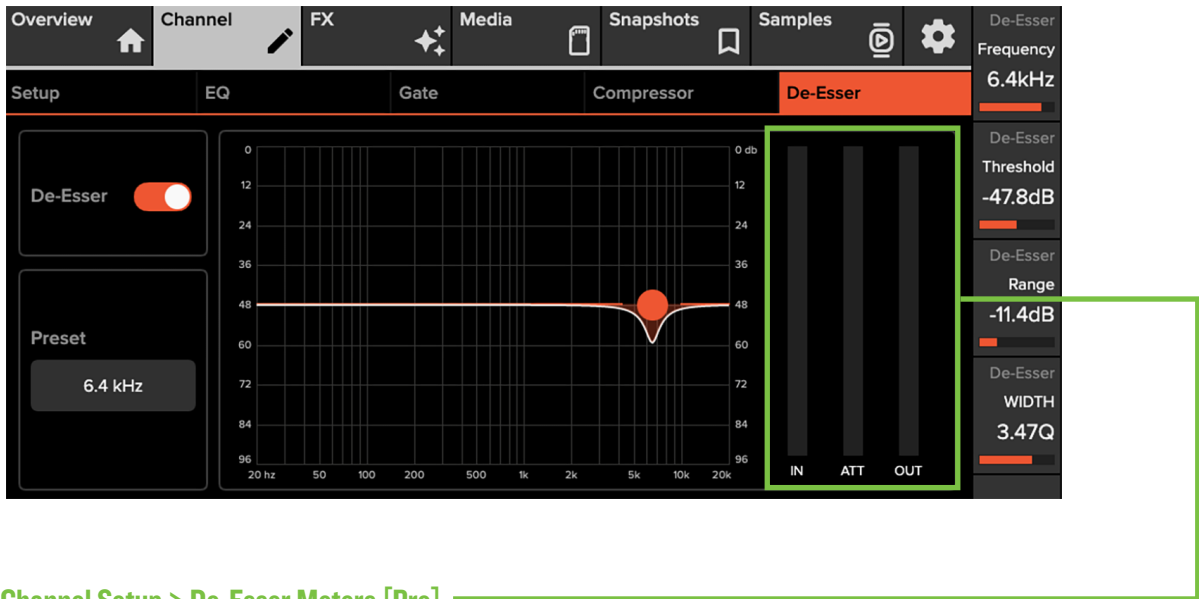

Channel Setup > De-Esser Meters [Pro]

These three meters show the input level, amount of attenuation and output level.


Channel Setup > De-Esser at a Glance [Pro]

Parameter	Low Value	High Value	Default
De-Esser Enable	Off	On	On
Frequency	20 Hz	20 kHz	6.4 kHz
Threshold	-96 dB	0 dB	-47.8 dB
Range	-15 dB	0 dB	-11.4 dB
Width	0.1 Q	15 Q	3.47 Q

Chapter 7 : FX Tab [Enhanced and Pro]

FX Setup > Introduction

FX is the next tab listed. Tap to open it, revealing a screen that looks somewhat like what is displayed below. The DLZ Creator has two FX available: reverb and delay. Reverb simulates the effect of room variations, while delay allows adjustment of the delay effect.



FX are not available when easy mode is selected.

- FX Tab EASY Mode – not available
- FX Tab ENHANCED Mode – pages 47
- FX Tab PRO Mode – pages 48-49

FX Setup > FX Mute On / Off [Enhanced]

Located below the volume knobs are the FX mute switches. Tap the mute switch(es) to turn the reverb and/or delay on or off. It will illuminate orange when engaged [switch to the right] and is grey when disengaged [switch to the left].

FX Setup > FX Presets [Enhanced]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.



FX in Enhanced Mode

FX Setup > FX Volume Knobs [Enhanced]

The FX may be adjusted by (1) rotating one of the two quick control knobs associated with it (noticing how the base of the quick control knobs match the color of each effect) or (2) moving the volume knob via tap-and-rotate. The FX volume may be adjusted whether the mutes are on or off.

Volume – The big volume knobs set the FX send level for the currently selected channel. The volume range for both FX settings ranges from $-\infty$ to +10 dB.

FX Setup > Effect On / Off [Pro]

Located above the level knobs are the FX on/off switches. Tap the mute switch(es) to turn the reverb and/or delay on or off for that channel. It will illuminate purple [reverb] or cyan [delay] when engaged and is grey when disengaged.

FX Setup > FX Presets [Pro]

Presets save parameters and may be recalled as needed. DLZ Creator comes with a library of factory presets. There are also user presets. These may be created for each preset type.

An entire chapter is dedicated to presets. This includes detailed instructions and multiple screenshots every step of the way. Please check it out on pages 76-79.



Reverb in Pro Mode



Delay in Pro Mode

Below the FX preset pull-down and effect on/off switch are a total of eight rotatable knobs – four on the Atomizer Reverb and four on the ChronoTronic Delay. Flip the page and let's take a look at what these do!

FX Setup > Atomizer Reverb Settings [Pro]

The reverb may be adjusted by (1) rotating one of the four quick control knobs associated with it (noticing how the base of the quick control knobs match the color of each effect) or (2) moving the knobs via tap-and-rotate. The FX may be adjusted whether the effects are on or off.

Pre-Delay — When listening to a live performance, direct sounds are reached first, followed by reverberation caused by room reflections. The pre-delay is the amount of time between when the direct sounds arrive and when the reflections arrive. The range is 0 ms to 50 ms.

The speed of sound is approximately 340 meters per second (1100 feet per second). This means that in one millisecond, it travels 0.34 meters (1.1 feet). As a rough idea, think of 1 ms as the time it takes for sound to travel one foot.

Decay — This represents the decay time of the reverb. The range is 200 ms to 8 seconds.

Low Pass — This applies a low-pass filter to the reverbed signal and rolls off the higher frequencies. It ranges from 400 Hz to 20 kHz.

Reverb Level — This sets the reverb FX send level for the currently selected channel. The range is -inf (off) to +10 dB.

FX Setup > Atomizer Reverb at a Glance [Pro]

Parameter	Low Value	High Value	Default
Atomizer Reverb Enable	Off	On	On
Pre-Delay	0.0 ms	50.0 ms	0.0 ms
Decay	200.0 ms	8.0 sec	200.0 ms
Low Pass	400 Hz	20 kHz	20 kHz
Reverb Level	-inf	+10 dB	-inf

FX Setup > ChronoTronic Delay Settings [Pro]

The delay may be adjusted by (1) rotating one of the four quick control knobs associated with it (noticing how the base of the quick control knobs match the color of each effect) or (2) moving the knobs via tap-and-rotate. The FX may be adjusted whether the effects are on or off.

Delay Time (Decay) — This knob sets the current delay time, ranging from 100 ms to 2.0 seconds.

Feedback — This controls how much of the delayed signal is routed back to the input of the delay section to create multiple echoes. Each time the signal is fed back, the delayed signal becomes quieter (so the echo won't go on forever unless set at 100%). It ranges from 0% to 100%.

Low Pass — This applies a low-pass filter to the delayed signal and rolls off the higher frequencies. It ranges from 20 Hz to 20 kHz.

Delay Level — This sets the delay FX send level for the currently selected channel. The range is -inf (off) to +10 dB.

FX Setup > ChronoTronic Delay at a Glance [Pro]

Parameter	Low Value	High Value	Default
ChronoTronic Delay Enable	Off	On	On
Delay Time (Decay)	100 ms	2.0 sec	500 ms
Feedback	0%	100%	50%
Low Pass	20 Hz	20 kHz	8 kHz
Delay Level	-inf	+10 dB	-inf


Chapter 8 : Media Tab

Media Setup > Introduction

Media is the next tab listed. Tap to open it, revealing a screen that looks somewhat like what is displayed below.


This allows direct access to compatible media files on an inserted microSD card or USB flash drive. Additionally, recordings that were made are stored here within the 'DLZ_Creator_Recordings\' folder and are available for playback.

The media tab looks and functions exactly the same for all three modes. Let's go through the media tab, checking out all the things we can tap, select, play, edit, delete and more.

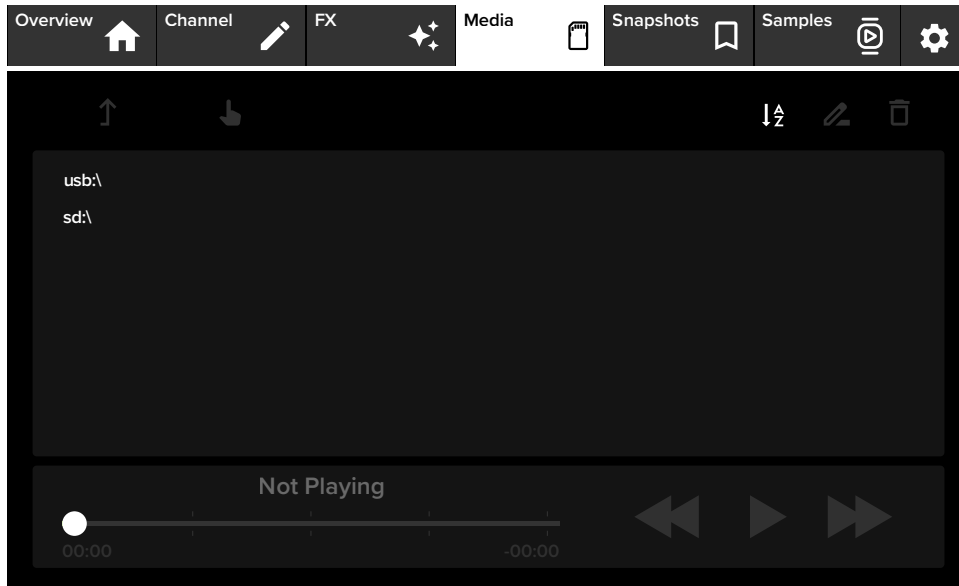






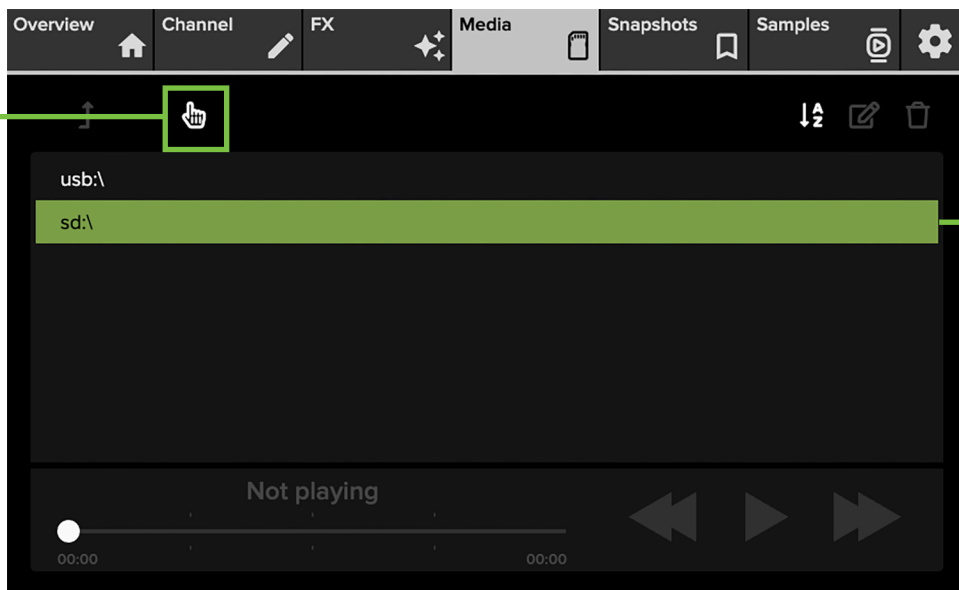

Right out of the gate, there is only one thing to do: select where you will be getting the media files. Are the files you desire on the flash drive... or are they located on the microSD card? Tap usb:\ or sd:\ so it is highlighted.

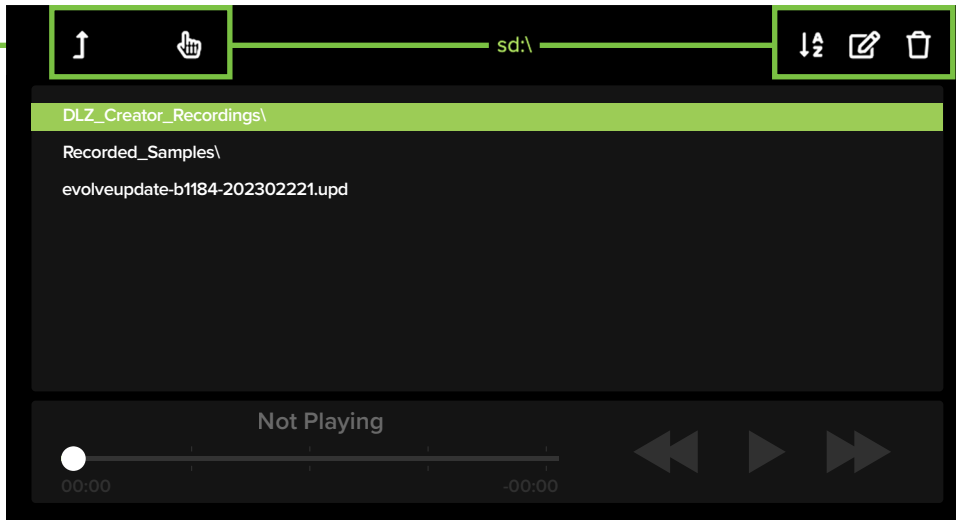In addition to the media file being highlighted, notice how the 'index finger' icon also turns from grey to white.



Press the 'index finger' icon in order to see what files are on the selected drive followed by tapping the desired file so it is highlighted. All icons on the top row are no longer greyed out and are now available for selection... and action!
We will describe each icon from left to right.




- 
 - First up is the arrow pointing upwards. Simply put, tapping this icon returns you to the previous screen.
- 
 - Next up is the 'index finger' icon. We have already tapped it on the previous page. After a drive, file or folder is highlighted, tapping this icon selects (or opens) it.
- 
 - Now we're swinging over to the upper-right side – or Upper East Side for our friends in New York! – of the media tab.
 - When the A-Z icon is visible, all files will be presented in alphabetical order.
- 
 - When tapped, this icon turns into an hourglass... (or a timer if you're playing a board game... hurry!). If the hourglass icon is present, then the files are arranged in order of creation with the oldest file (i.e. the oldest recording) at the top. Most importantly, never forget: "Like sands through the hourglass, so are the Days of Our Lives."
- 
 - A pen is forever, but mistakes and updates can be made with a pencil and eraser! That is why we went with the pencil and eraser icon... to make edits!
 - Tapping this icon brings up the keyboard. Type in the name you would rather have for the selected file/recording followed by tapping "Enter". The name is limited to 36 characters.
- 
 - The final icon on the top row of the media tab is an image of a trash can. If you thought that tapping this icon would result in Oscar the Grouch® from Sesame Street® popping his head out, you'd be correct! Oh, how I wish... how cool would that be?! In reality, tapping this icon results in deleting the selected file/recording. This is a permanent deletion with no undo, so a confirmation dialog helps prevent accidents.

The fourth sentence on the previous page states, "Additionally, recordings that were made are stored here within the 'DLZ_Creator_Recordings\' folder and are available for playback." Flip the page to find out how!


These are the steps in order to get playback from one of the recordings:

- Select the recording you want for playback by tapping it; this can be from either the usb:\ or sd:\ drive. The chosen file will illuminate green.
- The recording is only selected at this point, but it needs to be loaded, too. Tap the 'index finger' icon to load the file.
- The file will immediately start playback, as seen below.

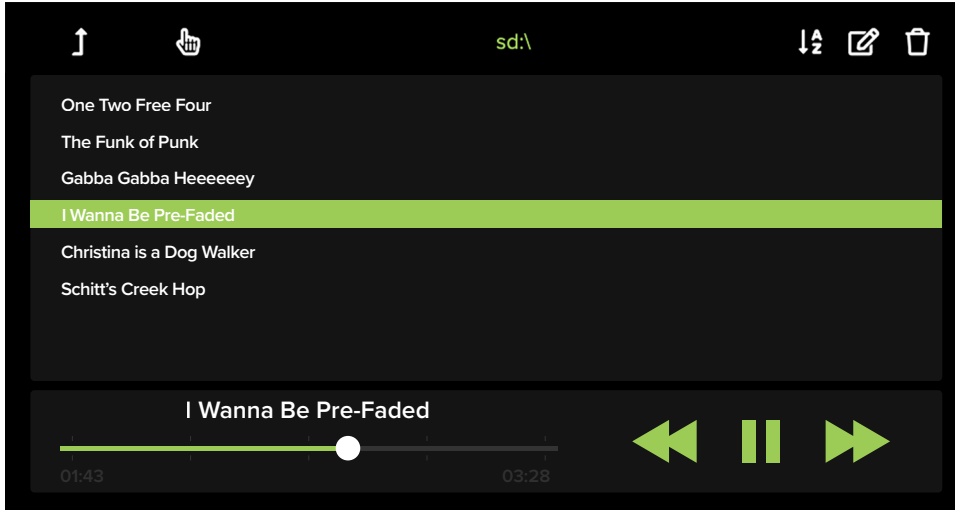

You may recall way, way, way back in an early chapter that we named the Channel 1 ID “Johnny”. That would be in tribute to Johnny Ramone, guitarist of seminal punk band, the Ramones. The next three Channel IDs were named after the remaining members of the classic lineup: Joey, Dee Dee and Tommy. While the band is no longer – or the band members for that matter – this is a podcast where the group discusses all things Ramones.

- Now we just need to make sure the source and levels are set correctly (if not already). Return to the channel tab and tap the channel 9/10 channel ID button. Confirm that the channel 9/10 channel source is set to SD/USB.

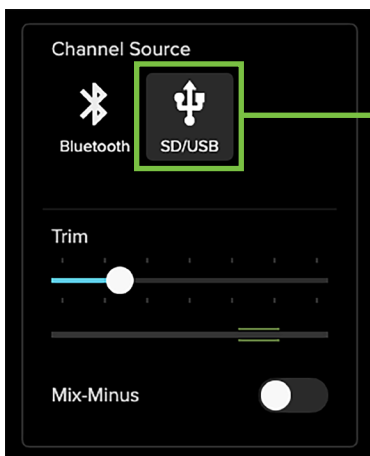

- Raise the channel 9/10 fader up to unity and make sure the headphone (and/or main L/R output) levels are above –inf.
- Repeat the steps above to play back other recordings!

Chapter 9 : Snapshots Tab


Snapshots Setup > Introduction

Not to be confused with Snapchat®, the snapshots tab reveals the snapshots. This (along with the addition of the current state) makes up the DLZ Creator's file system. Before diving directly in, let's do a quick overview of the file system.

Snapshots save every parameter associated with its operation with the exception of the hardware: power switch, quick control knobs, fader levels, and solo and mute. The current state of all parameters is constantly stored so the console powers on in the same state as when it was turned off, just like an analog console. Please note that it will default to the overview tab when powered back up, even if turned off with a different tab open.

The file system consists of the following:

- (1) **Current State** — When DLZ Creator is turned on, it wakes in the state that it was in when it was powered off, but on the overview tab.
- (2) **Snapshots** — A snapshot is just that: a “photograph” of the current state of the DLZ Creator.

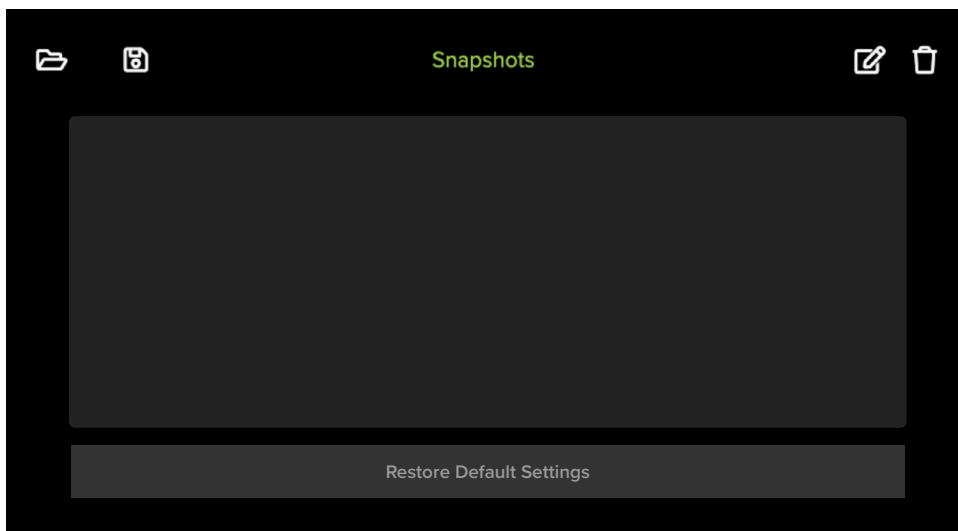

As just mentioned, a snapshot is just that: a “photograph” of the current state of the DLZ Creator. So why would you create snapshots? For one example, the previously mentioned Ramones fanatics who run their own podcast may have different snapshots depending on if it's all talk or if they're also playing Ramones tunes back to the listening enthusiasts. So snapshots may be created for in-between song banter. Or snapshots could be created with and without FX. The possibilities are unlimited!

The following is a list of features that are stored in a snapshot:


- Input channel settings
- FX channel settings
- Main LR channel settings
- Channel ID

The following is a list of features that may not be snapshot:

- Solo
- Mute
- Board (Fader) Settings
- Recording / Playback

Ok, that's what they are, but how do you create them?


Step 1 — Creating snapshots: Creating snapshots is easy. Simply set gains, pans, DSP (EQ, dynamics, FX, etc.) for each snapshot that you are going to want to recall at a later time.



As user-friendly as creating snapshots may be with DLZ Creator, if this is your first time creating them, it might be best to start off simple until you get the hang of it. Go ahead and name some channel inputs and load up a couple of colors and icons, as well. If feeling brave, set some EQs, gate and compressor levels, too.

Now return to the snapshots tab by tapping it. It may be mostly barren now, but will fill up soon.


Tapping the disk icon will store the current state of the console – the EQs, gates and compressors, etc. that you just set – into a new snapshot. Doing this is similar to pressing a “Store” button on other consoles.

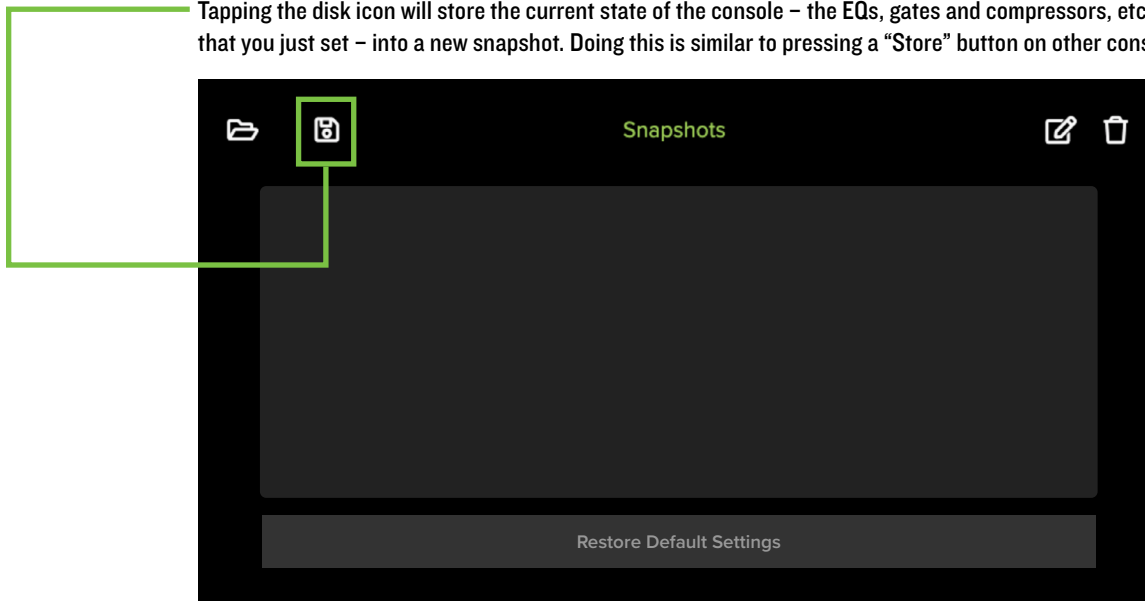

Step 2 — Naming snapshots: You created a snapshot, but how do you know what it represents? By naming it, of course! Once the disk icon is tapped [save], the keyboard appears awaiting for the snapshot to be named. Name the currently selected snapshot as you so desire followed by tapping the “Enter” key when satisfied.



Snapshots are limited to 36 characters. This includes letters, numbers and special characters. The text will remain green until the limit is reached, in which the text will turn red indicating that you have hit the limit.

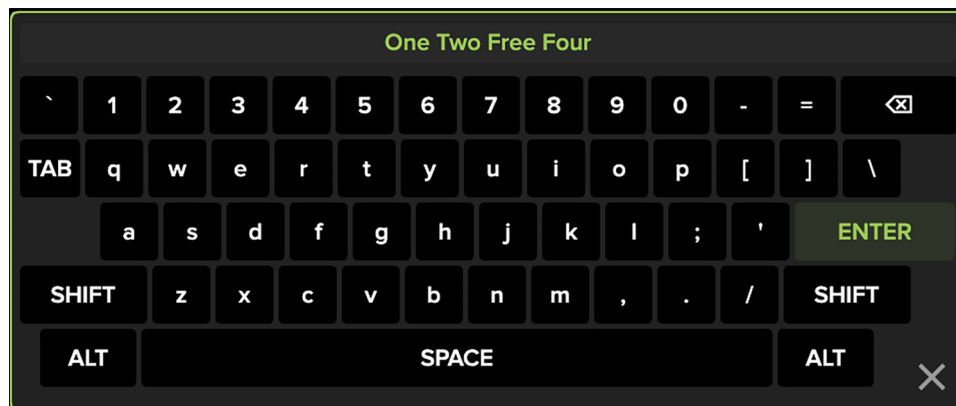


Once the snapshot(s) have been named, they will be placed in alphanumerical order on the snapshots list.

Step 3 — Recalling snapshots: Now that you've created and named the snapshots, it's time to recall them! On recall, all appropriate console parameters change to match the stored snapshot.



Tapping 'Restore Default Settings' will set the DLZ Creator to its default (which – for all intents and purposes – is a zeroed out board). 'Restore Default Settings' is always listed on the bottom and cannot be renamed, replaced or deleted; only recalled. In fact...

Go ahead and start by tapping 'Restore Default Settings' so it is highlighted. You will immediately be greeted with the following confirmation dialog:

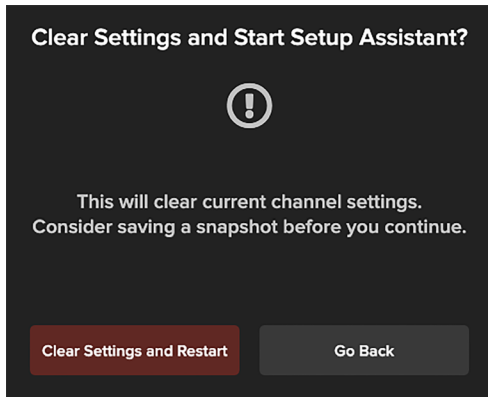


As stated, this clears all current settings... but it will keep all snapshots, of course! Tap 'Clear Settings and Restart' if ready to wipe the board or 'Go Back' if you need to save a snapshot first. Lucky for us, we DID save a snapshot already. We will recall it shortly. After tapping 'Clear Settings and Restart', DLZ Creator will reset all settings and return to the overview display.


Now return to the snapshots tab. Notice that the snapshot(s) you created are still there! Tap the snapshot you want to recall so it is highlighted:

The next thing to do is to tap the open folder icon: RECALL. On recall, all appropriate console parameters change to match the saved snapshot.

A confirmation dialog will appear. As stated, all unsaved data will be lost... but it will keep all snapshots, of course!

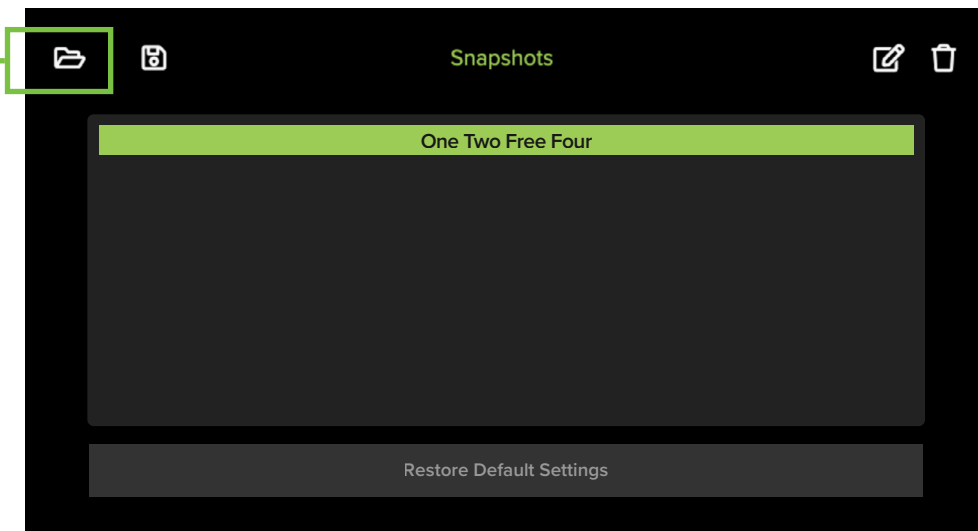


Tap the green checkmark if ready to continue or the red “X” if you need to save a snapshot first. After tapping the green checkmark, DLZ Creator will recall all settings of the snapshot and return to the overview display.

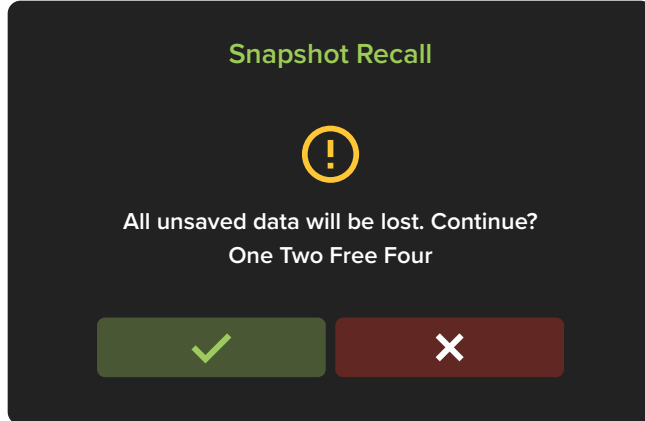


Let's take a look at some of the other features on the snapshots display! Located underneath the samples and settings tabs are two additional snapshot features: edit and delete. Now that you have created and recalled a snapshot, we will first edit it...

...followed by deleting it. Say it ain't so?!


Step 4 — Editing snapshots: The *only* thing that editing snapshots does is return you to the keyboard to rename the snapshot as seen in step two a couple of pages back.



No settings are changed, only the name. However, if you want to change the settings, then simply change them to what you want and save it as a new snapshot or save over the current snapshot (understanding that the previous settings will be replaced by the new ones).

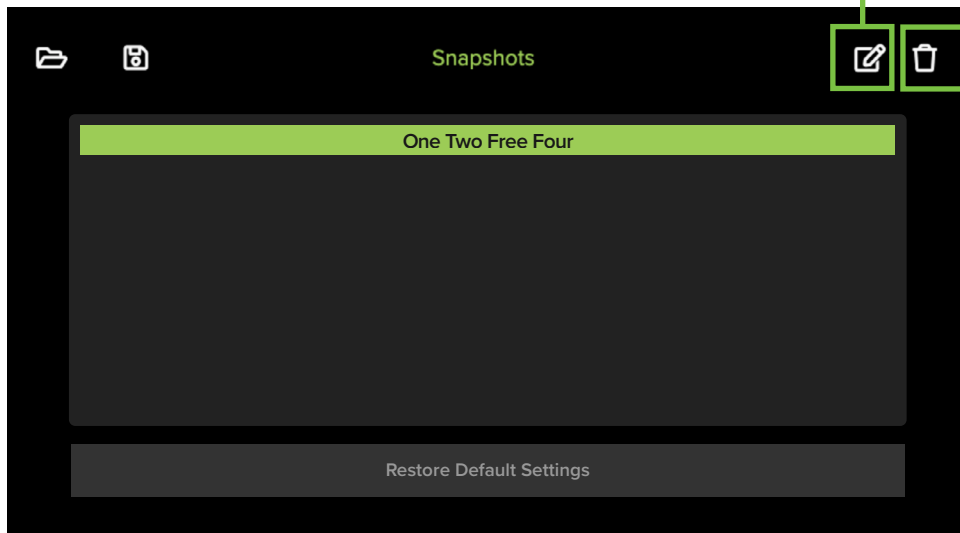

Step 5 — Deleting snapshots: Tapping delete – the garbage can icon – deletes the currently selected snapshot. This is a permanent deletion with no undo, so a confirmation dialog helps prevent accidents.

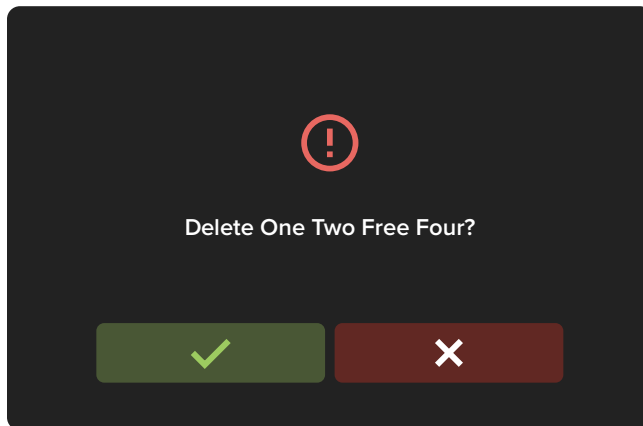

Chapter 10 : Samples Tab

Samples Setup > Introduction

The second to last tab listed on the navigation bar is 'Samples'. Tap to open it, revealing a screen that looks somewhat like what is shown below. In short, this screen displays a summary of all the sample pads, including the sample name and playback length, pad color, opportunity to edit, etc.


There are a total of 24 samples that may be created and saved: six separate samples in four different banks (A1-A6, B1-B6, C1-C6 and D1-D6, with Bank A opened below). The six samples displayed below come pre-loaded with DLZ Creator.

These samples may be edited to your heart's content. However, they will be re-installed if the DLZ Creator is factory reset.

As mentioned above, each bank has its own sub tab. These other banks may be accessed simply by tapping them. The selected bank will be highlighted green.



Notice also that the headphone levels may still be raised and lowered via the quick control knobs (located on the hardware to the right of the headphone levels).

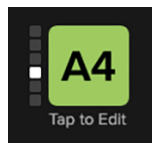

As seen in the image above (as well as upcoming images), the bank and bank number resides in the middle of each sample pad display regardless of the name, color and/or playback mode. These represent each bank and sample and cannot be changed or removed. Trust us, it's for the best, as it is for easy identification, even after you rename it something goofy.


Since we are banking – yes, pun very much intended – on you keeping the six pre-loaded samples, let’s go ahead and tap ‘Bank B’ so it opens.



While six samples have been baked into ‘Bank A’, by no means are you forced to keep them. Feel free to keep, change, delete, whatever... it’s your DLZ Creator mixer!


All six samples displayed below are gray and white, indicating that no samples have been assigned to them yet. This is also true of the remaining banks.

If we tap anywhere in one of the sample boxes, it opens up the editing features of that sample.

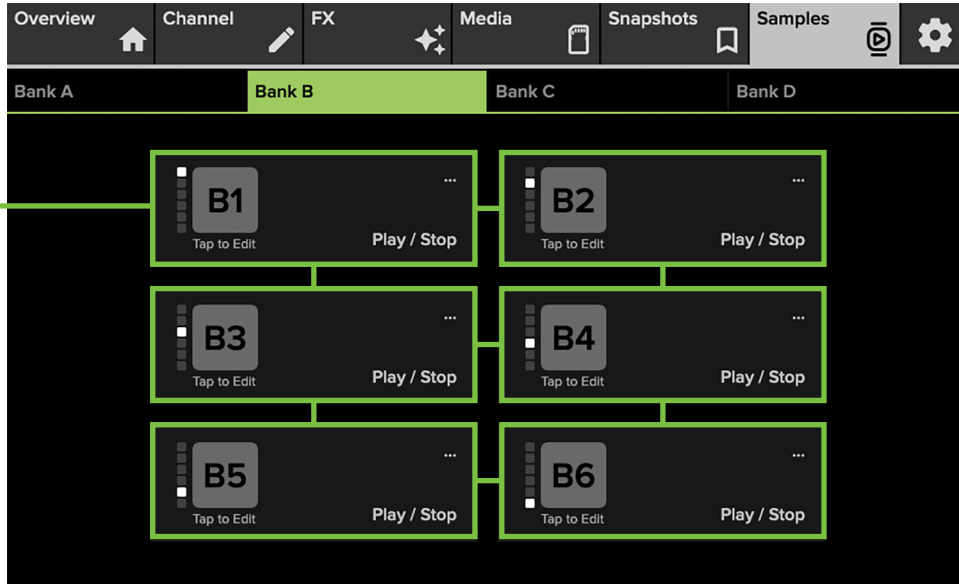

The first thing that has to be done is either a microSD card and/or USB flash drive has to be connected to DLZ Creator. After that,...

- (1) a sample has to be recorded, or...
- (2) a sample has to be loaded from disk, be it microSD or USB.

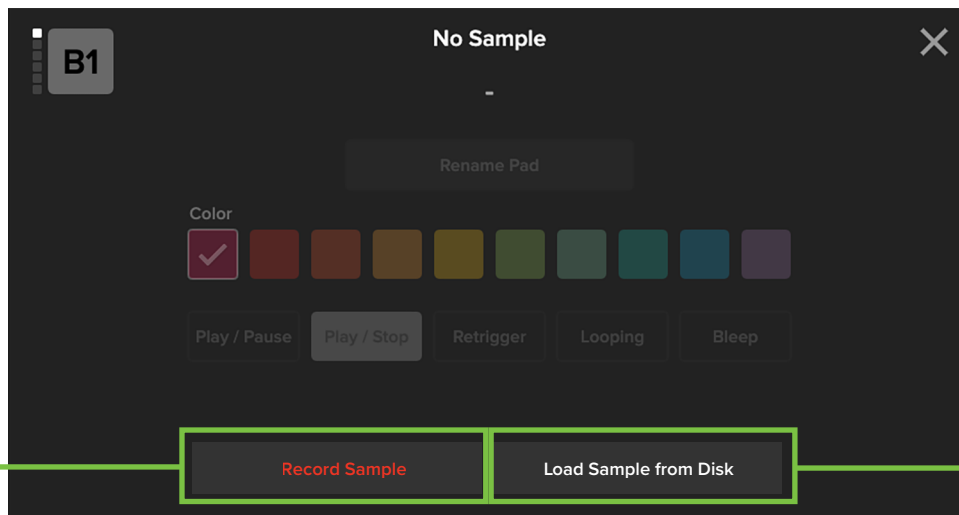


Record Sample – If you want to record a sample, the very first step is to make sure that you have the correct bank and sample pad selected. For this example, we will use Bank B, Sample 1. As such, B1 is displayed in the upper-left corner of both views near the top of the following page.

Next, tap 'Record Sample' followed by tapping 'Start Recording'. This begins recording from the main L/R track. Once tapped, the 'Start Recording' button turns to 'Stop Recording', the record time is displayed and the universal image for recording – the red circle • – also appear.

Once the sample has been recorded, it is time to tap 'Stop Recording'. This writes the file to disk and assigns it to the assigned pad. Additionally, this will return you to the previous display – the sample settings page – where the sample pad may be (re)named, a color may be assigned to the pad and the pad's playback mode chosen.


Now, if 'Record Sample' was an accidental tap, simply tap 'Cancel' or the 'X' in the upper-right corner of the display to return to the previous view. You can only stop a recording after it has started; it cannot be cancelled.

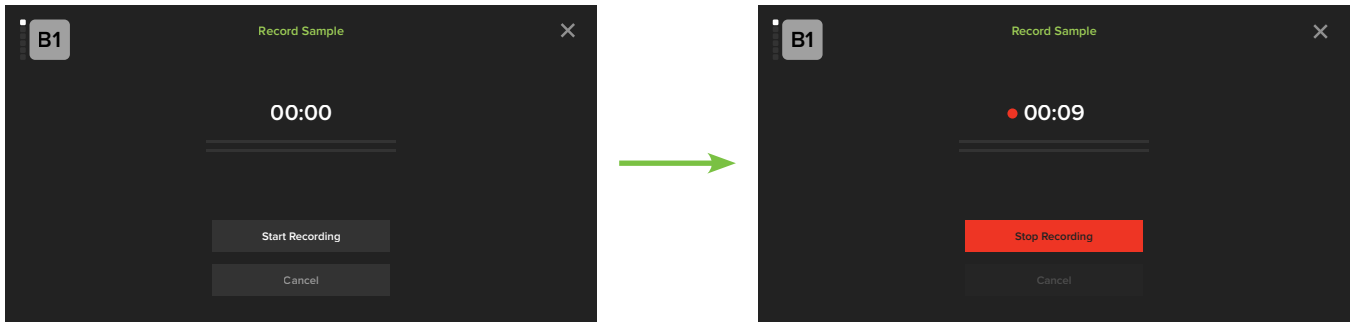

Load Sample From Disk – The other choice is to load a sample that was pre-recorded and saved to disk.


Out of the gate, there are really only two things you can do here and that is to either (1) load a sample or (2) exit.

If 'Load Sample from Disk' was an accidental tap, simply tap 'Cancel' or the 'X' in the upper-right corner of the display to return to the previous view.

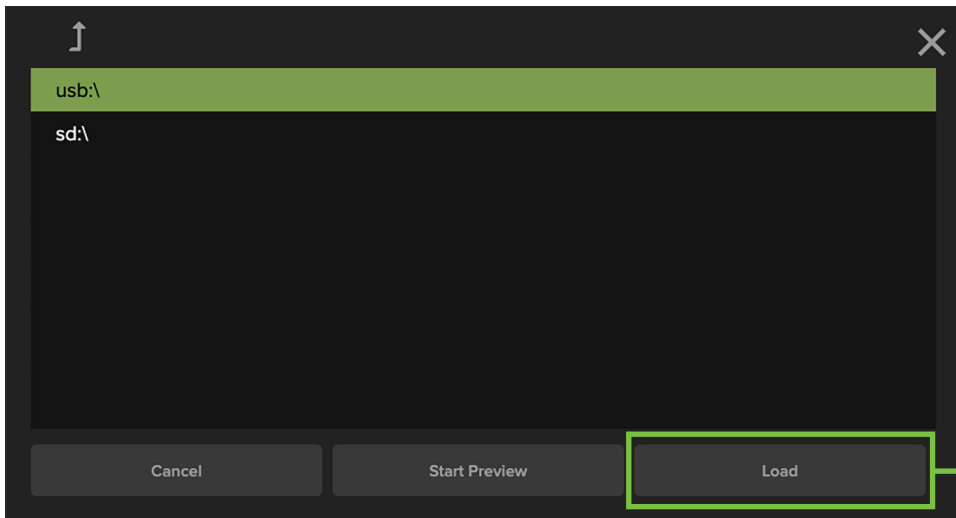

Since it was NOT an accidental tap, go ahead and FIRST tap the source of the sample so it is selected and highlighted. This will either be the usb:\ drive or sd:\ drive. I have placed some samples on a USB drive, so that is what I selected.


Now tap 'Load' in order to view all of the files on the drive. Notice all of the samples on the USB drive below! Simply tap-and-drag the display up and down to view other samples that may be hidden below, then highlight the sample you would like to load. 'Christina is a Dog Walker' in the example below.

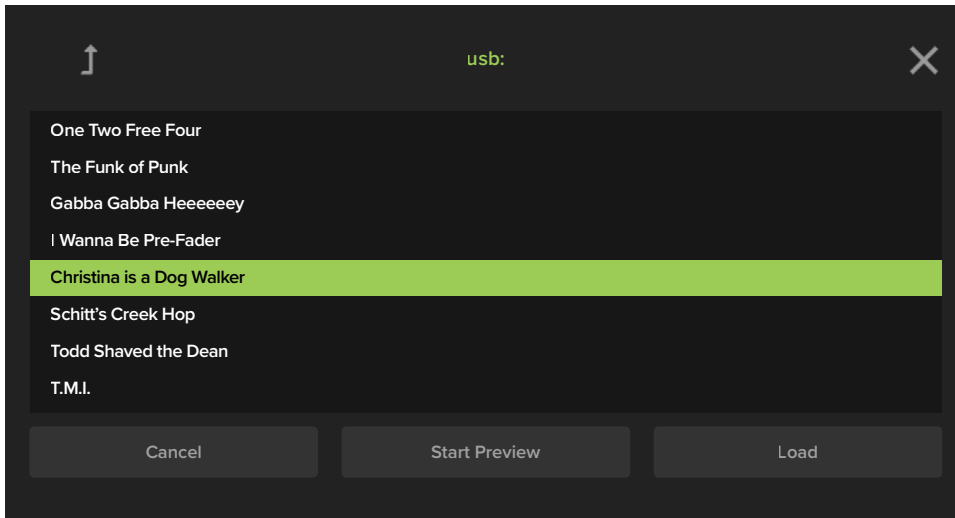

From here, there are a few choices to make. You could return to the previous view by (1) tapping the up arrow in the upper-left corner of the display, (2) tapping the "X" in the upper-right corner of the display or (3) tapping 'Cancel' in the lower-left of the display.

However, we're here to LOAD a sample, not back out to the previous view! So, the choices, then, are to (1) 'Start Preview' which only PLAYS the selected sample; it does not load it to the assigned pad, or (2) 'Load' which LOADS the selected sample and assigns it to the selected pad.

The display will look similar to what is displayed below after tapping 'Load'. And now that a sample has been recorded (or loaded) and assigned to a sample pad, it is time to give it some flavor! We will start at the top and work our way down.

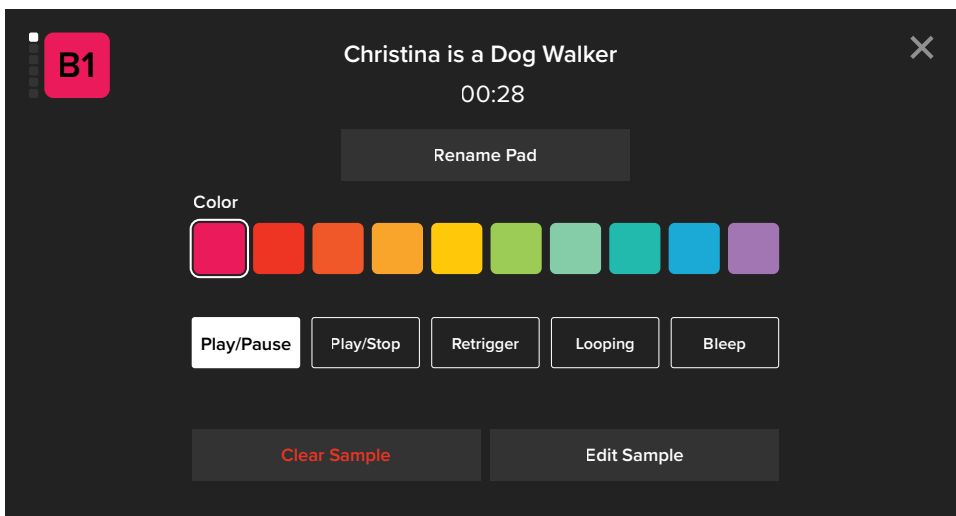

- **Rename Pad** – The sample is initially named as it was on the disk that it was loaded from... but it may be renamed. Tapping 'Rename Pad' reveals an on-screen keyboard so that the pad nickname may be edited.
- **Color** – The sample is initially colored hot pink [the default color]... but it may be changed. Tapping on another color will select that color for that pad. The selected color will have a white outline, as well as a white check mark in the middle, indicating that it has been chosen. Additionally, the sample color will change in the upper-left corner of the display and the actual sample pad on the hardware will also update to the chosen color.

- **Playback Mode** – There are five different playback modes to choose from, with ‘Play / Stop’ as the default... but it may be changed. Listed below are the five playback modes and their playback behaviors:
 - **Play / Pause** – Play / Pause plays the sample from start to finish. However, the sample may be paused by pressing the sample button again. If the sample button is pressed a third time, the sample will continue to play from the paused point. The sample may be played and paused until the end of the sample is reached.
 - **Play / Stop** – Play / Stop also plays the sample from start to finish. The sample may be stopped early by pressing the sample button again. If pressed again, though, it will restart the sample from the beginning.
 - **Retrigger** – Retrigger is similar to Play / Stop as it also plays the sample from start to finish. In fact, it will do so if you allow it. However, you didn’t set this up as a Play / Stop. It’s a Retrigger!
With Retrigger, you’re supposed to tap the sample button again. This ends the currently playing sample and starts the sample playback from the beginning.
 - **Looping** – Like Play / Stop, Looping also plays the sample from start to finish. However, once the sample has finished playing, it will “loop back” to the beginning and play the sample again repeatedly until the sample button is pressed again.
 - **Bleep** – If Bleep is the selected playback mode, the sample pad acts as a momentary switch, only playing the sample when the button is tapped and held down. The sample will stop playback once the button has been released.
If ‘Bleep’ is the selected playback mode for a sample pad, it will override all other sources so that only the sample is heard. If the sample plays to the end, it will “loop back” to the beginning and play the sample again repeatedly until the sample button is released.

As you might expect, only one playback mode may be selected per sample pad (although it would be quite odd to have more than one!).

Regardless of the playback mode(s) chosen:



The sample buttons will illuminate brighter – in their selected colors – during playback.




All six sample buttons are on their own chain. What this means is that multiple samples may be played simultaneously.

- **Clear Sample** – This is your basic “delete” function. Do you not like the sample? Ready to make an update, a change or something else? Tap ‘Clear Sample’ to “unassign” the file from the sample pad and return it to an unassigned state.



- **Edit Sample** – Let’s have some fun with the sample now! Tap ‘Edit Sample’ to reveal something similar to what is displayed below:

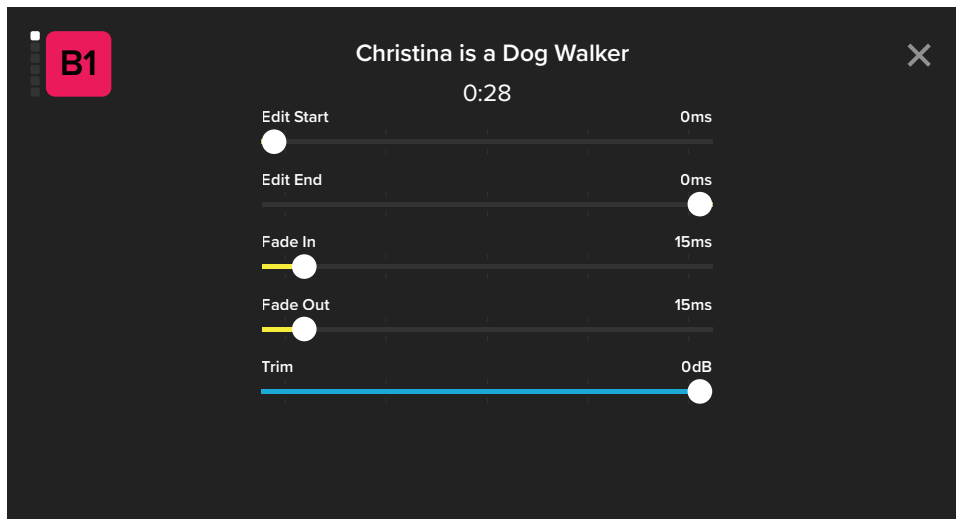

As you can see, we are able to edit each sample’s start and end time, as well as their fade in and out time and trim level. Samples may be edited by (1) rotating one of the five quick control knobs associated with it (noticing how the base of the quick control knobs match the color of each parameter) or (2) tapping-and-dragging the sliders left and right.

- **Edit Start** – This parameter adjusts the point to where the sample should start playing. It is measured in milliseconds from the beginning of the file. It ranges from 0 ms [the default] up to a max of 3000 ms.
- **Edit End** – This parameter adjusts the point to where the sample should stop playing. It is measured in milliseconds from the end of the file. It ranges from 0 ms [the default] up to a max of 3000 ms.
- **Fade In** – This parameter sets the duration for the sample to fade in. It is measured in milliseconds from the start point of the sample. It ranges from 1 ms up to a max of 1000 ms (with 3 ms as the default).
- **Fade Out** – This parameter sets the duration for the sample to fade out. It is measured in milliseconds from the end point of the sample. It ranges from 1 ms up to a max of 1000 ms (with 3 ms as the default).
- **Trim** – This final parameter sets the attenuation of the recorded sample. It is measured in dB ranging from –40 dB up to a max of 0 dB [the default].



The settings listed above are non-destructive. What that means is that the entire sample is still there, still available. Editing simply “edits” the sample to your liking. If you don’t like it and want the entire sample, just reset the sliders to their default positions.


Tapping any of these slider’s balls twice quickly will set them to their default (except for fade in/out, which will be set at 1 ms).

The edits are saved simply by tapping the “X” in the upper-right corner. It will return you to the previous view.

Now that you know how to switch between banks, record and/or load samples, name them, add color, assign them playback modes and edit the samples, it is time to follow the previous steps for the other unassigned sample pads!



At the top of the chapter, we mentioned and displayed the six factory default samples. Guess what? You don’t have to keep them! Go ahead and make ’em your own! Did you do that and now want the factory default samples back? Guess what? They’re stored on local memory, so all you need to do is a factory reset.

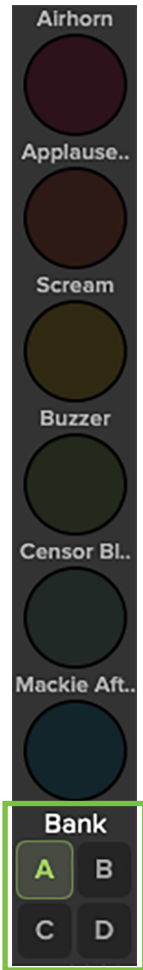

Here's something cool that we discussed way back in the day, but it's worth bringing up again.

You do not need to manually navigate to the samples tab to edit individual samples! Wait, what?! But how...?

Yo, check it! From the Overview screen, you can easily switch between banks by tapping the bank that you want to access. The bank's letter will illuminate, confirming the selected bank.

The samples will then be whatever you added to that particular bank and the sample pads will also change color to what you assigned to them.

But that's not all! Displayed above the bank "box" are the six samples from that bank. They are laid out vertically on the display, just like they are on the hardware. Double-tapping a sample will take you to that sample pad's page.

When the day is over and you need to unwind, simply load up DLZ Creator's version of 'Simon™', available within the sampler tab [Sampler > DLZimon™]. Like its circular tabletop counterpart, this works similarly in that DLZ Creator will simultaneously emit a quick sound and flash a brightly colored light (i.e. sample pad). You will then have to repeat the sequence back to DLZ Creator... in the same order. The game ends when you incorrectly guess the order.




Don't forget that there are three levels of game play. Be sure to set it up in Settings >System: [Easy, Enhanced or Pro].

Chapter 11 : Settings Tab




Settings > Introduction and System

Settings is the final tab listed. But make no mistake... it is every bit as valuable as the previous tabs! Tap to open it, revealing a screen that looks somewhat like what is displayed below.


The first thing to notice here is the chosen mode: Pro. However, the display looks exactly* the same for all modes, regardless of the mode chosen.

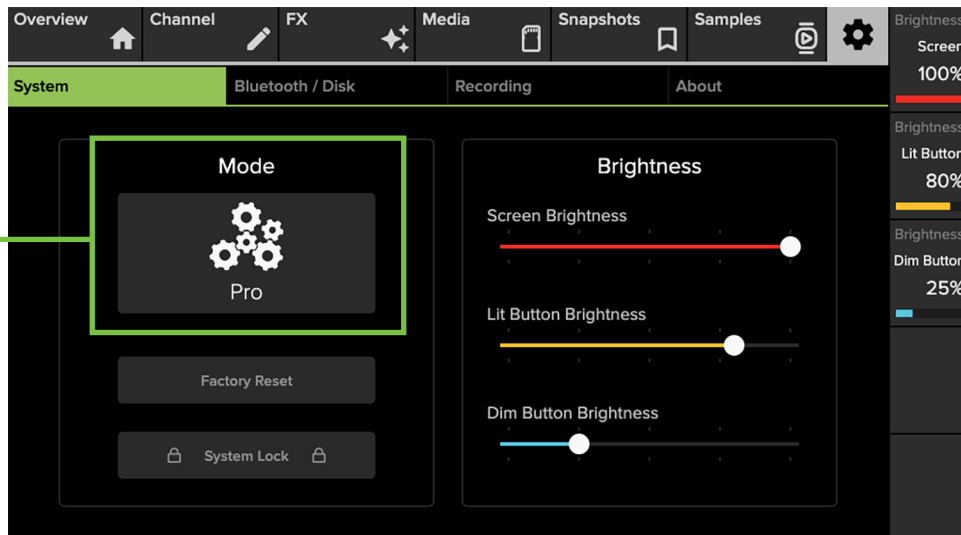

*Ok, fine, it's not *exactly* the same for all modes. No. In fact, the difference is the following. Pro (outlined above) is replaced by easy or enhanced (displayed below along with pro). The amount of gear icons that are displayed relates to the number of additional features that are available for the chosen mode. More gear icons means more features. Of course this only relates to *some* of the tabs and sub tabs as discussed in previous chapters.

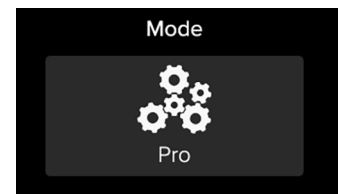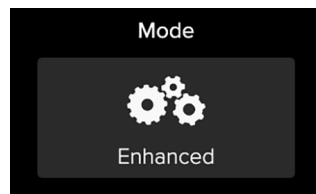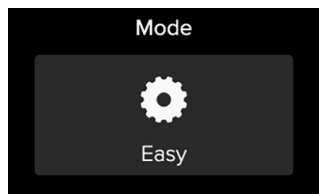


Settings > System > Factory Reset



It may be necessary to reset the DLZ Creator to its factory settings.


Please keep in mind that this erases all settings, including any levels, EQs, FX, presets, etc. that may have been set. Be sure to power down any amps and/or powered speakers before factory resetting DLZ Creator and save a snapshot so nothing is lost!

Simply tap the 'Factory Reset' button to reset the DLZ Creator to its factory settings. This is a permanent reset – everything zeroed out – so a confirmation dialog helps prevent accidents.

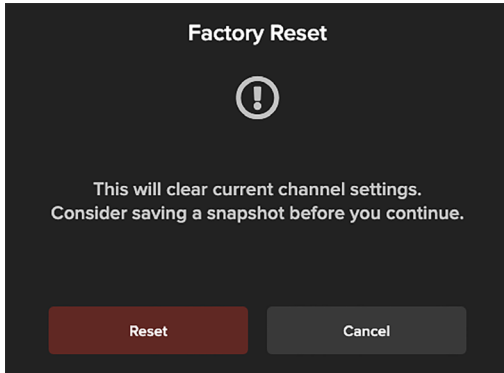


In addition to all of the settings being erased, you are also wiping the DLZ Creator's memory of previously paired devices. To remedy this, on your phone, tablet or other Bluetooth device, you will need to 'forget device' in the Bluetooth settings, then re-pair in order to regain communication and functionality.

Settings > System > System Lock




Setting a four numbers passcode will "lock the system" to the overview screen.

Tap 'System Lock' to begin. At this time, you will be prompted to enter and lock a four number passcode.

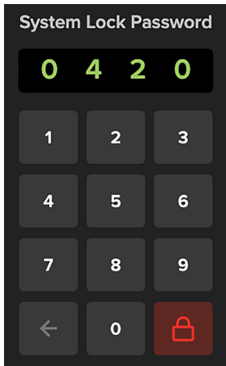

The tabs on the navigation bar will now be hidden, preventing any unwarranted changes. To re-introduce the tabs to the navigation bar, tap the key icon and enter the four character passcode.

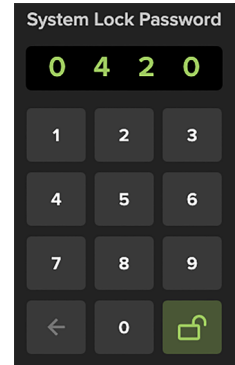

Be sure to remember the passcode! If you forget, you will not be able to access these controls ever again! Read that sentence again... Ok, fine, you got us, there is a secret squirrel workaround. Press and hold the Home and AutoMix buttons down until the mixer unlocks (which is roughly ~10 seconds).

Settings > System > Brightness

The brightness levels of (almost) all LEDs may be adjusted by (1) rotating one of the three quick control knobs associated with it (noticing how the base of the quick control knobs match the color of each brightness level slider) or (2) moving the sliders left and right via tap-and-drag. The brightness of all buttons and the display may be changed. However, the Home, Rec and AutoMix buttons will always remain at 100% brightness.

Screen Brightness — This sets the overall brightness level of the main display, ranging from 0% to 100% [default 100%].

Lit Button Brightness — This sets the overall brightness level of the lit buttons, ranging from 0% to 100% [default 80%]. The lit buttons are the six sample pads.



Dim Button Brightness — This sets the overall brightness level of the dim buttons, ranging from 0% to 100% [default 25%]. The dim buttons include the mute and solo buttons.



Did you set any – or all? – of the button brightness settings to 0% and still see something? We haven't released the braille version of DLZ Creator yet, so we still need "some" light to get through. Thanks for understanding!

Settings > Bluetooth / Disk


The next sub tab over from settings > system is bluetooth / disk. Here is another tab that looks and works exactly the same regardless of the chosen mode. Tap bluetooth / disk to open it, revealing a screen that looks somewhat like what is displayed below. We will go through each of these three sections separately: (1) Bluetooth, (2) SD Card and (3) USB Drive.

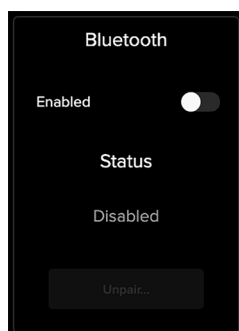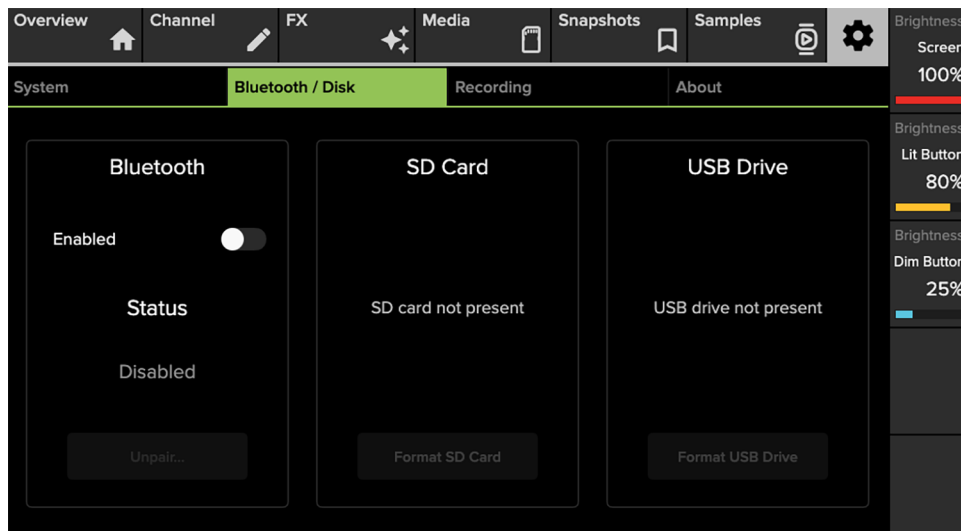

Settings > Bluetooth / Disk > Bluetooth

Mixers can only accept one input per channel and the DLZ Creator is no different. As indicated earlier, the last input channel (9/10) may accept a Bluetooth connection. Or, if not using Bluetooth, this channel strip could be used for SD/USB instead of Bluetooth (via Channel > Setup > Channel Source). Regardless, a channel source must be chosen!

Pairing and Connecting – Tap the Bluetooth's 'Enabled' switch so it is to the right (on, enabled). This switch will engage the channel's pairing mode, allowing the DLZ Creator to be seen by other Bluetooth devices such as a phone or tablet. The switch will illuminate solid green when engaged. This is to indicate that the DLZ Creator and device are in pairing mode.

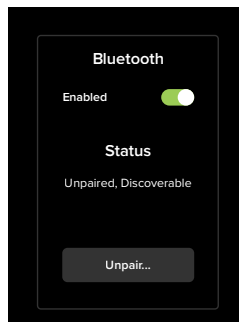


While the DLZ Creator is in pairing mode, simultaneously scan for Bluetooth devices on the phone or tablet. You should see DLZ Creator appear in the "available devices" list. Select it. From there, the device should indicate that it is successfully connected.

A previously paired device will auto reconnect if both the device and mixer are powered on and in range.



The Bluetooth may disconnect when affected by Electrostatic Discharge [ESD]. Manually reconnect the Bluetooth connection.

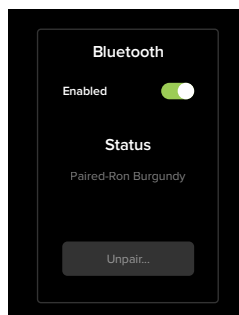

Bluetooth Calls – Once paired and connected, making and taking calls from guests is easy! While this may be true, we strongly suggest a trial run to confirm that everything works as it should.

1. Make sure the channel 9/10 fader is at unity.
2. Make sure the channel 9/10 source is set to Bluetooth.
3. Make sure Mix-Minus is turned on.
4. Make sure the (Bluetooth) volume is turned up on the phone.
5. Have someone call the number of the phone connected via Bluetooth. Ron Burgundy's phone in the example to the left.
6. Make sure the output destination on the phone is set to DLZ Creator.
7. Adjust the levels until you hear each other clearly!

Settings > Bluetooth / Disk > SD Card

This first part below was mentioned way, way back in the hardware section – albeit briefly – but it is worth repeating. Whether or not it is worthy of a second read, however, is entirely up to you!

The microSD slot is nestled in-between the power connector and USB-A jack on the rear panel.

Not only is the DLZ Creator a great mixer with some pretty amazing features, but here you can also record podcasts, interviews, in-studio gigs and more to a microSD card!

Formatting – We know you’re an eager beaver, all psyched to start recording, but let’s take care of something very important first: formatting the microSD Card. First, get a microSD Card; this could be a brand new one or one you’ve had for awhile so long as it’s Class 10 or better.



microSD Cards need to be Class 10 or better to ensure reliable operation. If using an older microSD Card, it’s a high possibility that some samples will be dropped because the card is too slow. We are not in the business of suggesting what microSD Card to go with, but choosing one with an instantly recognizable, quality, trustworthy name doesn’t hurt.

Some examples we’ve heard of:


- SanDisk
- PNY
- Lexar
- Samsung
- Kingston



Even if the microSD Card has already been formatted via a different source, we highly suggest formatting via the DLZ Creator. In fact, never mind the “highly suggest.” DO IT!

Just follow the steps listed below:

These probably goes without saying, but we’re going to say them, anyway. In order for the microSD card to be formatted via the DLZ Creator, (1) the microSD card needs to be connected to the DLZ Creator’s microSD card slot with the card’s electrical contacts facing down; the top of the microSD card (with the brand name, disc size, etc.) faces up towards the “SD™” logo (as seen below).

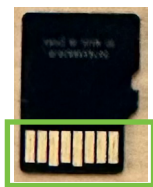

Electrical Contacts



microSD card OUT



microSD card IN

Granted, you might have a difficult time trying to format the microSD Card if these conditions aren't yet met. For one, it doesn't easily fit in any other way, and for another, DLZ Creator will remain with the "SD card not present" statement as seen two pages ago.

Now that the microSD card is inserted properly and DLZ Creator is fired up, it's time to format the microSD card.

Head to Settings > Bluetooth / Disk. The display will look something like this (Image A). Tap 'Format SD Card'.



This is a permanent deletion with no undo, so a confirmation dialog helps prevent accidents. Formatting will completely erase the SD Card, so please back up any files before formatting! Tap 'Format' (to continue with the formatting) or 'Cancel' (if it was an accidental tap) (Image B).

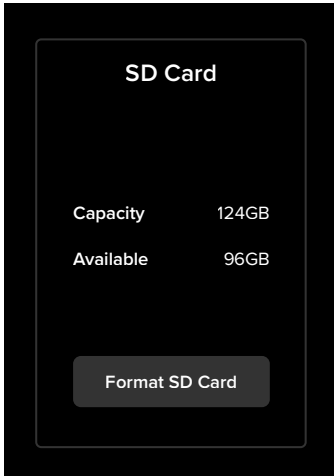


Image A

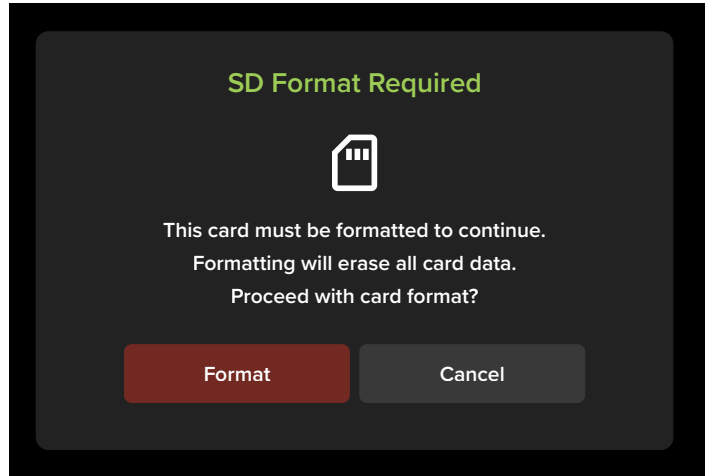


Image B

As seen in Image C, the microSD card is formatting. **DO NOT DO ANYTHING UNTIL FORMATTING IS COMPLETE** (Image D)!

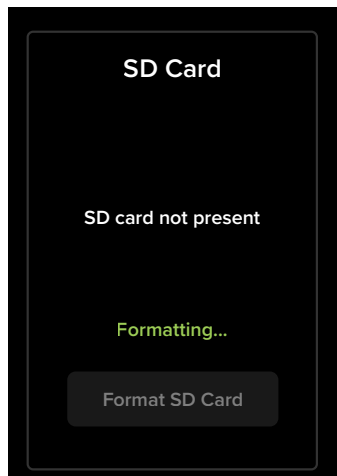


Image C

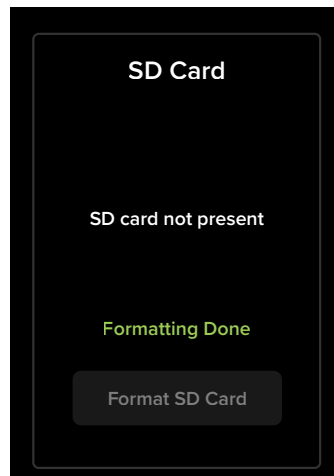


Image D

While the majority of microSD cards are readable, some are not. If you see a display similar to Image E below, you might have a corrupt microSD card as DLZ Creator thinks the card is not formatted to FAT32 (the only supported format). That said, it is absolutely worth a shot to try and format the card via computer (or at least see if it even shows up).

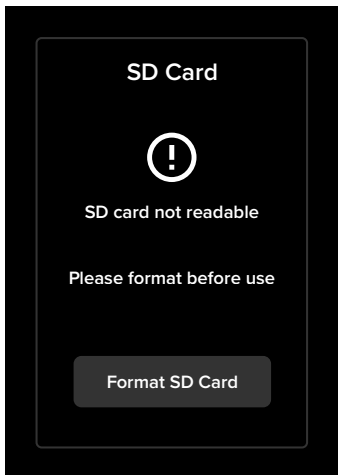


Image E

Settings > Bluetooth / Disk > USB Drive

This first part below was mentioned way, way back in the hardware section – albeit briefly – but it is worth repeating. Whether or not it is worthy of a second read, however, is entirely up to you!

This USB-A jack serves as a multi-purpose feature, allowing for a variety of options. Connect a flash drive and record direct, for example. Maybe connect a keyboard for naming and hot keys. Have a dying phone? Charge it here!

Not only is the DLZ Creator a great mixer with some pretty amazing features, but here you can also record podcasts, interviews, in-studio gigs and more direct to USB!

Formatting – We know you're an eager beaver, all psyched to start recording, but let's take care of something very important first: formatting the USB drive. First, get a USB drive; this could be a brand new one or one you've had for awhile so long as it's Class 10 or better.



The USB drive need to be Class 10 or better to ensure reliable operation. If using an older USB drive, it's a high possibility that some samples will be dropped because it is too slow. We are not in the business of suggesting what USB drive to go with, but choosing one with an instantly recognizable, quality, trustworthy name doesn't hurt.

Some examples we've heard of:

- Seagate
- SanDisk
- LaCie
- Adata
- WD (Western Digital)



Even if the USB drive has already been formatted via a different source, we highly suggest formatting via the DLZ Creator. In fact, never mind the "highly suggest." **DO IT!**

Just follow the steps listed below:

This probably goes without saying, but we're going to say it, anyway. In order for the USB drive to be formatted via the DLZ Creator, the USB drive needs to be connected to the DLZ Creator's USB-A slot. You have been using USB-A slots for years now. It only fits one way. Due to Murphy's Law, you will, of course, try one way and it won't work. You will flip it around and find out that that way does not work, either. And, of course, flipping back to the original way WILL work this time. Those darned USB-A slots!

Granted, you might have a difficult time trying to format the USB drive if that first condition isn't yet met. For one, it doesn't easily fit in any other way – which you have already found out – and for another, DLZ Creator will remain with the “USB drive not present” statement as seen four pages back.

Now that the USB drive is inserted properly and DLZ Creator is fired up, it's time to format the USB drive.

Head to Settings > Bluetooth / Disk. The display will look something like this (Image A). Tap 'Format USB Drive'.



This is a permanent deletion with no undo, so a confirmation dialog helps prevent accidents.

Formatting will completely erase the USB drive, so please back up any files before formatting!

Tap 'Format' (to continue with the formatting) or 'Cancel' (if it was an accidental tap) (Image B).

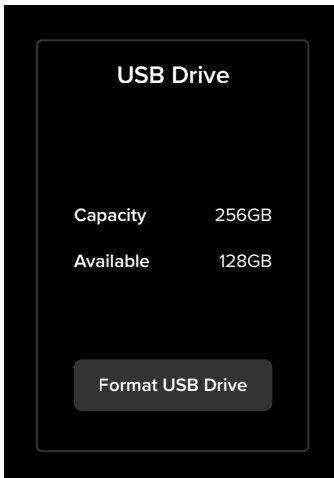


Image A

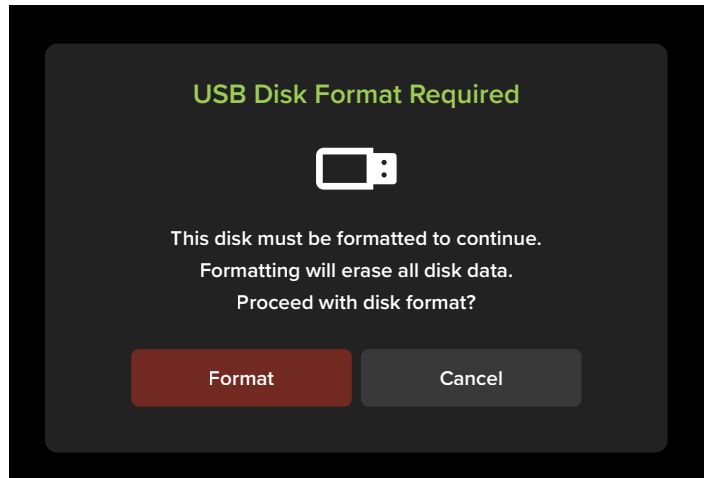


Image B

As seen in Image C, the USB Drive is formatting. **DO NOT DO ANYTHING UNTIL FORMATTING IS COMPLETE** (Image D)!

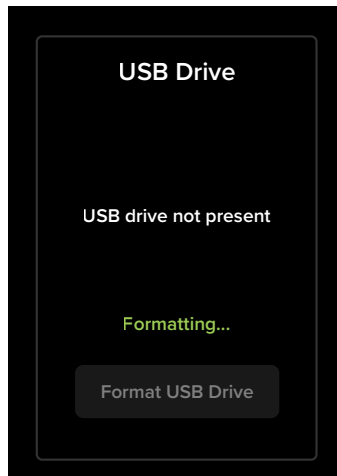


Image C

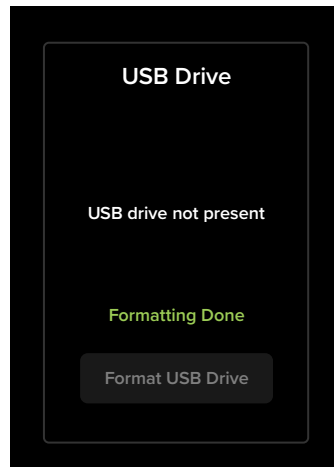


Image D

While the majority of USB drives are readable, some are not. If you see a display similar to Image E below, you might have a corrupt USB drive, as DLZ Creator thinks the drive is not formatted to FAT32 (the only supported format). That said, it is absolutely worth a shot to try and format the drive via computer (or at least see if it even shows up).


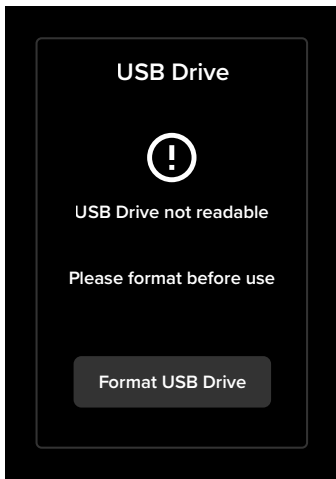


Image E

Settings > Recording

The next sub tab over from bluetooth / disk is recording. Tap recording to open it, revealing a screen that looks somewhat like what is displayed below.

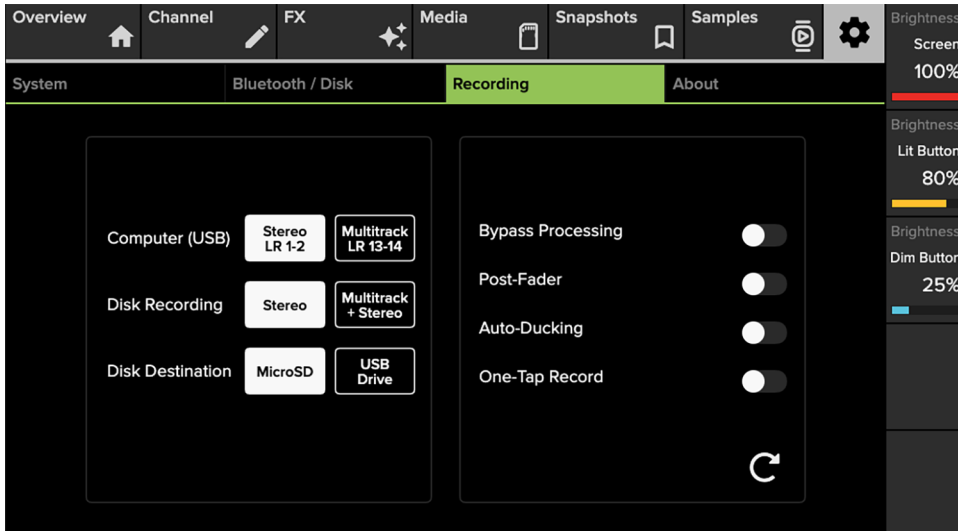

Settings > Recording > Computer (USB)

If not interested in multitrack recording, a simple L/R main mix stereo recording is available [Stereo LR 1-2]. However, DLZ Creator also supports multitrack recording – 12 Channels + Main Mix – via USB to a Mac/PC where each input may be routed independently to a DAW or other recording software [Multitrack LR 13-14]. The tapped selection will be a white box with black text.

Settings > Recording > Disk Recording

Not only does DLZ Creator support multitrack and stereo recording via USB, but it does so via disk, as well, be it microSD or USB flash drive. Audio is recorded directly to one or the other (disk destination is mentioned next) with similar options as computer (USB) recording: stereo or multitrack + stereo. The tapped selection will be a white box with black text

Settings > Recording > Disk Destination

This is simply the place to choose if you want the recording to go to the MicroSD card or USB Flash Drive. The tapped selection will be a white box with black text.

Settings > Recording > Bypass Processing

This is a true hardware bypass of all processing circuitry to ensure that there is no coloration of the signal if processing is not needed. When this is engaged [switch to the right, illuminated green], any effects that are added or changed will have no effect on the signal. This switch simply tells the DLZ Creator to either record or bypass all processing in its recordings.

Settings > Recording > Post-Fader

By default, DLZ Creator recordings are made pre-fader. This means that it routes a copy of the track BEFORE the channel fader (hence "PRE-fader") whereas a post-fader send will do this AFTER the channel fader (hence "POST-fader").

Pre-fader is handy for quick spot-checks of channels, especially ones that have their faders turned down. Utilizing a pre-fader send is considered advantageous because the signal and channel fader are independent of each other. Raise and lower the channel fader(s) to heart's content without changing the level being recorded. It will be recorded at unity gain.

That said, post-fader recordings have their place, too! Also called "After-Fader Listen", post-fader allows you to hear the channel levels based upon the fader settings on DLZ Creator. In other words, the audio is recorded at the fader level.

There is no right or wrong setting here. In short, it really comes down to Pre-Fader Listen which means that the channels are recorded at unity gain regardless of the fader levels versus Post-Fader Listen which means that the channels are recorded at the fader levels. Pre-fader is often thought of as "the more useful way to mix" (which is why it's the default), but post-fader has its place within our family, friends and colleagues. Here, YOU get to choose!

Settings > Recording > Auto-Ducking

Have you been to an event where music was playing, then when someone spoke into the mic, that the music volume decreased greatly (but was still there)? That's called "auto-ducking"! It also works when multiple mics and other inputs are being used... like with DLZ Creator!

When auto-ducking is engaged – switch to the right – the volume of all channels (other than channel 1) are reduced by 15 dB, so long as a mic signal above –50 dB is present on channel 1. There is a gradual fade in/out; it is not immediate. The reduction affects mic inputs 2-4, line input channels 5-8, digital stereo channel 9/10 and sample pad channel 11/12.

The multi-track outputs are not affected by the position of the auto-ducking switch. However, the stereo outputs and stereo recordings are and they are heard via headphones and the main LR output.

As if by magic, once speaking is completed, all of the other channels will return back to their previous levels. True wizards, those engineers... and none of them have long grey beards, robes and pointy hats.


Settings > Recording > One-Tap Record

By default, recording is a two-step process. Pressing the 'Record' button on the hardware "arms" the recording (i.e. "gets it ready for recording"), but then 'rec' (on the display) needs to be tapped to start the recording. However, if one-tap record is engaged (switch to the right), simply tapping the 'Record' button on the hardware will begin recording immediately.

Underneath the four recording toggle switches is a semicircle-arrow. Tap it to reset everything within the recording sub tab to its default (i.e. to the left).

Settings > About

The fourth and final setting sub tab is the About screen. Tap About to open it, revealing a screen that looks somewhat like what is displayed below.

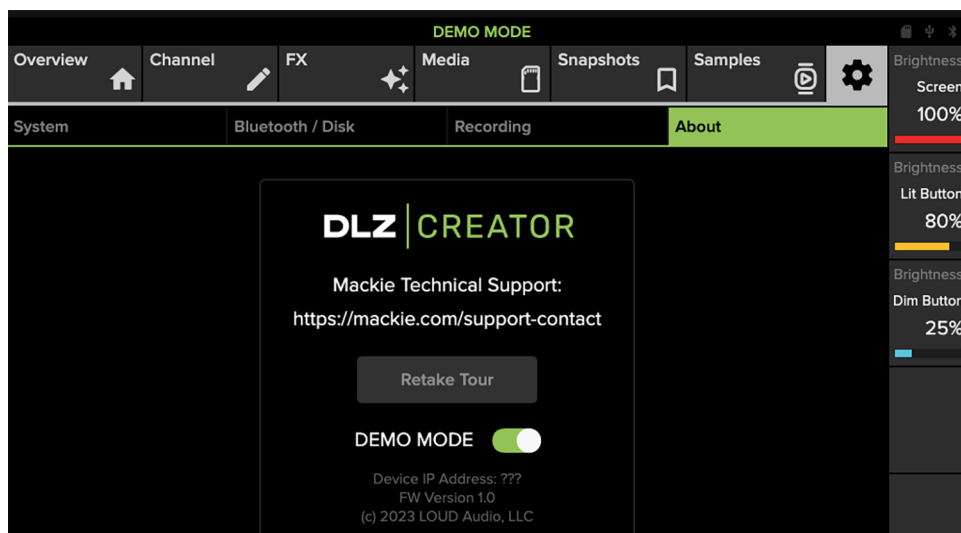

There are literally only two options available once on the About screen and that is to either: (1) retake the tour or (2) place DLZ Creator in 'Demo Mode'.

Want to retake the tour? Simply tap the 'Retake Tour' button and off you go!



Would you rather see DLZ Creator in demo mode? Simply tap the 'Demo Mode' switch so it is to the right (on, green) and off you go! Demo mode adds three things: (1) meters (regardless of input(s) and/or fader position(s)), (2) a green ALL-CAPS 'DEMO MODE' at the top-center of the display regardless of what tab is open and (3) a 'Mixer Tour' button tucked nicely in the lower-right corner of the display when on the overview tab. If you would like to retake the tour, either tap this button (easy) or go the long route by returning to settings > about > retake tour.



Other than retaking the tour or placing DLZ Creator in demo mode, there may be one other reason to visit here. If you are calling Technical Support, it might behoove you to jot down the information at the bottom of the display (before calling): Device IP address and firmware version.

Chapter 12 : Presets

Presets > Introduction

Presets save parameters on individual input or output channels and on particular DSP blocks such as EQ, dynamics, FX, etc. For example, a favorite microphone EQ setting may be saved as a preset and recalled as needed.

DLZ Creator comes with a library of factory presets. A maximum number of factory presets will be displayed at one time. Just scroll up and down to view the other factory presets, if available. There are also user presets. These may be created for each preset type. The number of user presets available is limited only by the available space on the DLZ Creator. Presets are generally set ahead of time, not as an event is taking place. Presets are stored on the DLZ Creator.

The following preset types are available:

- Input channel
- Output channel
- EQ
- Gate
- Compressor
- FX

The first thing we will do is take a look at factory presets vs user presets. From there, channel presets and DSP presets may be selected [factory] or created [user].

Factory Presets vs User Presets

There are factory presets and user presets on all channel and DSP settings that may be set ahead of time. Feel free to start with a factory preset, manipulate to your liking, then save as a user preset. We will start with what each one looks like and how they work. The next section will discuss the differences between channel presets and DSP presets.


While we do hope you keep the factory presets as-is, they may be replaced, renamed, deleted... or loaded. If it is loaded, it remains a factory preset. Anything else is considered a user preset.

As you may see, a wide variety of factory presets are available to choose from. These are graced with a name of said factory preset. Simply tap the preferred preset and load. This will update the current selection. For example, selecting "Broadcast" from the list will update the EQ, gate, compressor and de-esser settings to standard broadcast mic settings. It's certainly easier to make updates from a factory preset versus updating parameters from a zeroed out board!

Factory and user preset names are user-editable. At the bottom of the preset list is a button labeled "Save". Tapping this button reveals a keyboard. Simply type in a name you would like to call this preset followed by tapping the 'Enter' key. This saves the new preset. This is similar to a "Store" button on other consoles. Turn the page to reveal what the other three choices are and how they work.

Simply tap “Preset” to reveal a popover (with a channel input preset seen below). The popover displays a list of factory presets to choose from, as well as the opportunity to...


- load the preset
- save the preset
- rename the preset and/or
- delete the preset

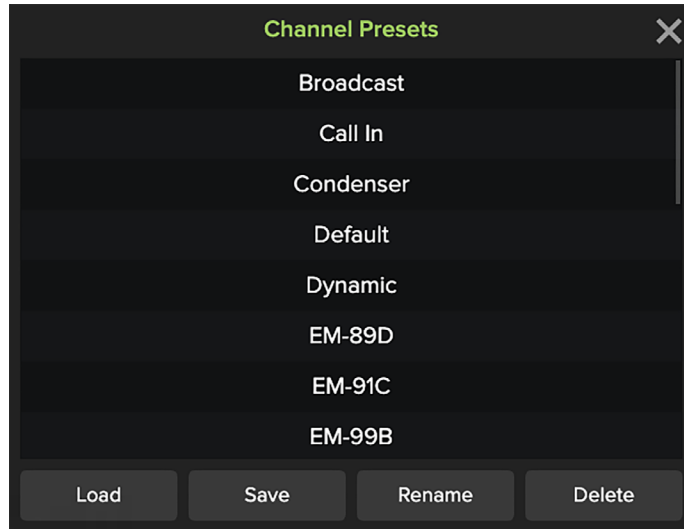

Tap a preset so it is highlighted or... if you do not see it listed, scroll the presets up and down to view the other choices. Let's take a look at each of the choices from left to right, starting with 'Load'.

Load — Pressing the load button recalls presets. Upon load, all appropriate console parameters change to match the stored preset. After tapping the load button, you'll hear the changes immediately and may notice the changes to the Channel ID and DSP settings, as well.

Save — The save preset button stores the current state of the processing into a new user preset OR... it will save over the currently selected preset if one has been selected. Be careful NOT to do this... or do it only if so intended. After tapping 'Save' you will be asked to name the preset.



The name of the preset is the name of the preset, not the channel input, master output, etc.

Rename — When the rename button is pressed, use the onscreen keyboard to name (or rename) the currently selected item. Simply type a name in the box and tap the “enter” key when finished. Preset names are limited to 36 characters. This includes letters, numbers and special characters. The text will remain green until the limit is reached, in which case the text will quick-flash red indicating that you have hit the limit.

Delete — The delete button deletes the currently selected preset. This is a permanent deletion with no undo, so a confirmation dialog helps prevent accidents.


Channel Presets vs DSP Presets

There are channel presets and DSP presets. Also, there are factory presets for both or you may create your own user presets for each. So many options! Let's take a look at each:

Input and Output Channel Presets — Channel presets change virtually all controls on the channel. There are both input and output channel presets. Input channel presets do **NOT** change the pan, mute, fader or solo. Output channel presets do **NOT** change the balance or level. This allows you to easily audition presets on a channel one after another.

DSP Presets — DSP presets change only a portion of an input or output channel. This includes EQ and HPF, gate and compressor, de-esser and FX. However, DSP presets do **NOT** change the on / off state. This allows a user to audition presets with the processor on or off, as desired.

Displayed below are the input channel presets. Don't forget to scroll up and/or down to access more factory presets, if going that route.

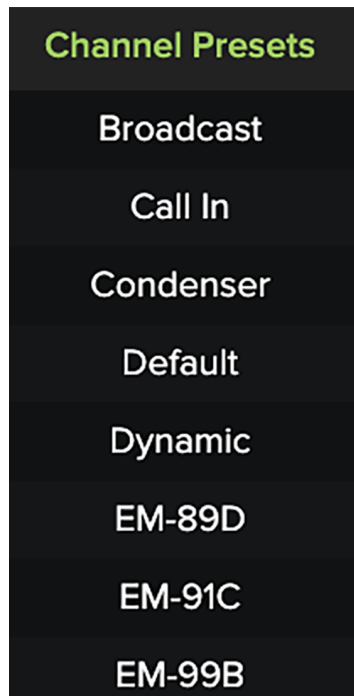

**CHANNEL
PRESETS**

From the EQ channel view you are able to set a preset for the channel's EQ. Don't forget to scroll up and/or down to access more factory presets, if going that route. EQ presets do **NOT** recall either the HPF on/off or the EQ on/off.

From the gate, compressor and de-esser channel view you are able to set a preset for the dynamics. Don't forget to scroll up and/or down to access more factory presets, if going that route.

<p>EQ Presets</p> <p>EM-99B</p> <p>Flat</p> <p>Music</p> <p>Sparkle</p>	<p>Gate Presets</p> <p>Default</p> <p>Flat</p> <p>Noise Gate</p>	<p>Compressor Presets</p> <p>7B Comp</p> <p>Flat</p> <p>Heavy</p> <p>Light</p> <p>Mid</p>	<p>De-Esser Presets</p> <p>5.9 kHz</p> <p>6.4 kHz</p> <p>Flat</p>
<p>EQ PRESETS</p>	<p>GATE PRESETS</p>	<p>COMPRESSOR PRESETS</p>	<p>DE-ESSER PRESETS</p>

From the FX channel view you are able to set a preset for the FX. Don't forget to scroll up and/or down to access more factory presets, if going that route.


<p>Reverb Presets</p> <p>Cathedral</p> <p>Hall</p> <p>Medium Room</p> <p>Small Room</p>	<p>Delay Presets</p> <p>Long Decay</p> <p>Slapback</p> <p>Space</p> <p>Warm</p>
<p>REVERB PRESETS</p>	<p>DELAY PRESETS</p>



IMPORTANT – DO NOT FORGET! Presets are also available on the OUTPUT! This includes the same presets as previously found in the channel setup, EQ, compressor, reverb and delay windows.

Chapter 13 : Recording

Recording > Introduction



Not only are these great mixers with some pretty amazing features, but here you can also record the podcast, broadcast, music recordings and more! This includes multitracking and stereo recording at 48 kHz and 24-bits. We discussed the recording button very briefly in the hardware chapter, but will go into much more detail here.

Connections

As discussed previously, on the rear panel of the DLZ Creator are three connectors ready to accept recordings:

microSD connector – microSD card

USB-A connector – flash drive

USB-C connector – computer (i.e. DAW)



A Mac should work automatically with no additional drivers.

However, Windows drivers will require separate installation. Simply download it for free from our website.



While the USB-A (flash drive), USB-C and microSD connectors may all be connected simultaneously, they may NOT be used simultaneously for recording. That said, nothing “takes priority” over the other. YOU choose!

Formatting

We know you're an eager beaver, all psyched to start recording, but let's take care of something very important first: formatting! We won't go into details here, as this was all outlined in the Settings > Bluetooth / Disk > Format section of the manual. Check it out again on pages 69-73.



You will want to format **via DLZ Creator** any time...:

- (1) ...a brand new (just out-of-box) microSD card and/or flash drive is connected.
- (2) ...you want to use an existing microSD card and/or flash drive exclusively for recording and playback with a DLZ Creator.

Recording


Let's get started with recording already... right?! To reveal the recording banner, just tap the recording button located near the upper-right corner of the DLZ Creator tucked in-between the Home and Automix buttons... this button will NOT illuminate red yet (unless One-Tap Record is enabled). The recording banner will appear horizontally at the top of the display just below the tabs and will look somewhat like what may be seen below.



All three banners displayed above will not appear simultaneously. In order from top to bottom, when no card is inserted, the banner will serve either as a timer for streaming or external (computer) recording, the middle banner is for recording to the microSD Card and the bottom banner is for recording to the USB flash drive.

Also of note – other than an icon displayed on the far right of the recording banner, nothing else matters over there. All of the goodies are on the left side of the banner, left of “DLZ | CREATOR”.

The Settings > Recording display is shown below and the recording banner is all dependent on how it is set up as described on pages 73-75.

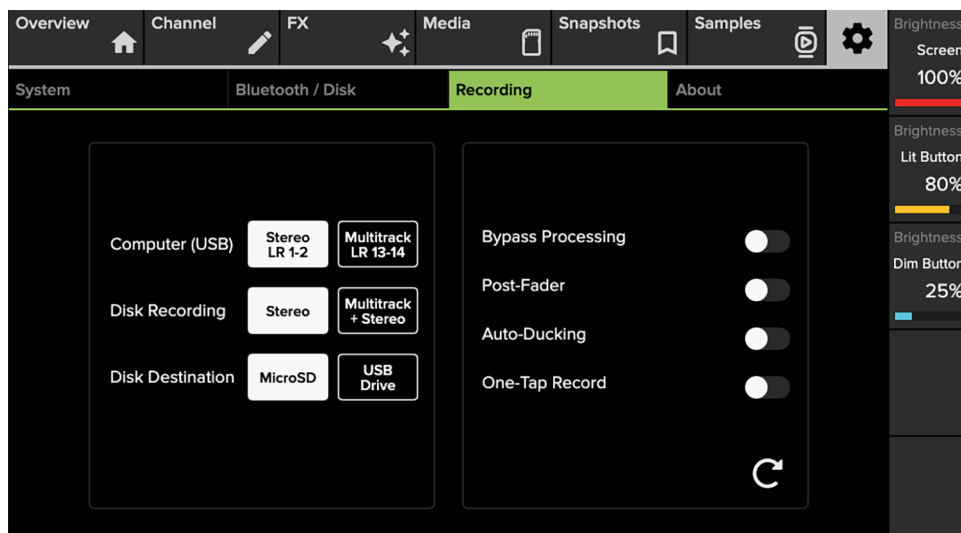

At this point, recording is simply “enabled”, but no recording has begun. In order to start recording (or the timer), tap the button on the far left, be it ‘START’ or ‘REC’.



There are now several more things to notice: (1) ‘START’ or ‘REC’ now becomes ‘PAUSE’, (2) next to ‘PAUSE’ is ‘RESET’ (timer/computer) or ‘STOP’ (microSD or USB), (3) the recording time appears, and (4) the international symbol for a recording in progress is a red dot (•). One will appear above the recording time to the left of a red ‘REC’. Orrrrrr... if using as a timer, it turns into a green ‘TIMER’ with a green clock icon to the left of it. Most importantly, (5) the ‘REC’ button (on the hardware) now flashes red to indicate that a recording is in progress.




DLZ Creator supports background recording. This means that you may tap any of the tabs and sub-tabs, the Overview/Home, AutoMix, and even the Rec buttons, etc. while the DLZ Creator continues to record. Recording will continue until you stop (or pause) it, the power goes out, or the disc / drive runs out of space.



As we are all well aware, there are always exceptions to the rule. So what’s the exception, you ask? When a recording is in progress – whether paused or not – all features listed in the Settings > Recording tab are grayed out and unavailable for selection. Additionally, a red “Recording in progress*” is added next to the semicircle-arrow (reset).

We are not ready to stop the recording yet, so we will just pause for the moment. Once pause is tapped, the recording banner will look something like this...

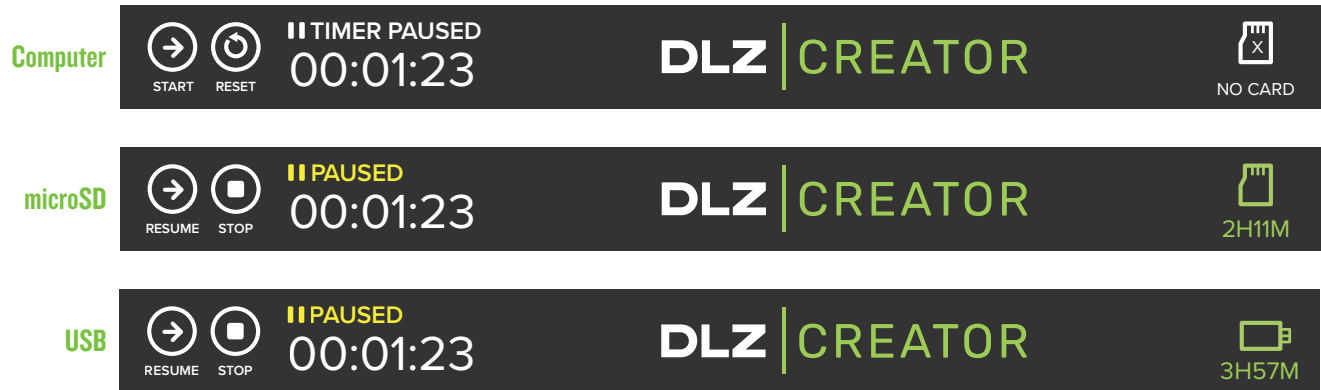

From here, you may notice that: (1) 'PAUSE' now becomes 'START' or 'RESUME', (2) next to 'PAUSE' is 'RESET' (timer/computer) or 'STOP' (microSD or USB) – this remains the same as the previous (currently recording) banners, (3) the recording time is paused, and (4) the international symbol for a PAUSED recording in progress are two vertical bars side-by-side (||). The timer pause will be white, while microSD and USB are colored yellow. Additionally, (5) the 'REC' button (on the hardware) will STOP flashing red and become solid white again to indicate that a recording is stopped or paused.

Once you are finished recording, tap reset (to stop the timer) or stop (to stop the recording). The files may then be accessed and played via the computer (DAW) or media tab (microSD or USB flash drive; detailed in length in chapter 8, pages 50-52).

Chapter 14 : Routing Simplified

Routing Simplified > Introduction

DLZ Creator routing was discussed briefly throughout the manual, but we would like to break it down even more so.

While channel faders 1-4, 11/12 and the Main LR fader are dedicated inputs and outputs (with the faders only controlling the level of whatever is connected to them), stereo channel faders 5-10 operate slightly differently. In fact, these channel faders actually control multiple inputs / sources! That said, only one input / source may be selected at a time. A good way to think about it is to compare channel faders 5-10 to that of a Swiss Army® knife. There are a lot of tools, but only one may be used at a time.

Routing Simplified > Source Selection

Here is a recap of those channels, their respective faders and source selection. We will place them in order of degree of difficulty. That said, we hope you don't find it too difficult since it's really not!

None: We're not sure why you would select "none" as the source, but the result is the same for all three channels. There is nothing connected to these input channels, nor a computer (USB-C) connection to route audio from the computer to DLZ Creator... or phone for Bluetooth or flash drive / microSD card for recording on channel 9/10. This is as basic as it gets. No routing going on 'round these parts!

Line, Aux (phone, tablet), Bluetooth: The next "easiest" setup is simply using these as channel inputs, raising and lowering the levels of whatever is connected to these inputs.

Line = Channel 5/6 line inputs = 1/4" L/R jacks on the rear panel of DLZ Creator

Aux (phone, tablet) = Channel 7/8 line input = single 1/8" stereo jack, also on the rear panel
These inputs were explained in much greater detail in Chapter 2, page 11.

Bluetooth = Channel 9/10 = Bluetooth is for connecting a phone to this channel for call-in guests.
This input was explained in much greater detail in Chapter 11, page 68.

USB Audio, USB / SD: The "easiest" of these input options is channel 9/10, so we'll start there, then return to stereo channels 5/6-7/8.

USB / SD = Channel 9/10 = this fader will raise and lower the volume of the playback, whether recorded to a USB flash drive or microSD card. While the source is set up via the channel 9/10 tab, the playback is part of the media tab and it was explained in much greater detail in Chapter 8, pages 50-52.

Now things are getting fun! DLZ Creator utilizes a digital / analog hybrid channel type that allows audio to be sent FROM the computer TO the DLZ Creator via the USB 1/2 and/or USB 3/4 channels. These are routed to channel faders 5/6 and 7/8. This allows you to record all input channels to the computer via USB and/or return two independent audio streams of stereo playback from a computer.

USB Audio = Channel 5/6 = this fader will raise and lower the volume of USB 1/2 OR USB 3/4 RETURN, depending on the source selection.

USB Audio = Channel 7/8 = this fader will raise and lower the volume of USB 1/2 OR USB 3/4 RETURN, depending on the source selection.

Routing Simplified > USB Routing

The USB routing capabilities are as follows:

USB input TO the mixer – playback:

Traditionally speaking, USB 1/2 was dedicated to routing the computer's DAW output (such as Pro Tools®, Tracktion®, Cubase®, Reaper®, etc.) to the DLZ Creator where you could then blend that signal with the live inputs of the mixer in the headphones for latency-free monitoring.

Additionally, USB 3/4 was dedicated to routing the computer's output (such as Spotify®, Apple Music®, Pandora®, YouTube®, etc.) to the DLZ Creator. This stereo signal could then be EQ'd and routed to the main outputs and headphones. In short, this signal may be sent to nearly any desired output(s).

The key word in those sentences, though, is the word "was". While you certainly could do the above, it is not set in stone. If you would rather run the DAW to USB 3/4 and the other computer output through USB 1/2, then do so by all means! Simply set up the source in the channel tab to USB 1/2 and/or USB 3/4, where channel faders 5/6 and/or 7/8 would raise and lower the volume of that computer's return.



Note that these are just a few examples. Any sound that comes out of your computer may be routed through DLZ Creator. Want to use it for video conferencing? You can do so! Granted, it will be audio only, though; the video will remain on the computer, not on DLZ Creator's display. In essence, the possibilities are (nearly) endless.

Routing Simplified > Examples

The flexibility of having two separate channels for (headphone) mixing is incredible. For instance, USB 1/2 could be set as the DAW's main mix for the recorded tracks, while USB 3/4 could be set up as the "more me" channel when working on overdubs.



Some DAWs and other streaming applications have their own settings that may override system settings. If so, please review their documentation on how to make changes to the DAW / app.

Routing Simplified > Windows Setup

1. Download the USB driver from the Mackie website.
2. Follow the installation instructions to install the driver.
3. Right-click on the speaker icon located on the task bar.
4. Select DLZ Creator within Sound Settings.
5. On DLZ Creator, be sure that USB 1/2 and/or 3/4 is selected on channel 5/6 and/or 7/8.
6. Turn up the channel 5/6 and/or 7/8 fader to unity, then slowly turn up the main mix fader.

You will know this worked if the main meters illuminate and you hear PC audio through the device connected to the main outputs.

Routing Simplified > Mac Setup


A driver download is not necessary on a Mac. However, some parameters will still need to be changed within macOS.

1. Open the Audio MIDI Setup app using the Spotlight search (Command + Spacebar).
2. Right-click the device 'DLZ Creator' and select "Use This Device For Sound Input", as well as "Use This Device For Sound Output".
3. Select the 'Configure Speakers' button and be sure it is set to 'Stereo'.
4. Change the Left and Right options to Output 1 and 2 OR 3 and 4, then click 'Apply'.
5. On DLZ Creator, be sure that USB 1/2 and/or 3/4 is selected on channel 5/6 and/or 7/8.
6. Turn up the channel fader to unity, then slowly turn up the main mix fader.

You will know this worked if the main meters illuminate and you hear Mac audio through the device connected to the main outputs.

Hookup Diagrams

Hookup Diagrams > Podcast

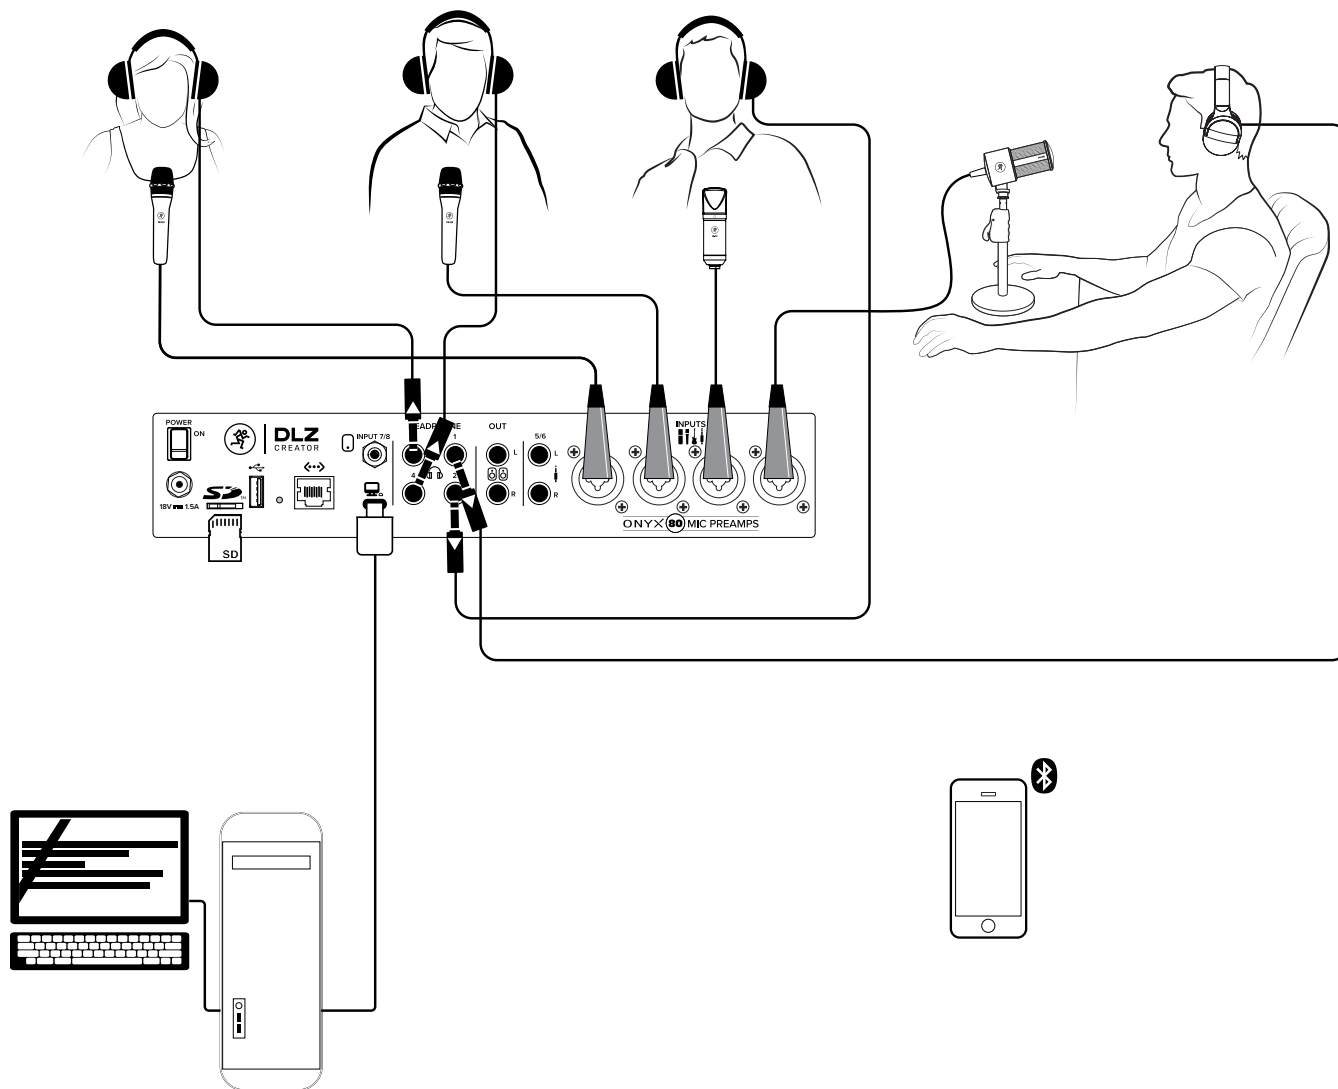


Throughout the manual, we have discussed a group of fine folks who have a love for punk band, the Ramones! They get together often for podcast sessions to discuss everything Ramones... their songs, albums, the band members themselves and more! While the band is no longer around, their spirit lives on through these podcasters.

They even use the same names! Our podcaster host is Johnny Ramone, plugged into the channel 1 XLR input with his trusty Mackie EM-99B dynamic broadcasting microphone. Joey Ramone is plugged into the channel 2 XLR input with his Mackie EM-91C condenser microphone. Lastly, Dee Dee and Tommy Ramone are plugged into the channel 3 and 4 XLR inputs with their Mackie EM-89D dynamic microphones. Don't forget to add 48v phantom power to channel 2 since it's a condenser mic!

All four are using stereo headphones connected to the four headphone jacks. Additionally, a phone is connected via Bluetooth to channel 9/10. Here the gang can accept outside calls from other Ramones enthusiasts. Lastly, a microSD card is inserted, ready to accept their podcast recording... or recorded to their computer via USB-C!

Hookup Diagrams > Streaming Broadcast

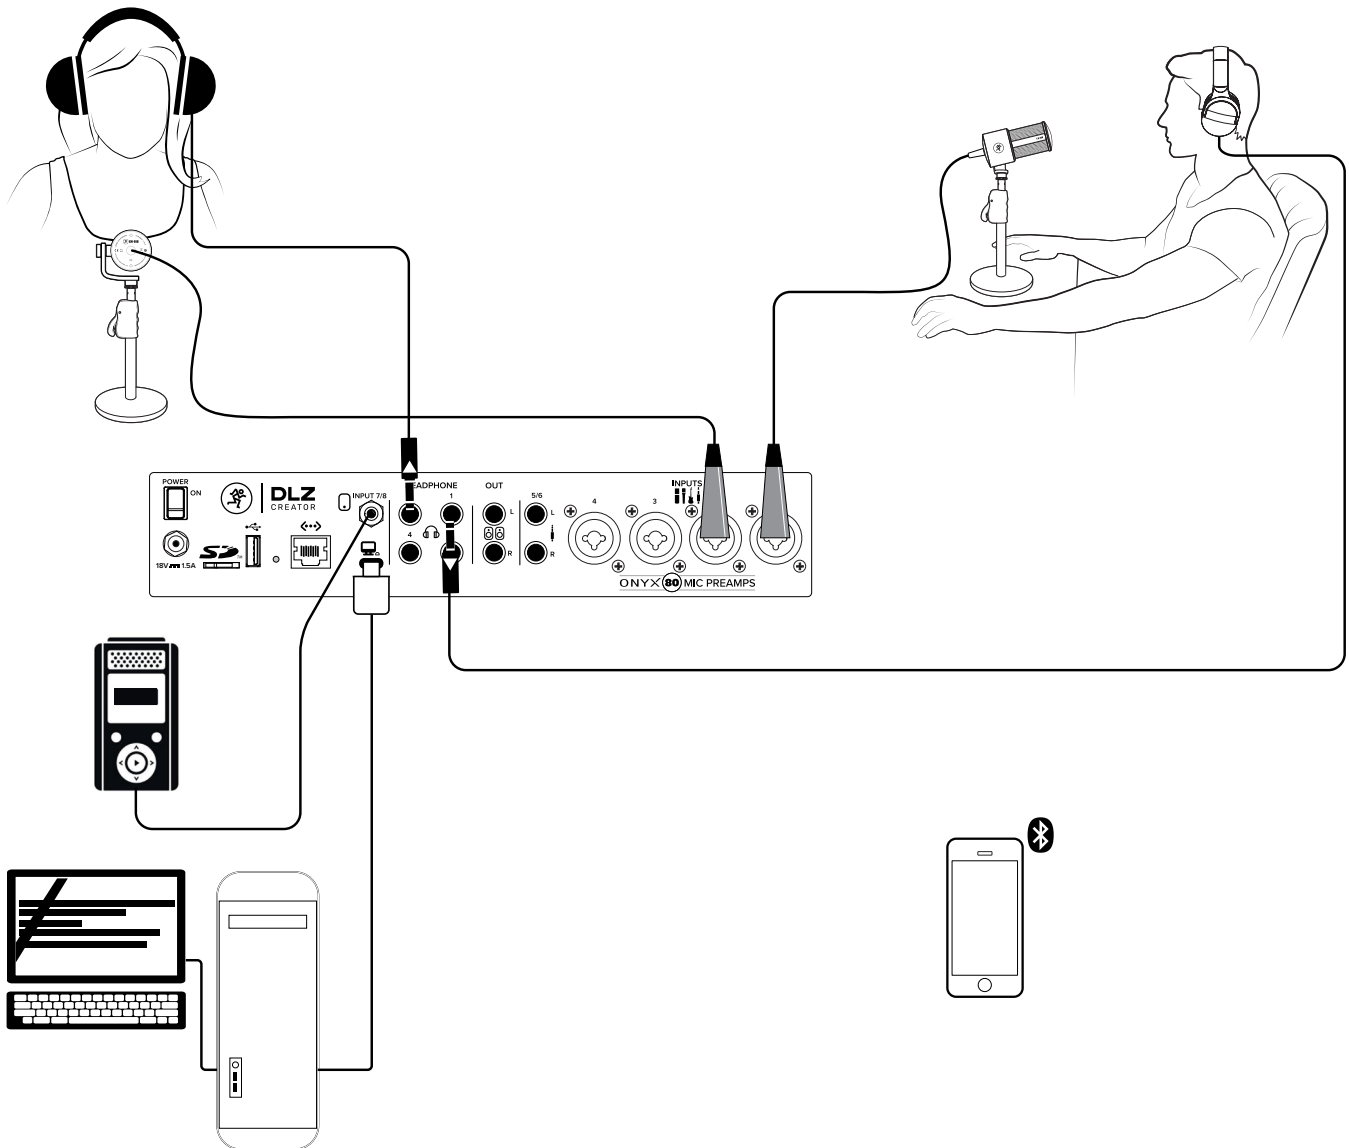

DLZ Creator may also be used for streaming broadcasts! Here we have the host plugged into the channel 1 XLR input with his trusty Mackie EM-99B dynamic broadcasting microphone. His color commentator is utilizing the same mic, plugged into the channel 2 XLR input. Both are using stereo headphones connected to the headphones jacks.

The 1/8" stereo input – channel 7/8 – has a pocket player connected to it. This allows the host to play clips that are part of the broadcast, be it music, a speech/interview or any number of other sound bites they deem necessary. Additionally, a phone is connected via Bluetooth to channel 9/10. While these two will hold the fort down for the most part, they also enjoy receiving calls from the outside on occasion.

This could be a live broadcast or recorded for posterity... or both! Here, a computer is connected via USB-C to accept those recordings.

Appendix A : Service Information

Troubleshooting

If you think your Mackie product has a problem, please check out the following troubleshooting tips and do your best to confirm the problem. Visit the Support section of our website (www.mackie.com) to get some ideas or contact our technical support heroes. You may find the answer to the problem without having to send your Mackie product away.

Here are some useful tips that could correct any of the issues outlined below (or possibly any other issue that we haven't yet discovered):

(1) — Restart the DLZ Creator. This is especially useful after firmware updates. A simple reboot can sometimes work great wonders.

(2) — Level setting procedure. If you are having any sound (or non-sound) issues, try following the level setting procedure as outlined in chapter 4 [pages 22-25] to verify that all of the volume controls in the system are properly adjusted.

There are no user serviceable parts. If none of these tips work, please refer to “Repair” on the next page to find out how to proceed.

No Power

- Our favorite question. Is it plugged in? Make sure that the female end of the line cord is securely seated in the socket of The Power Block and the male end plugged all the way into a live grounded AC outlet. Make sure the locking barrel connector at the end of the cord attached to The Power Block is attached to the power connector on the DLZ Creator and securely tightened. An LED on The Power Block will illuminate blue to indicate success (whether the DLZ Creator is powered on or not).
- Our second favorite question. Is the rear panel power switch in the ON position?
- Are all the lights out in town? If so, contact the local power company to get power restored.

No Sound

- Are all the connections good and sound? Make sure all of the connecting cables work and are securely connected at both ends. Try the same source signal in another channel, set up exactly like the suspect channel.
- Is the signal source powered on? Is it working (and making union scale)?

Noise / Hum

- Are you using unbalanced cables? Swap them out with balanced cables to see if that fixes the problem.
- Turn the input gains down one-by-one. If the offending noise disappears, it's either that input or whatever is plugged into it. If you unplug the whatever-is-plugged-into-it and turn the input gain back up and the noise is gone, it's from your whatever.
- Is phantom power required for the microphone?
- Sometimes it helps to plug all the audio equipment into the same AC circuit so they share a common ground. Make it so.

Other Issues

- Bluetooth Blues?
 - Restart the Bluetooth device. Completely power it down, then power it back up.
 - Restart DLZ Creator. This is especially useful after firmware updates. A simple reboot can sometimes work great wonders.
- Time for a Firmware Upgrade?
 - Go to mackie.com and look for the file named 'DLZ Creator Firmware Installation Instructions'.
- Using a Windows-driven computer and need to install the Mackie USB Driver?
 - Go to mackie.com and look for the file named 'DLZ Creator USB Driver Installation Instructions'.
- FX, microSD/USB, samples and/or other issues?
 - Please email or call Technical Support if you are having any other issue not listed here:
 - o mackie.com/support-contact
 - o 1-800-898-3211

Videos

Sometimes words just aren't enough. As a writer, that makes me sad, but I also have a wife who is more of a 'watcher' than a 'reader' and perhaps that is you, as well. If you're more of a 'watching videos' person and 'reading comprehension really isn't my thang', then please check out some videos we made while I go cry in the other room...

[Introducing the DLZ Creator Mixer for Podcasting and Content Creation](#)

[Hardware Tour](#)

[Getting Ready for Your First Podcast in Minutes](#)

[Creating Fast With Easy Mode](#)

[Expanding Control with Enhanced Mode](#)

[Maximizing Your Creative Tools with Pro Mode](#)

[Quick Headphone Mixing In Pro Mode](#)

[Managing Four Mics At Once With AutoMix](#)

[Hosting Call-In Guests](#)

Repair

For warranty service, refer to the warranty information on page 94.

Non-warranty service for Mackie products is available at a factory-authorized service center. To locate the nearest service center, visit www.mackie.com, click "Support" and select "Service Center Locator". Service for Mackie products living outside the United States can be obtained through local dealers or distributors.

If you do not have access to our website, you can call our Tech Support department at 1-800-898-3211, Monday-Friday during normal business hours, Pacific Time, to explain the problem. Tech Support will tell you where the nearest factory-authorized service center is located in your area.

Appendix B : Technical Information

Specifications

General Digital

Sample Rate:..... 48 kHz
 A/D/A Bit Depth:..... 24-bit
 System Latency:..... ~3 ms
 Equivalent Noise: -143.4 dBV (A-weighted)

Inputs

Inputs:4x balanced/unbalanced combo jacks,
 1/4" balanced/unbalanced stereo jacks,
 1/8" stereo jack
 XLR Mic Pre: Onyx 80 mic preamps
 Input Impedances: 4 kΩ balanced (microphone),
 10 kΩ balanced (instrument),
 5 kΩ unbalanced (instrument)

Outputs

Outputs:..... Balanced/unbalanced 1/4" main out jacks,
 4x stereo headphone jacks
 Line Output Maximum Level:..... 14 dBu
 Headphone Output Power: 30 mW

Bluetooth / USB / SD

Bluetooth: 5.0
 USB: Format: USB 2.0 HS (480Mb/s)
 SD: Multitrack (12 chan + main mix) / 24-bit / 48kHz
 SD speed class 10 or speed class UHS recommended

Recording / Networking

Recording Storage: microSDHC, microSDXC,
USB-A removable drive (FAT32 – minimum 100MB/s)
Data Transfer: Integrated SD 3.0 104 MB/s
Network Connectivity:..... Ethernet 10/100

Power Requirements

Line Input Power: 18V==1.5A


Dimensions

Size (H x W x D):4.1 × 13.0 × 15.0 in
104 × 330 × 381 mm
Weight : 6.1 lb // 2.8 kg

About

Owner’s Manual Version:V1.0
Part Number, Rev and Date:..... SW1367, Rev A, May 2023

DLZ Creator Dimensions

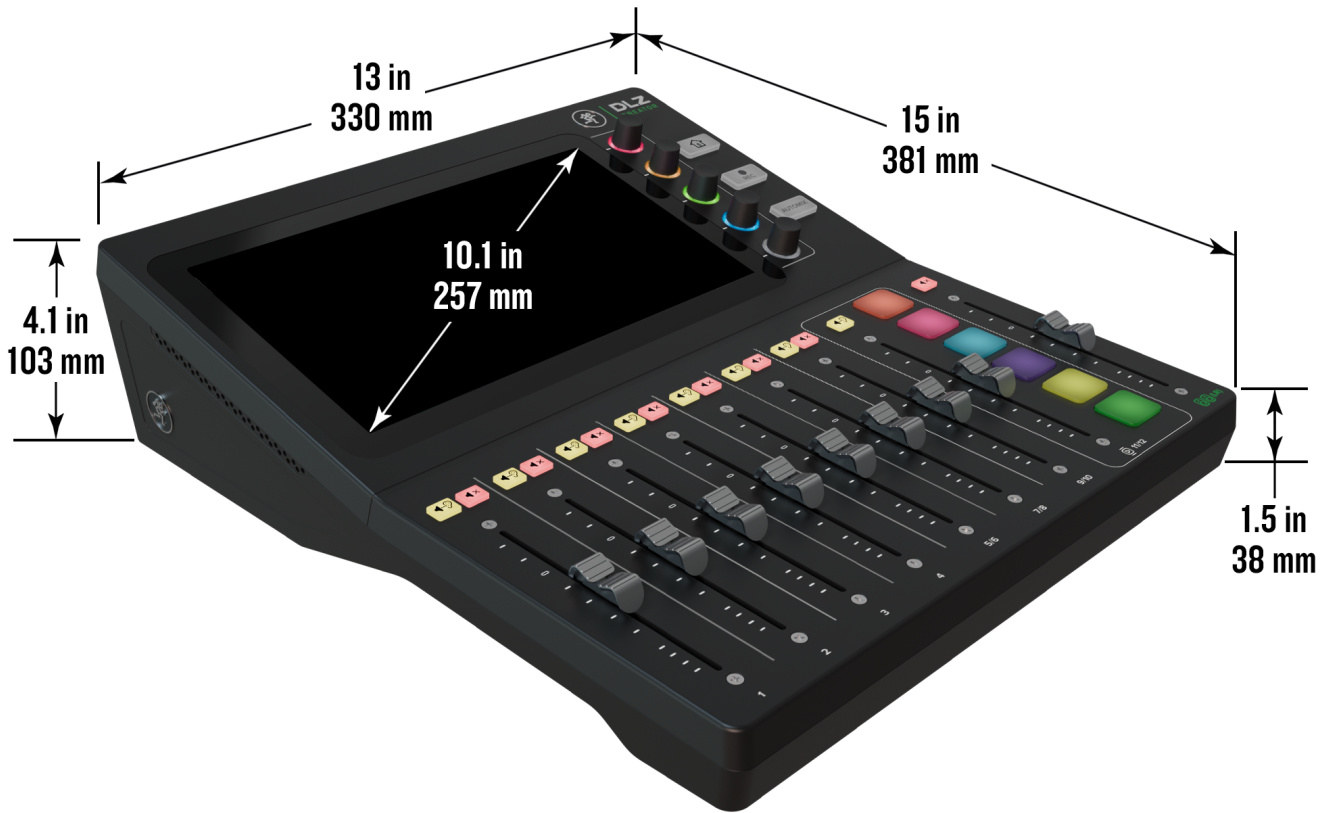

Warranty Statement

Please keep your sales receipt in a safe place.

This Limited Product Warranty (“Product Warranty”) is provided by LOUD Audio, LLC. (“LOUD”) and is applicable to products purchased in the United States or Canada through a LOUD-authorized reseller or dealer. The Product Warranty will not extend to anyone other than the original purchaser of the product (hereinafter, “Customer,” “you” or “your”).

For products purchased outside the U.S. or Canada, please visit www.mackie.com/warranty to find contact information for your local distributor, and information on any warranty coverage provided by the distributor in your local market.

LOUD warrants to Customer that the product will be free from defects in materials and workmanship under normal use during the Warranty Period. If the product fails to conform to the warranty then LOUD or its authorized service representative will at its option, either repair or replace any such nonconforming product, provided that Customer gives notice of the noncompliance within the Warranty Period to the Company at: www.mackie.com/support or by calling LOUD technical support at 1.800.898.3211 (toll-free in the U.S. and Canada) during normal business hours Pacific Time, excluding weekends or LOUD holidays. Please retain the original dated sales receipt as evidence of the date of purchase. You will need it to obtain any warranty service.

For full terms and conditions, as well as the specific duration of the Warranty for this product, please visit www.mackie.com/warranty.

The Product Warranty, together with your invoice or receipt, and the terms and conditions located at www.mackie.com/warranty constitutes the entire agreement, and supersedes any and all prior agreements between LOUD and Customer related to the subject matter hereof. No amendment, modification or waiver of any of the provisions of this Product Warranty will be valid unless set forth in a written instrument signed by the party to be bound thereby.

Open Source Code

Loud Audio, LLC does not make any representation or warranty with respect to any Open Source Software or Free Software that may be included as part of its firmware or downloadable software. Loud Audio, LLC disclaims all liability to customers or any third-party related to any such software that may be included in its products.



19820 North Creek Parkway #201, Bothell, WA 98011 • USA
Phone: 425.487.4333 • Toll-free: 800.898.3211
Fax: 425.487.4337 • www.mackie.com

 **MACKIE.**
SOUND LIKE YOU MEAN IT[®]